

CETA 100


Temperature difference control

Connections




Control system CETA

Device connection

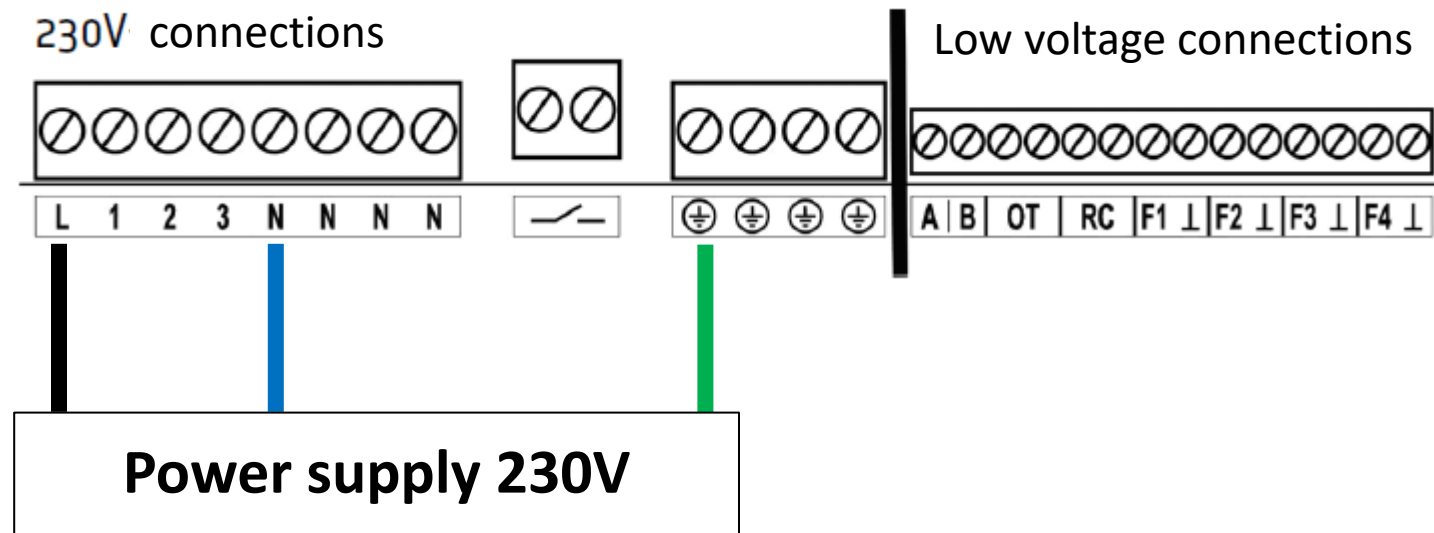

Control system CETA


Device connection

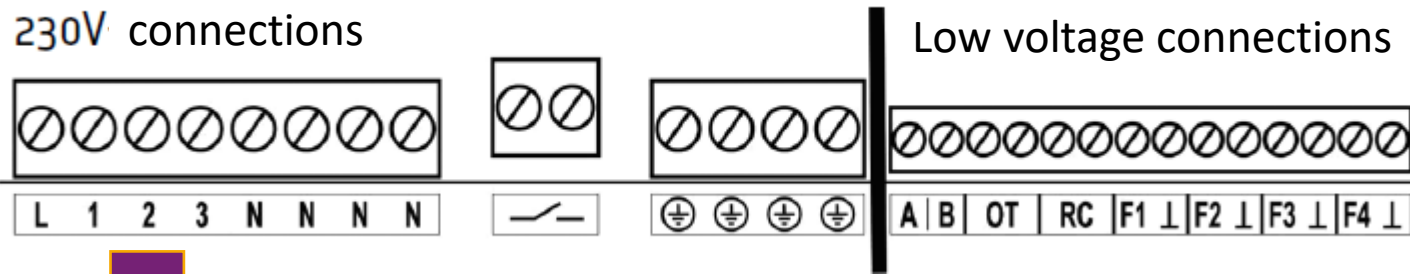


1/2/3
L1 (Switching output)

Control system CETA

Device connection

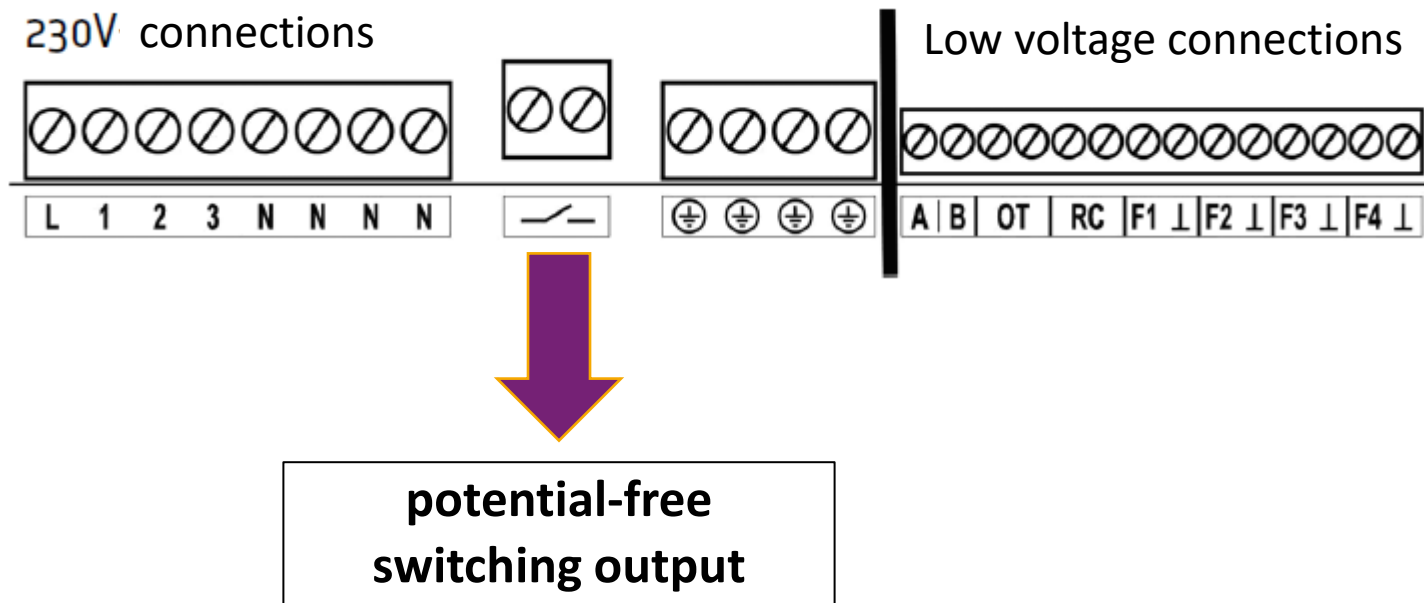

Device connection

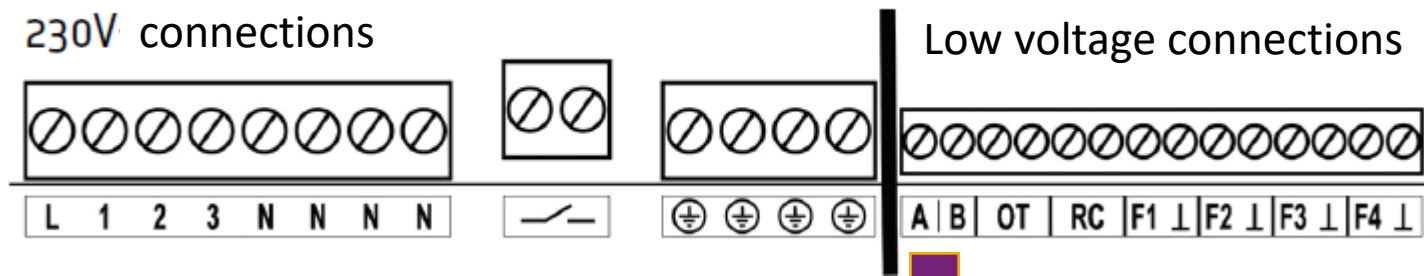


The following communication takes place via the A/B bus:

- Outdoor sensor value
- Burner blocking
- Start protection
- Buffer priority

**CETA-Bus A/B
for connection
with further CETA devices
(not CETA RC)**

Control system CETA


Device connection

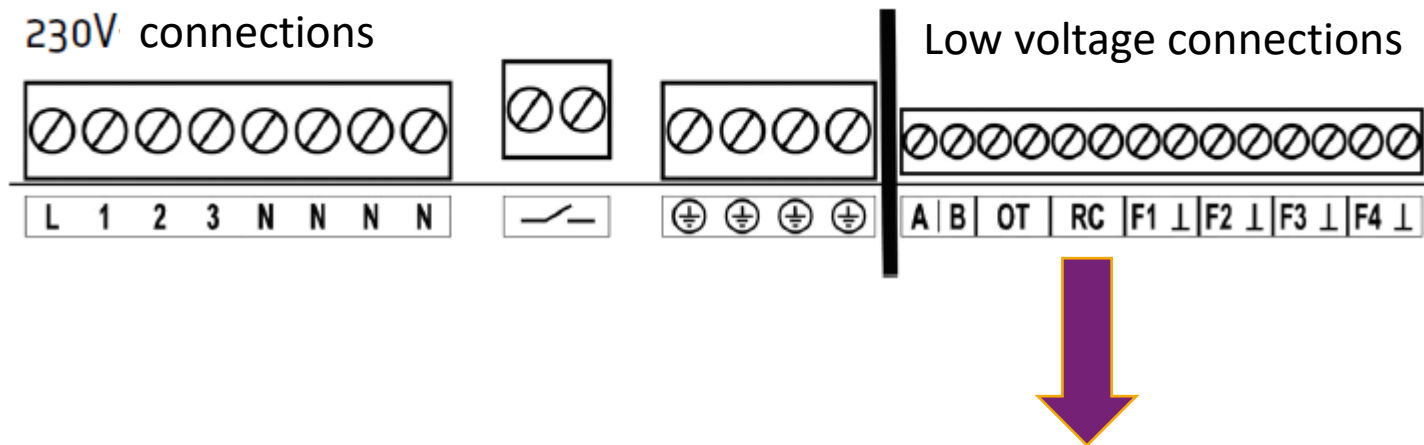

A remote control CETA-RC is connected to the RC terminals.

Control system CETA


Device connection

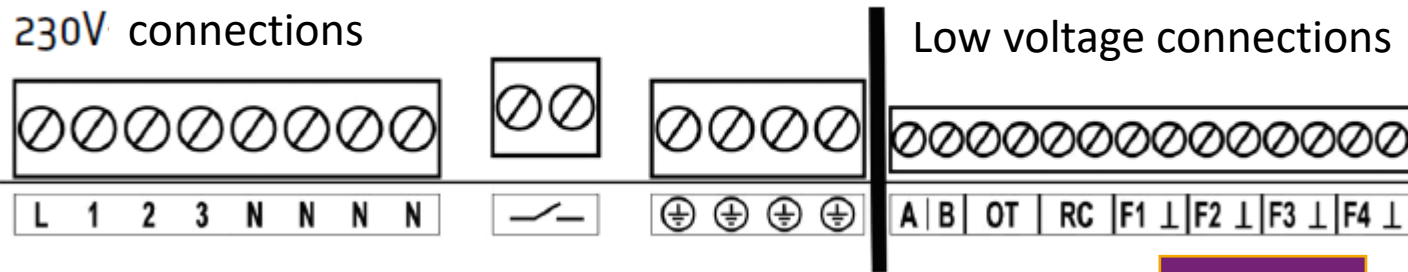

Sensor connection F1/F2/F3/F4

Control system CETA

Device connection

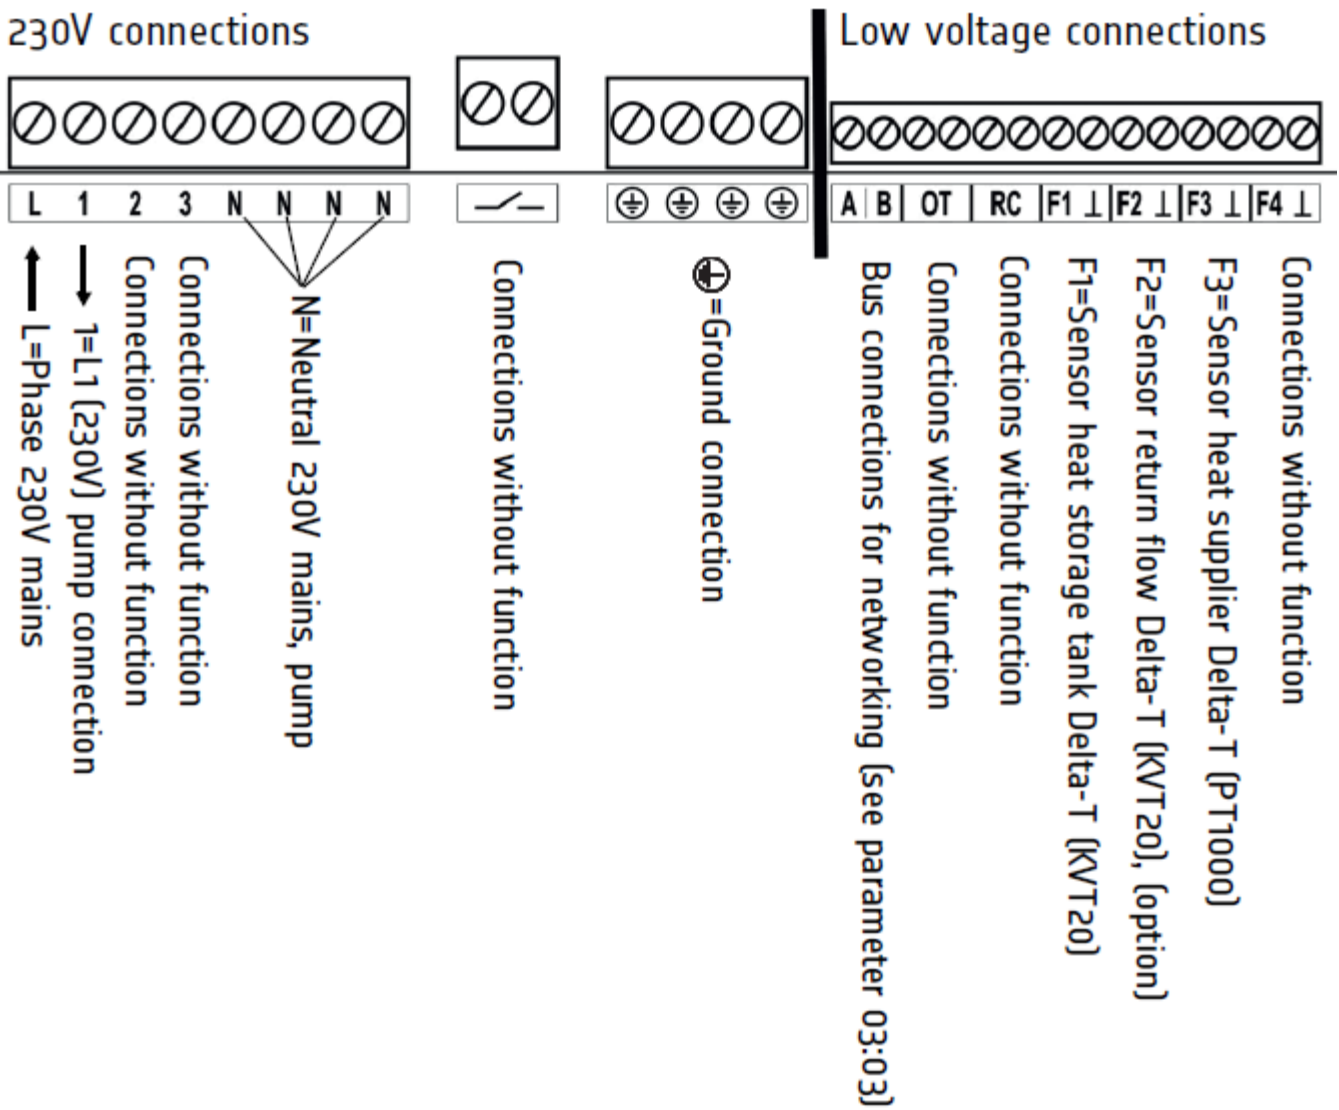

Do you have any questions?

You can reach our support by e-mail to
support@ebv-gmbh.de

