

CETA 104

Heating circuit control



Control system CETA

CETA 104


Heating controller for unmixed heating circuit with boiler control




CETA RC
Remoute control
without room function



 CETA 104
Heating control for single-stage or
modulating heat generators
(OpenTherm), direct heating circuit and
hot water



KVT 20/2/6
Boiler sensor

 

KVT 20/2/6
Sensor hot water storage



AF 200
Outside sensor

Control system CETA

CETA 104

Heating controller for unmixed heating circuit with boiler control




1x KVT 20/2/6 (Sensor F1)



1x KVT 20/2/6 (Sensor F2)



1x AF200 (Sensor F4)

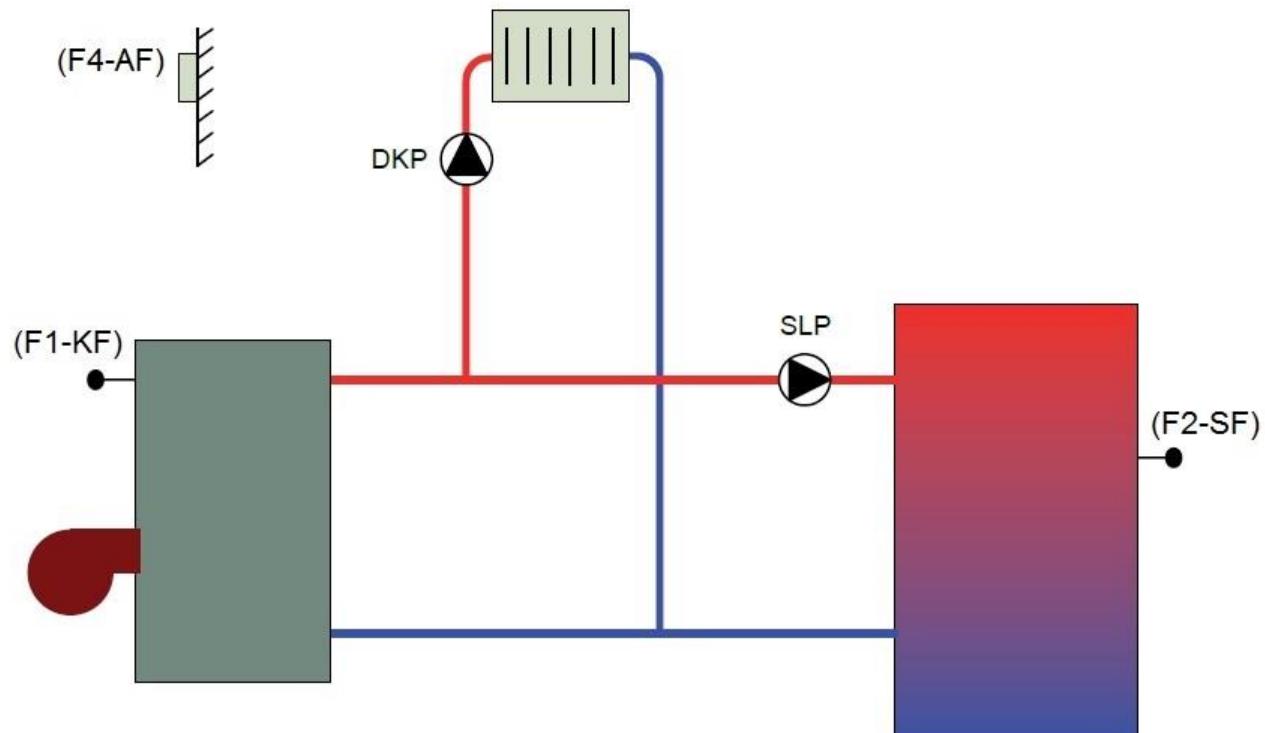

Heat generator control via relay (potential-free)


Control system CETA

CETA 104

Heating controller for unmixed heating circuit with boiler control



 
1x KVT 20/2/6 (Sensor F1)



1x KVT 20/2/6 (Sensor F2)



1x AF200 (Sensor F4)

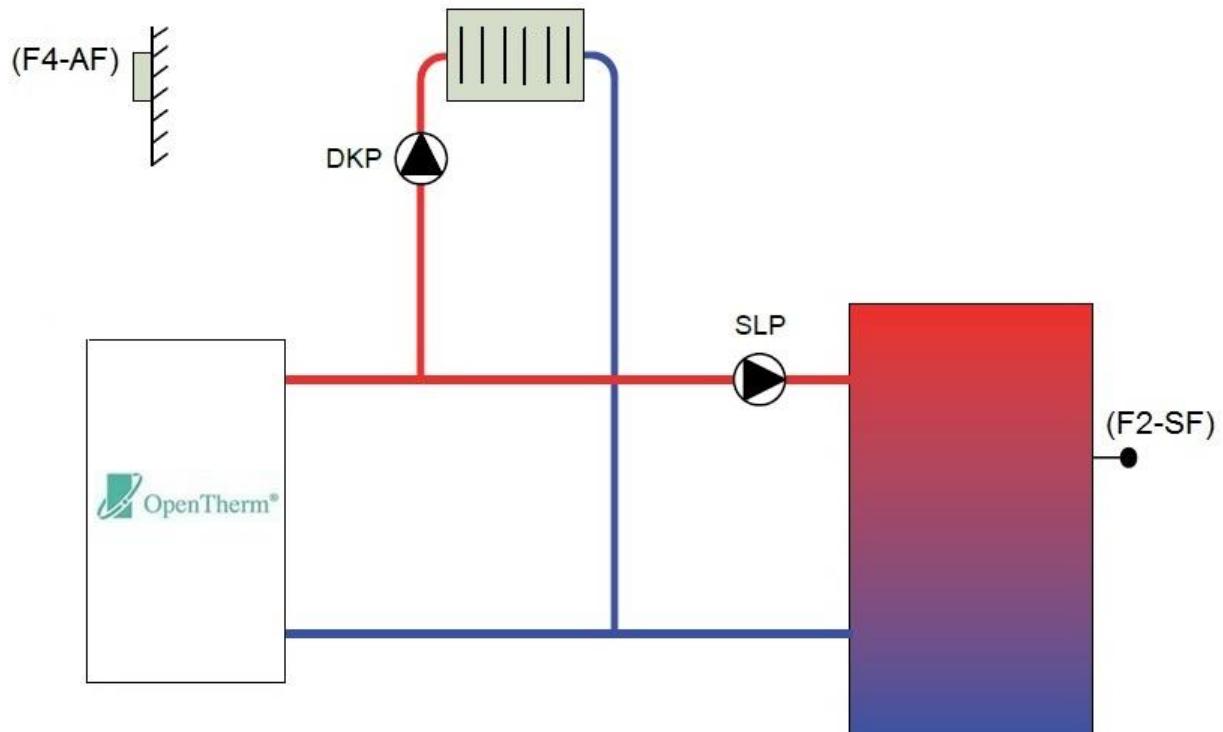


Heat generator control via OT bus

Control system CETA

CETA 104


Basic Display

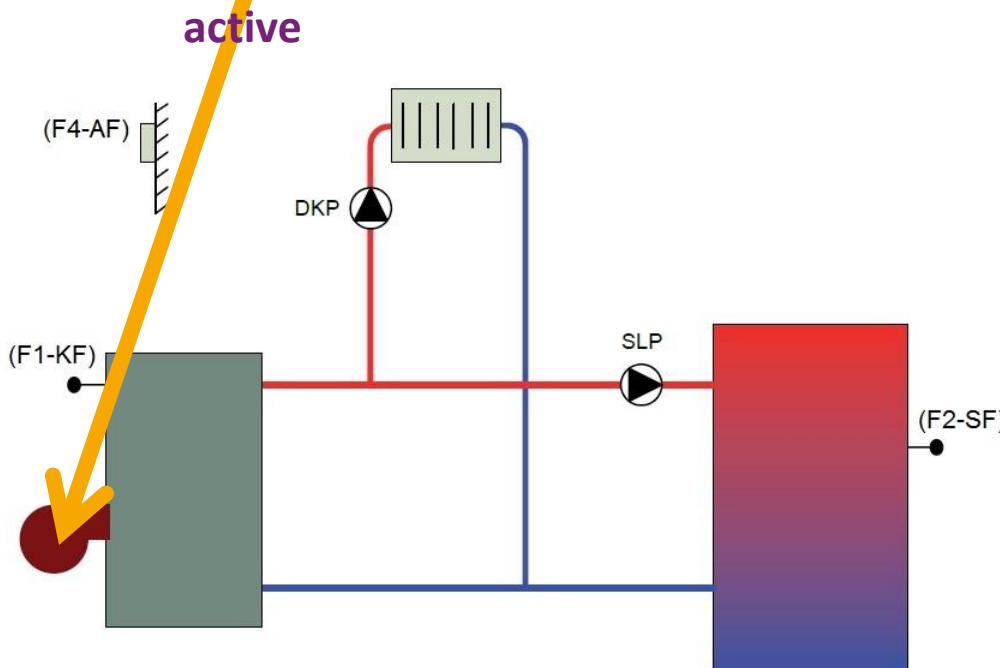

Control system CETA

CETA 104


Basic Display

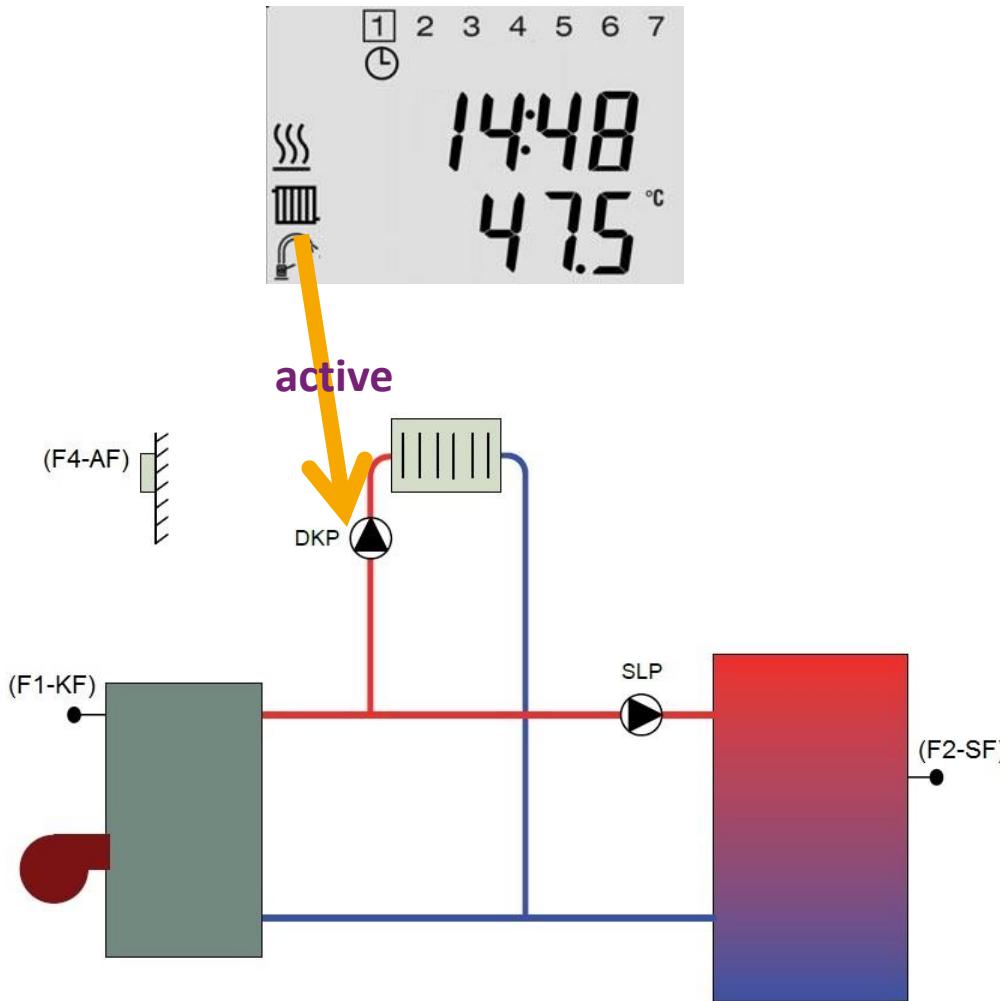

Control system CETA

CETA 104


Basic Display

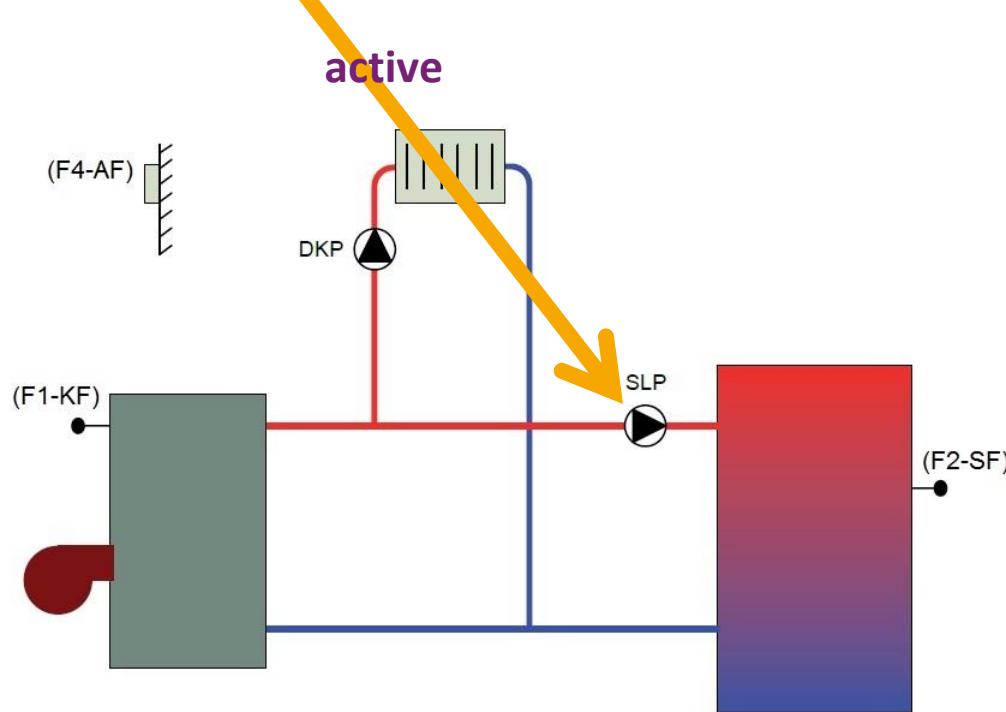

Control system CETA

CETA 104



Basic Display

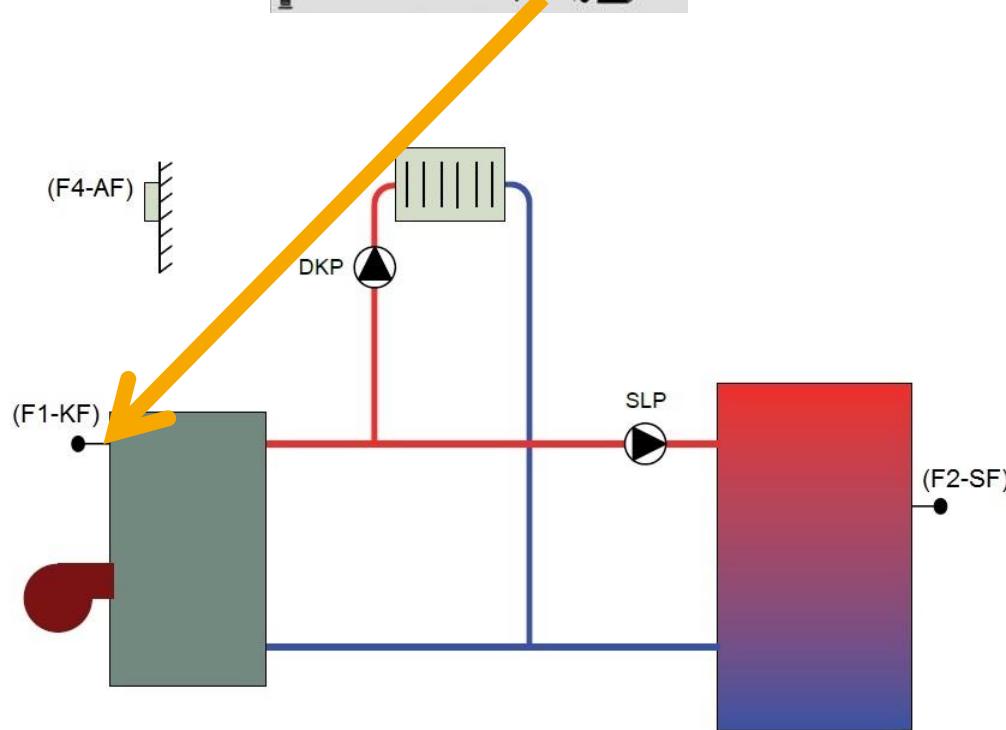

Control system CETA

CETA 104

Basic Display

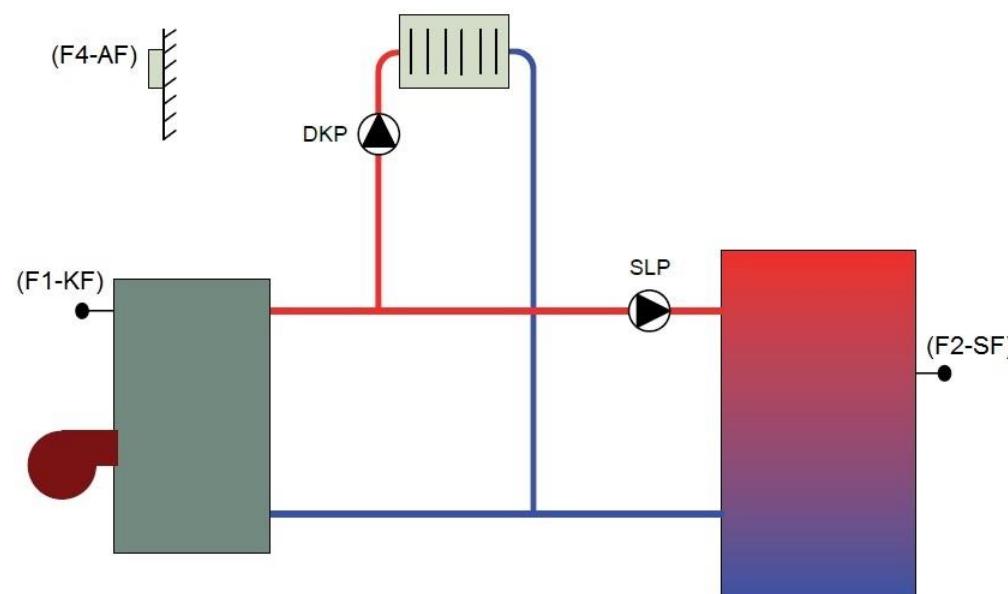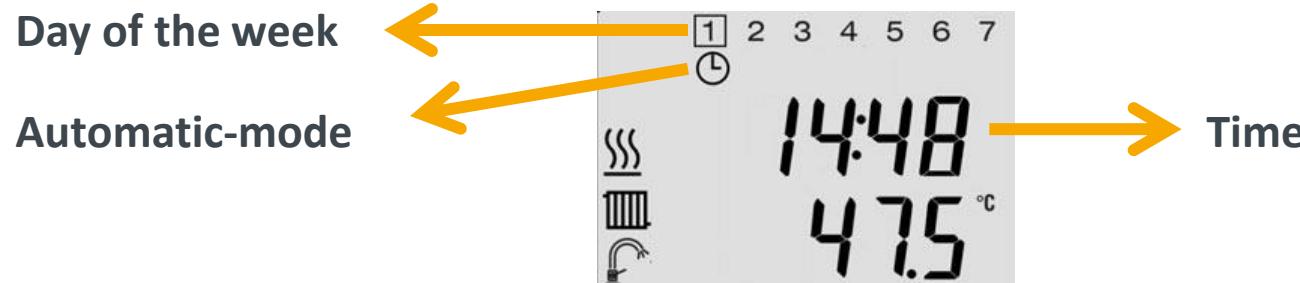


Control system CETA

CETA 104

Basic Display



- The time is buffered for max. 2h in case of power failure.
- There is no time synchronization with other CETA 106 in the system.

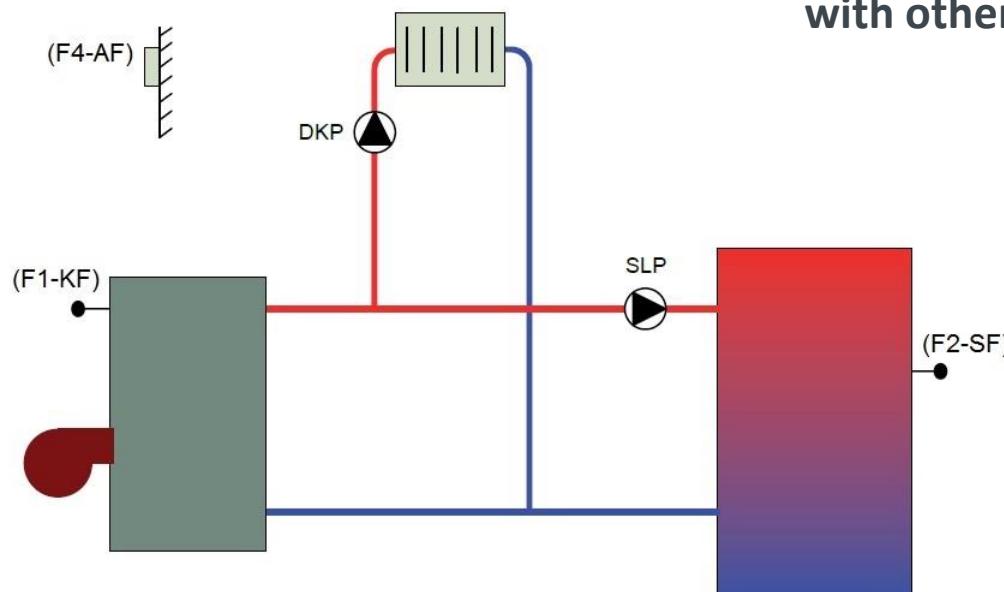

Control system CETA

CETA 104

Basic Display



Further operating displays



Heating mode heating circuit
(Operating mode AUTOMATIC or HEATING)



Reduced mode heating circuit
(Operating mode AUTOMATIC or RED. HEATING)




Standby heating circuit



Summer switch-off heating circuit




Frost protection heating circuit

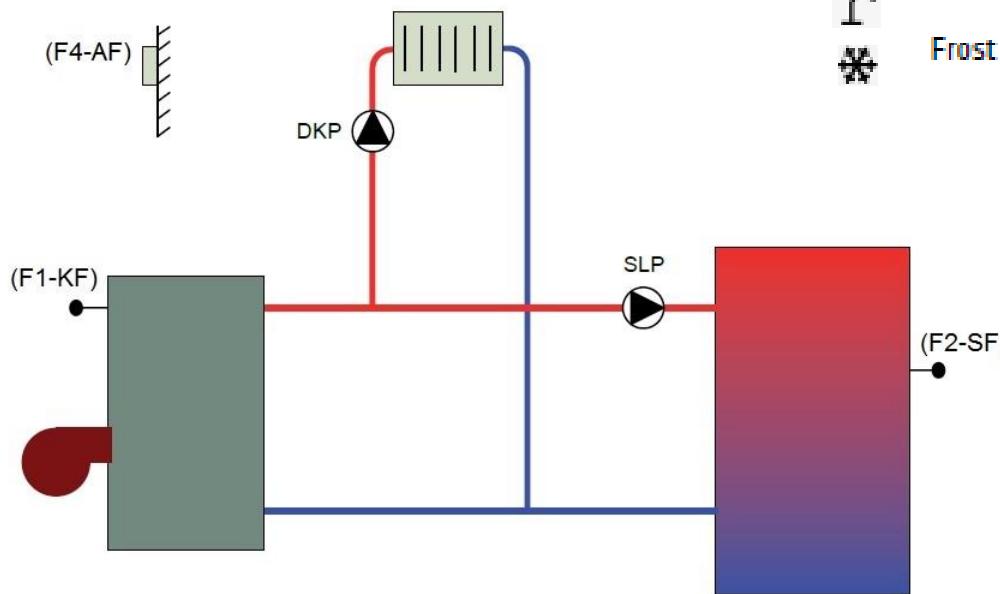

Control system CETA

CETA 104


Connection Example 1

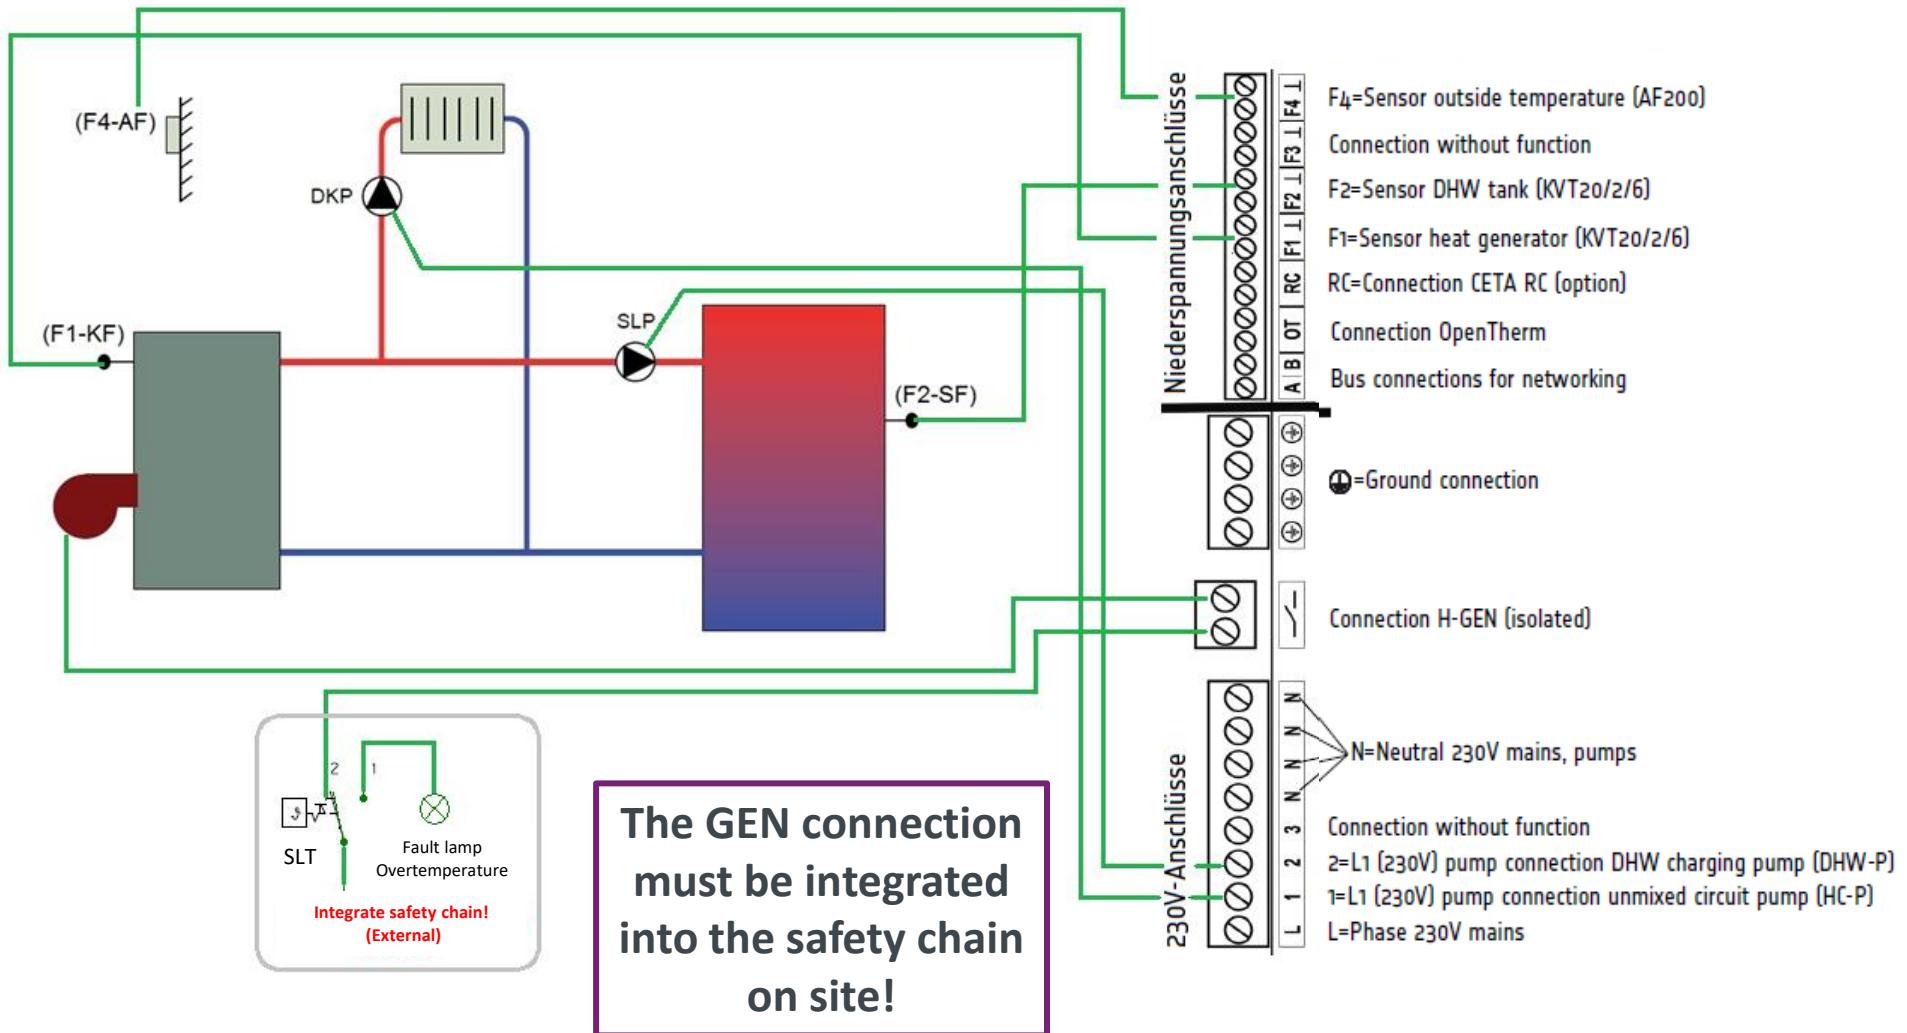

Control system CETA

CETA 104


Connection Example 2

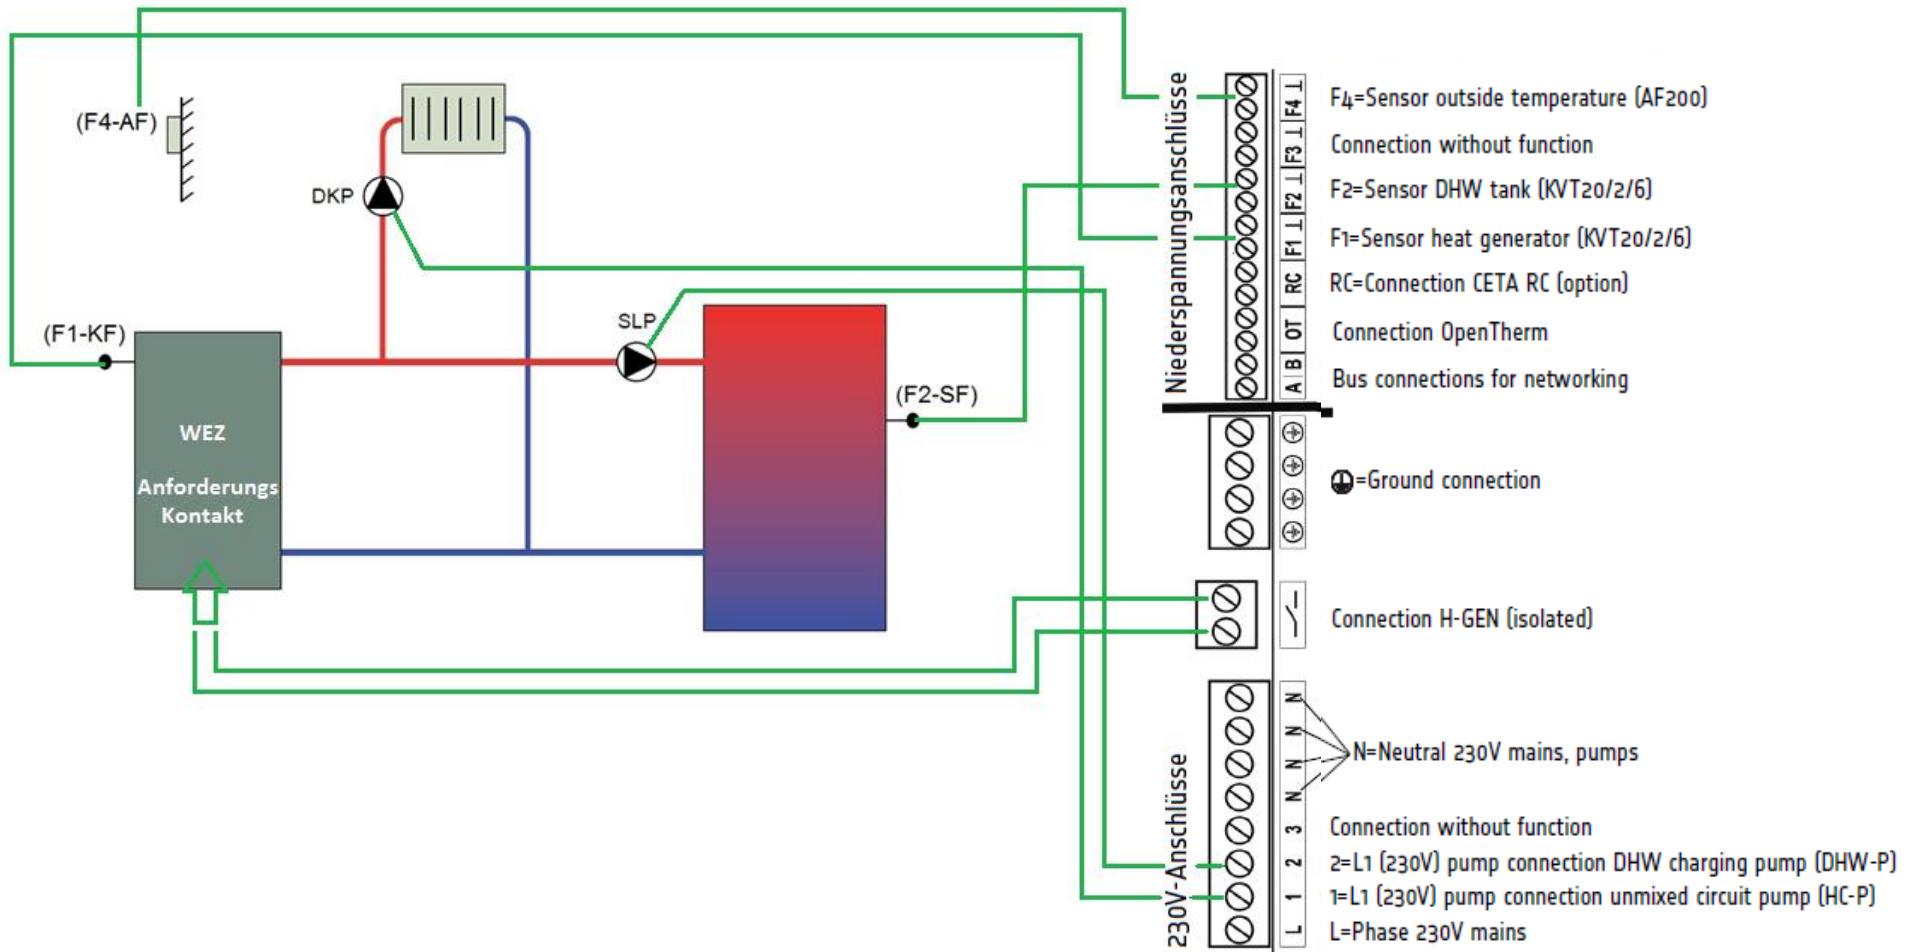

Control system CETA

CETA 104

Connection Example 3

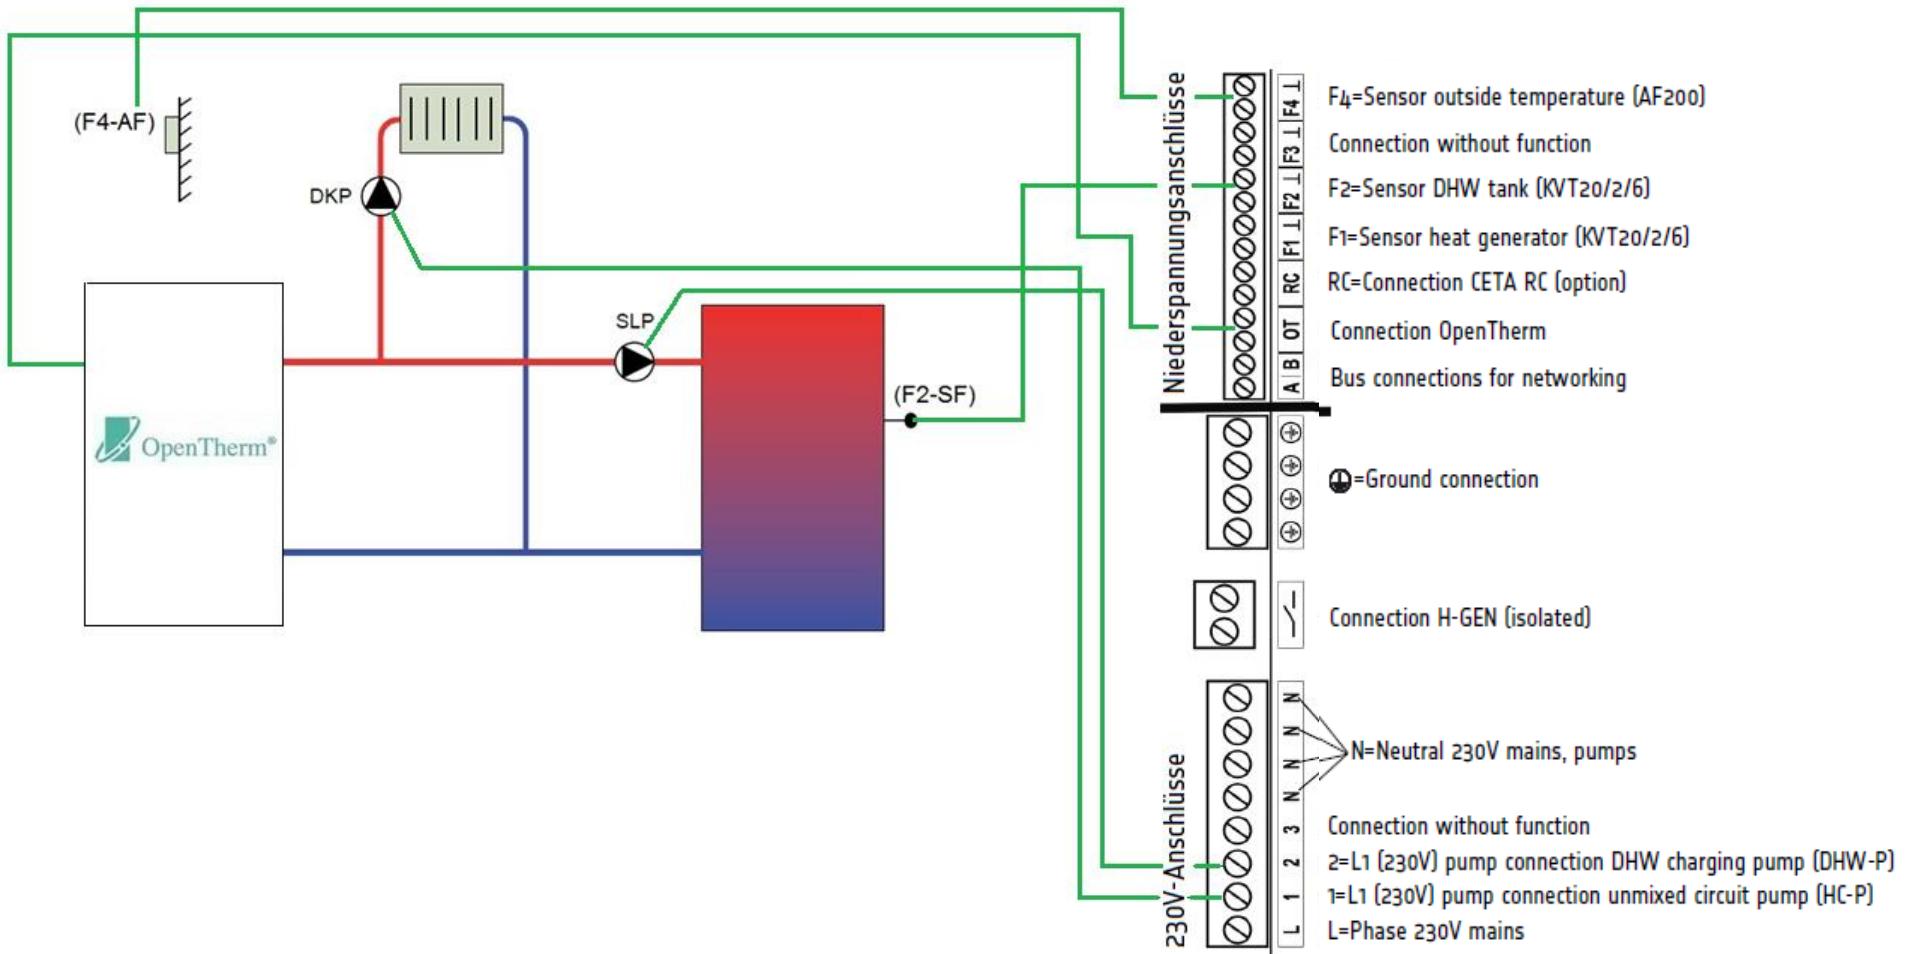

Do you have any questions?

You can reach our support by e-mail to
support@ebv-gmbh.de

