



Operating of your heating system



The heatapp! App

The heatapp! app is used to operate heating systems.

- Simply
- Intuitive
- From everywhere

You use a heatapp! base, a THETA controller* or a heatcon! control system?
Then you can use the heatapp! app to operate it.
How to do this, you will learn on the next pages.

* Only in conjunction with a heatapp! base T2B



After installation

The installer has finished installing your system and has given you the access data for your heatapp! system.

EBV
elektronik

heat
app!

Login data

Note the login data to your *heatapp!* system here:

User level	User name	Password
Expert		
Owner		

When connecting to the single room control *heatapp!* please record the password of the *heatapp!* gateway here:

heatapp! gateway	
Password:	

Note
Create an establishment protocol and a data backup after completing the installation.


EbV Elektronikbau- und Vertriebs- GmbH Heisterweg 8-12 57299 Burbach	Tel: +49 2736 44305-0 Fax: +49 2736 8266	E-Mail: info@ebv-gmbh.de Internet: www.ebv-gmbh.de
---	---	---




Installation of the app

- Install the heatapp! app on your smartphone and/or tablet.
- The app is always operated by touching the respective icons.
- Open the IOS App Store or the Google Play Store and tap the heatapp! icon.

Apple IOS App Store

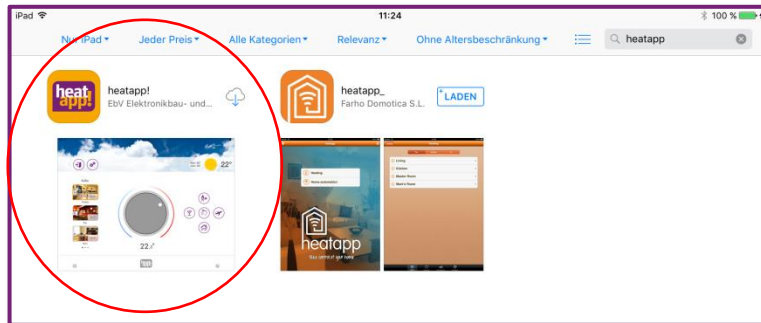


Android Google Play Store

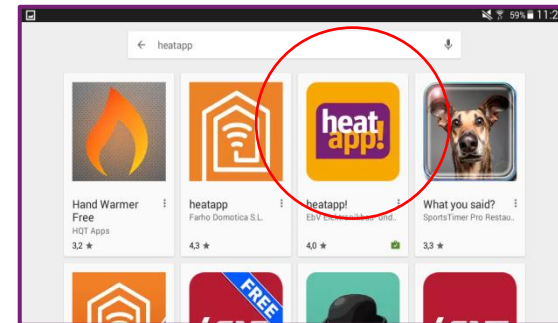



Installation of the app


- Confirm all rights queries during installation.
- The app is already installed. ✓

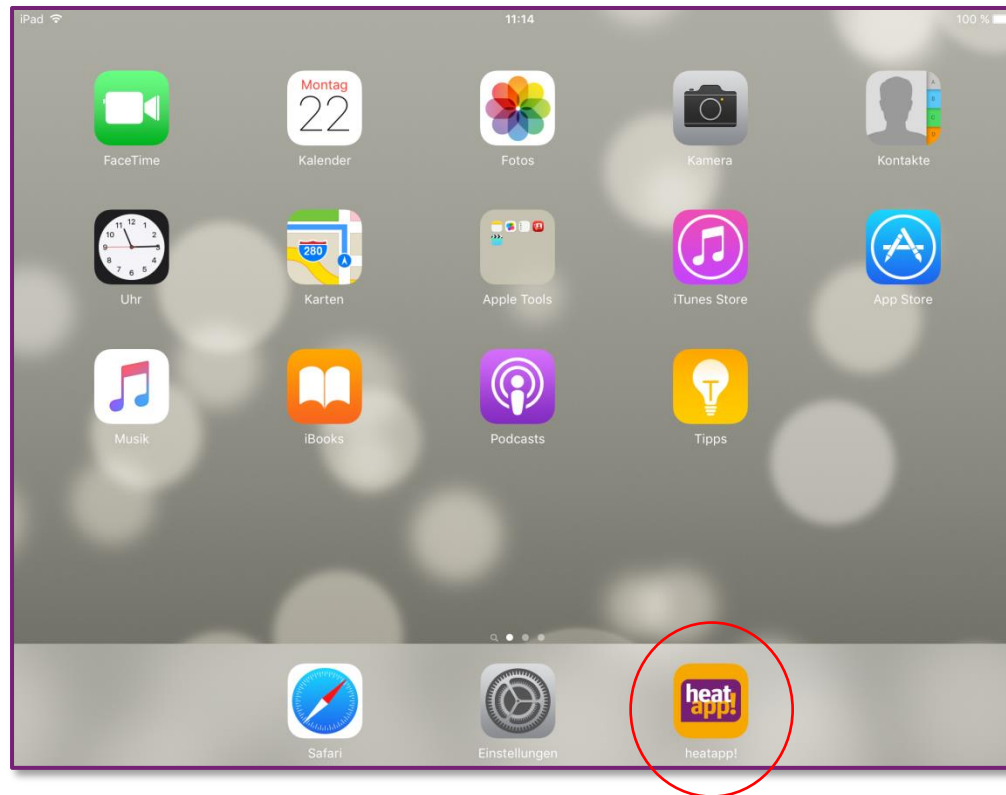



Login to your heatapp! system


- Open the heatapp! app and accept the terms of use.
- On the start screen you will see the name of your heatapp! system.
- Directly under the name you can see whether the heating system is located in the same network "local network" or whether the connection to the heating system is established via "Internet" via heatapp! connect.

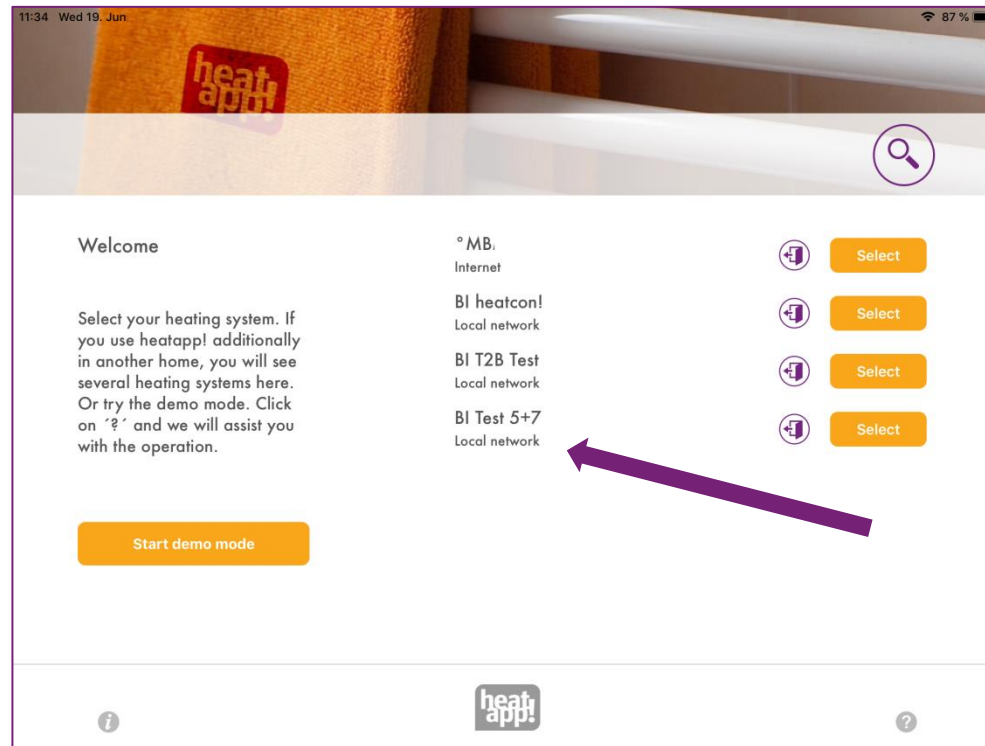



Login

- Tap on the "Login" button.
- The "Login" dialog box appears. Enter your user name (2) and password (3).
- Confirm the entry by tapping on the "Login" button (4). Click the (1) "Back" button to return to the start menu without logging in.

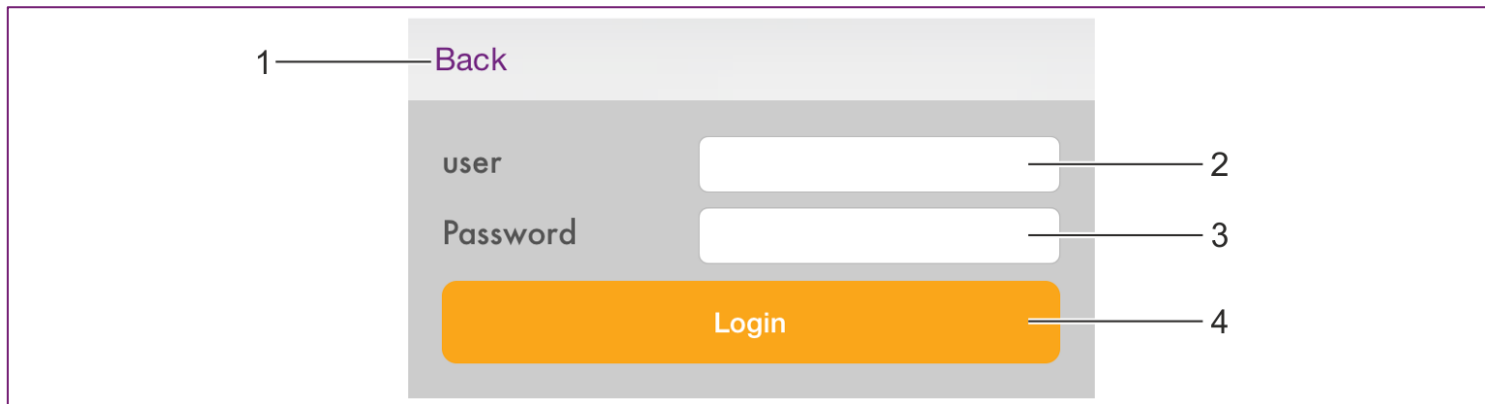


After successful login, the "Homescreen" is displayed.

Exit system,
return to start
screen.

Settings

Rotary wheel for quick adjustment of the desired
temperature. This temperature is valid until the next
switching time.

Weather data

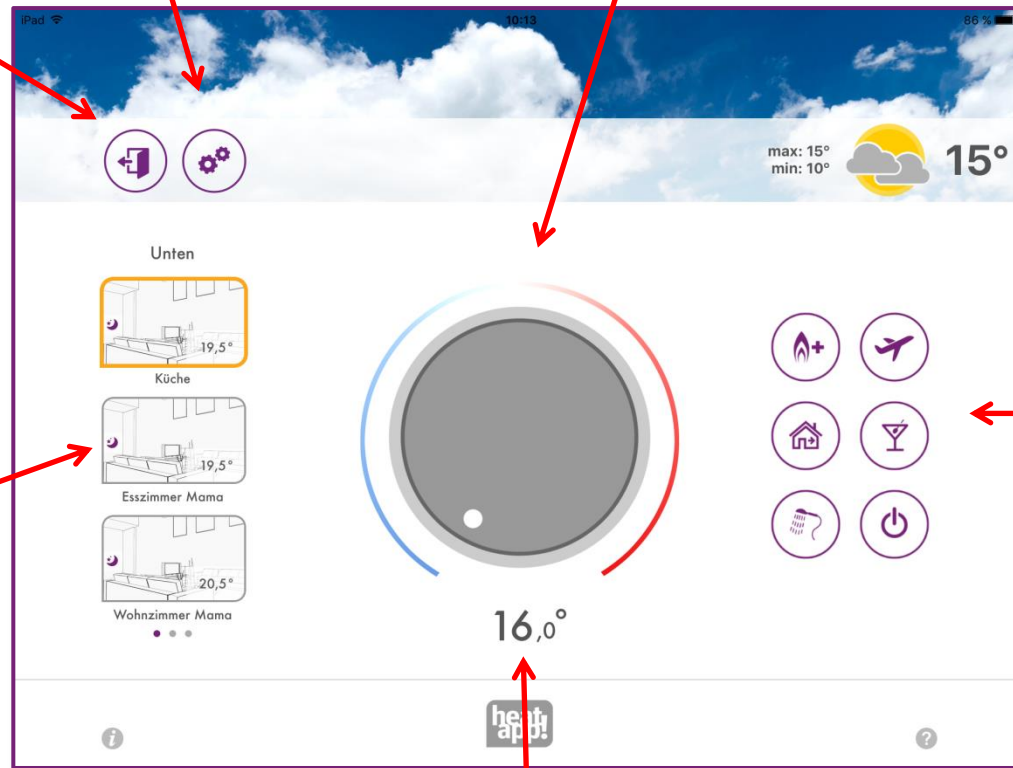

Rooms with display
of actual
temperature and
status symbol

Scene -
symbole

temperature that is currently desired




Homescreen

- You will always see the Homescreen when you log in to your heatapp! system.
- If you touch a room, an orange frame appears.
- You will then see the temperature that is currently desired for this room below the rotary wheel.
- In the room picture you see the status symbol and the current temperature.

The rotary wheel

Use the rotary wheel to set the temperature for the currently selected room by touching and turning the wheel.

The magic wand indicates that a changed desired temperature has been set in this room.

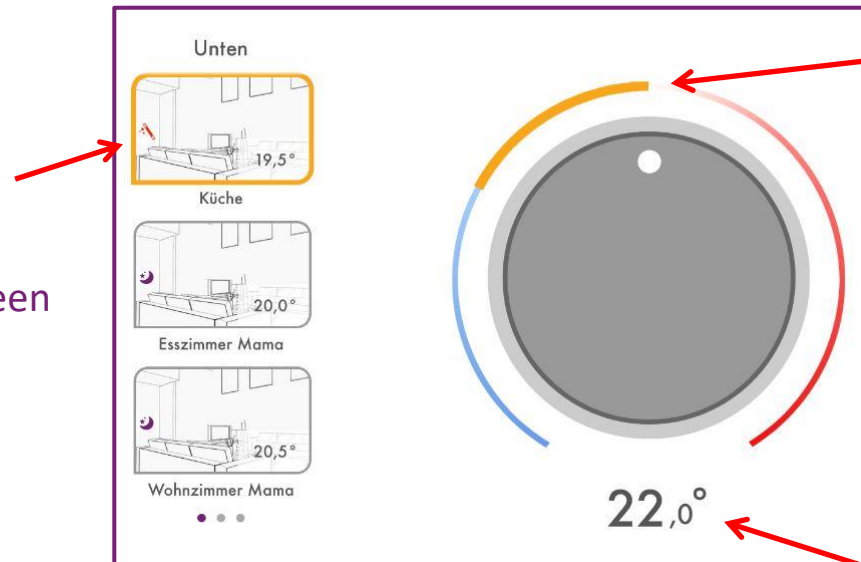

The difference between the desired temperature and the actual temperature is displayed via the orange atrium.

Wunschtemperatur


The desired temperature set via the rotary wheel is valid until the next switching time, but at least for three hours.




„Settings“ - menu



- The "Settings" operating level is used to access extended functions.
- The menu items "My profile", "Design", "Switching times" and "Live View" are available for all users.
- Experts and owners also have the other menu items "Rooms", "Users", "Devices", "Scenes", "System" and "Gateway" available.

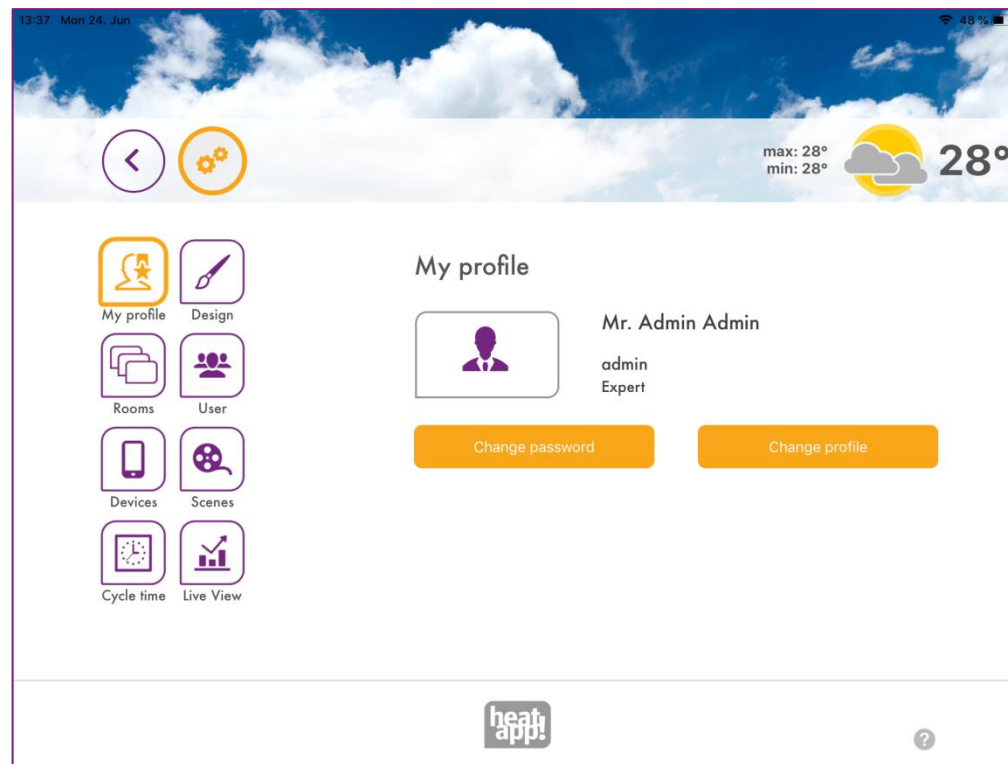


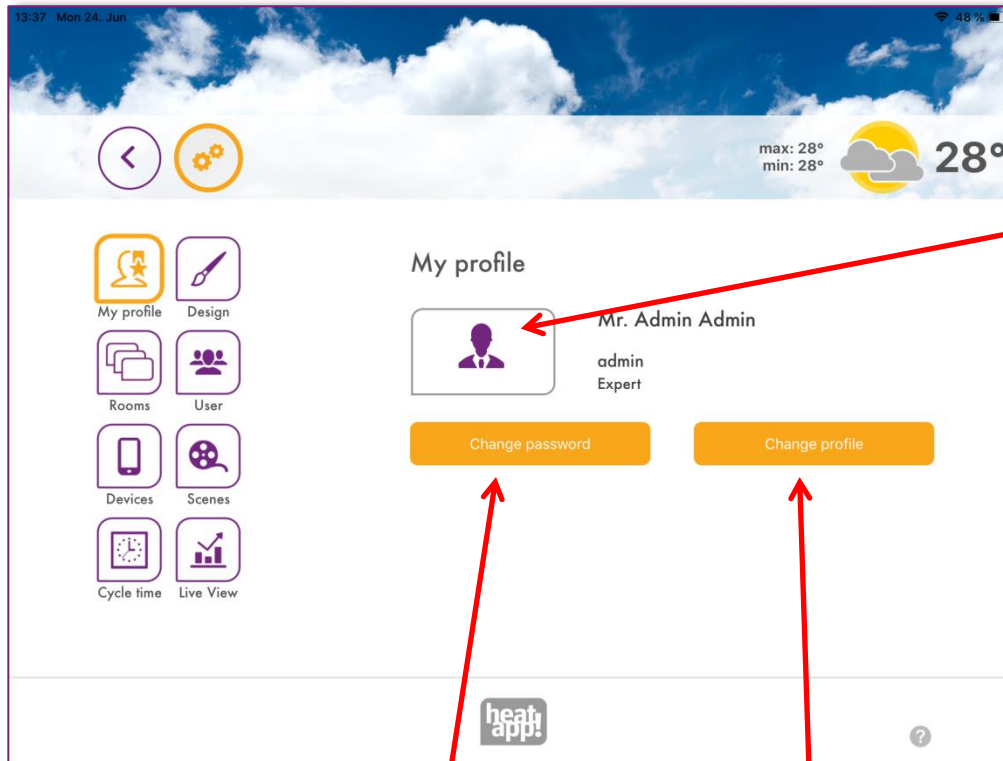

To change the profile picture, touch the placeholder and select the source.

Password change

Change user data

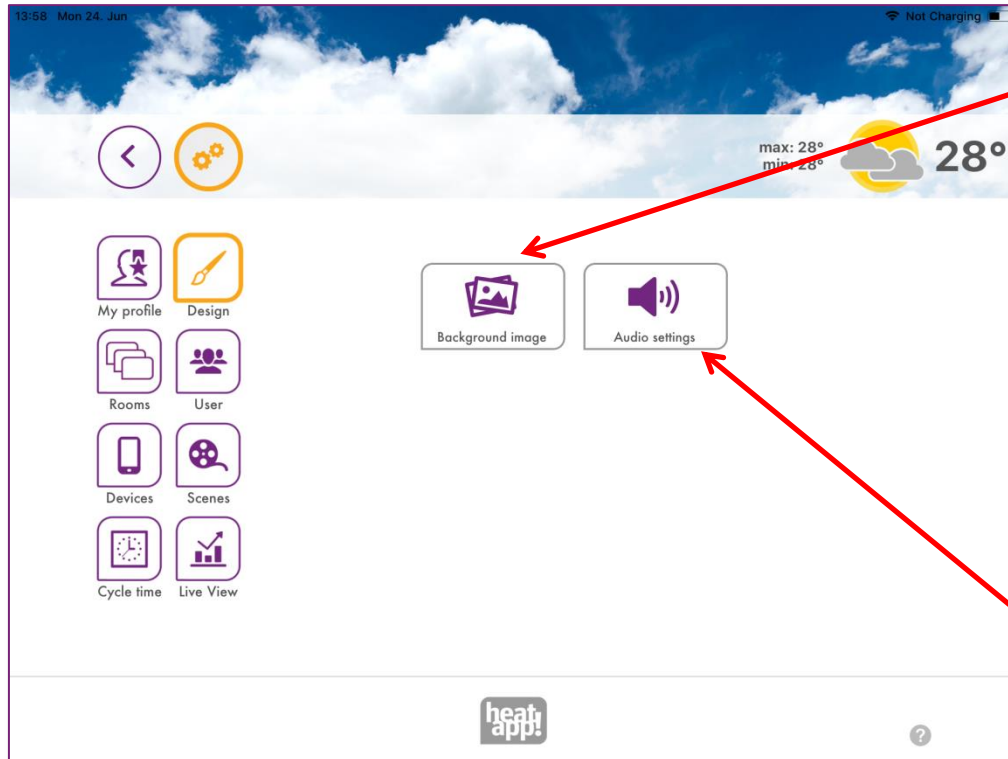

Change the background image of the app by taking a photo with the camera, selecting it from the gallery or using a heatapp! standard image.

Turn the rotary wheel sound on or off.


Note: The sound will only sound if your tablet or smartphone is not muted.



Rooms



Change room settings

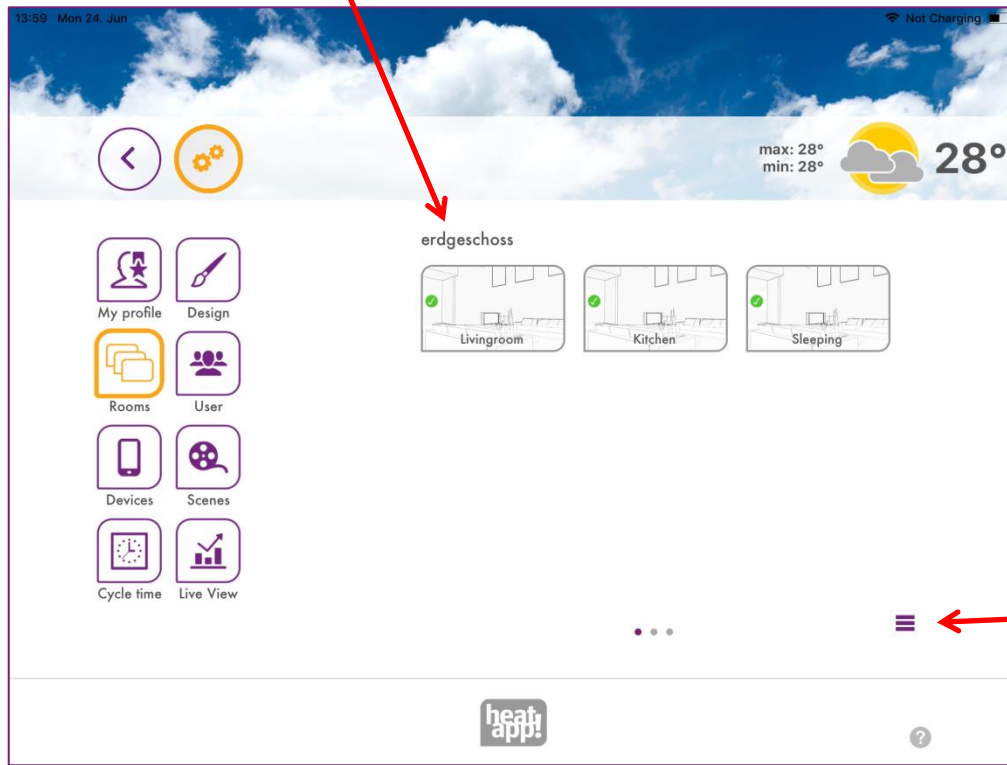


Create and edit room groups

Room settings



Change the room image of the app by taking a photo with the camera, selecting it from the gallery or using a heatapp! standard image.

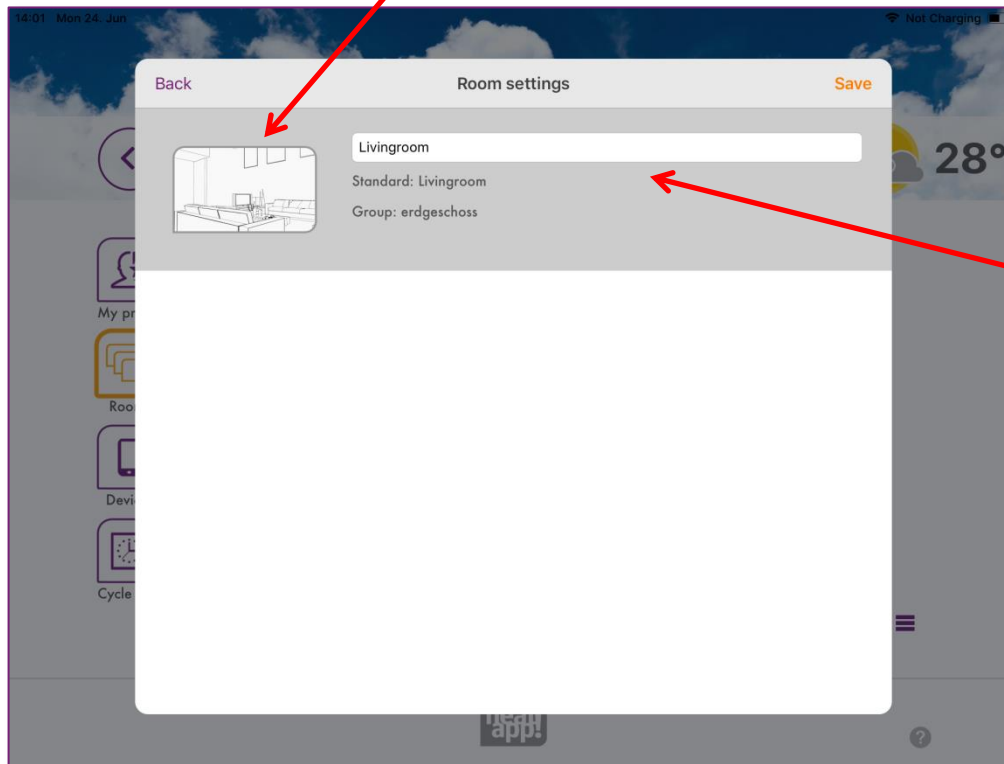


Assign a personal room name.



A new room group can be created by tapping the symbol.

The name of the room group can be changed by tapping the icon.

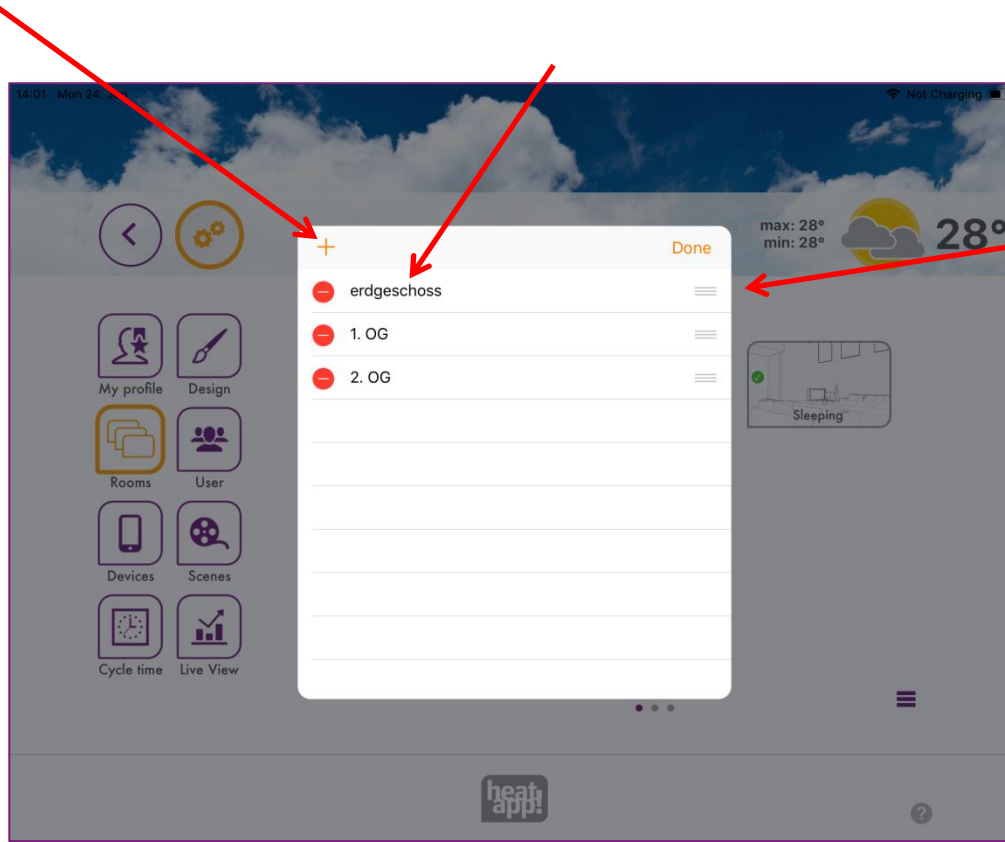

The order of the room groups can be changed by tapping and wiping the symbol.


The rooms are moved into the respective room groups by long tapping and wiping.



User



Create user

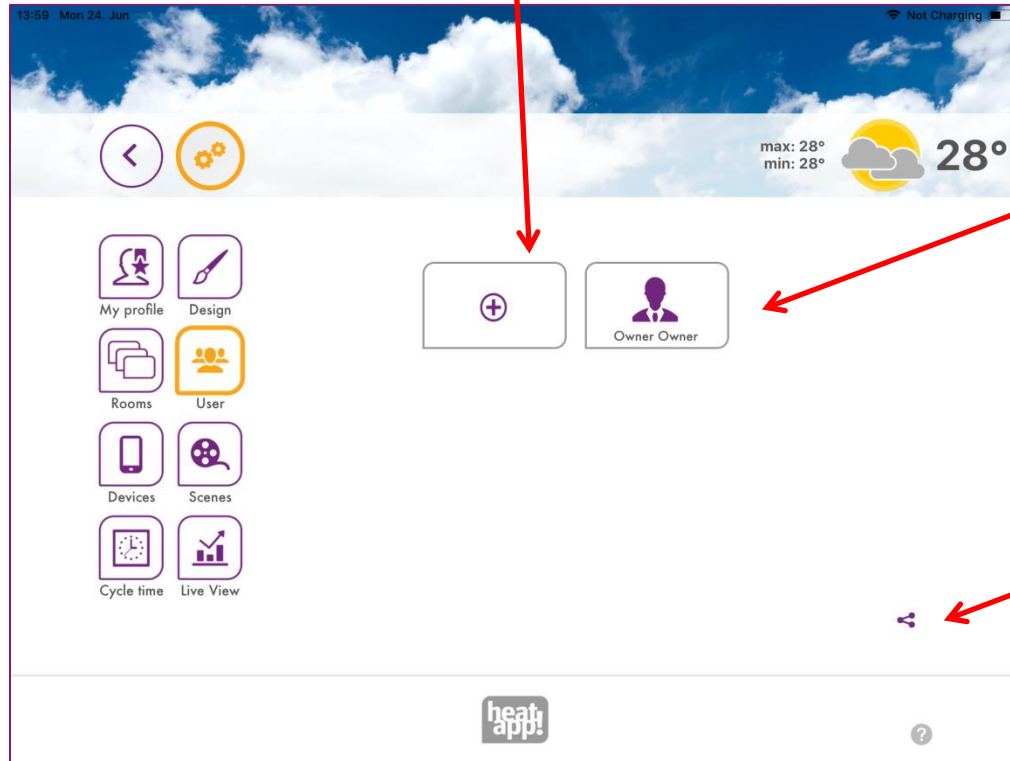

Edit user

Invitation to heatapp!
system



Enter your personal data

Add profile image

Select user role:

- Expert
- Owner
- User

Assign rooms that can be controlled (only for the user role "User").

The Expert and Owner user roles have cross-room rights and can control all rooms.



Change personal data


Change password

Change or add profile picture

Delete user


Change user role

Change room rights
(only possible for users, experts and owners have access rights for all rooms)

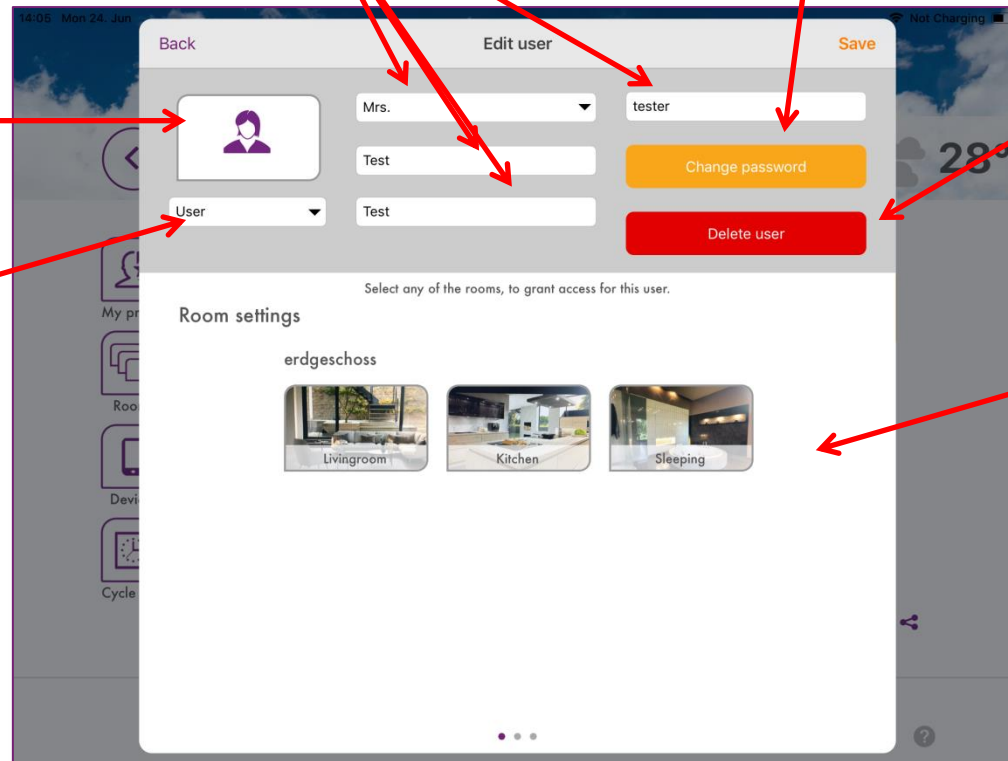




Devices

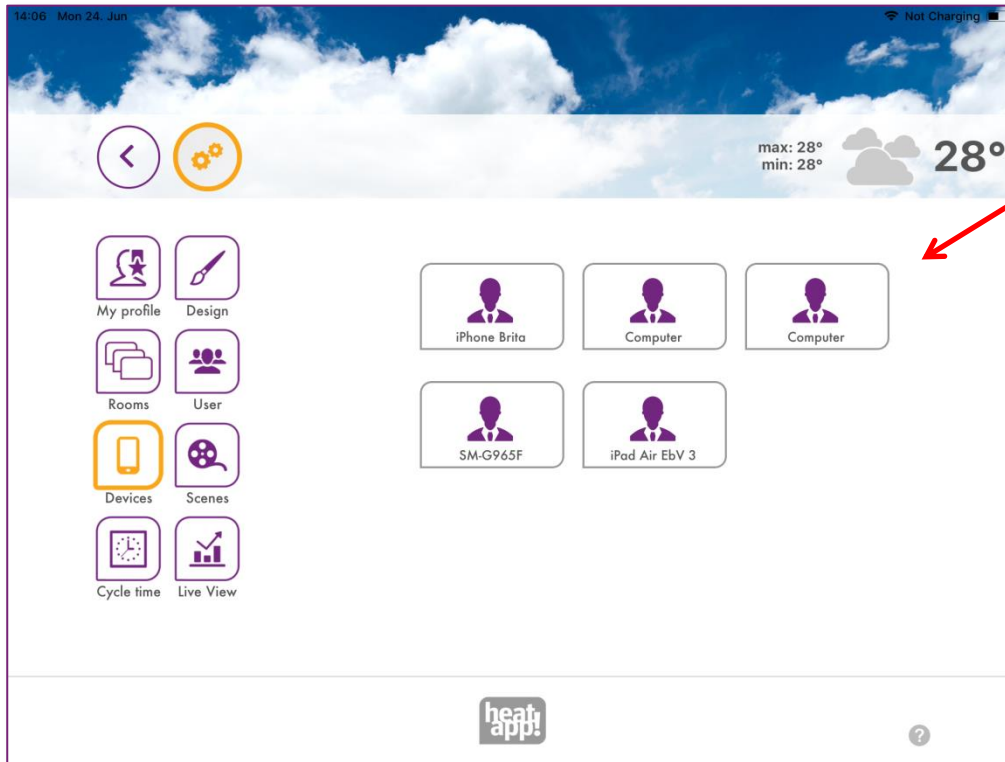

Display of all operating devices that have logged on to the system. Tap on one of the devices to display which user is using the device.

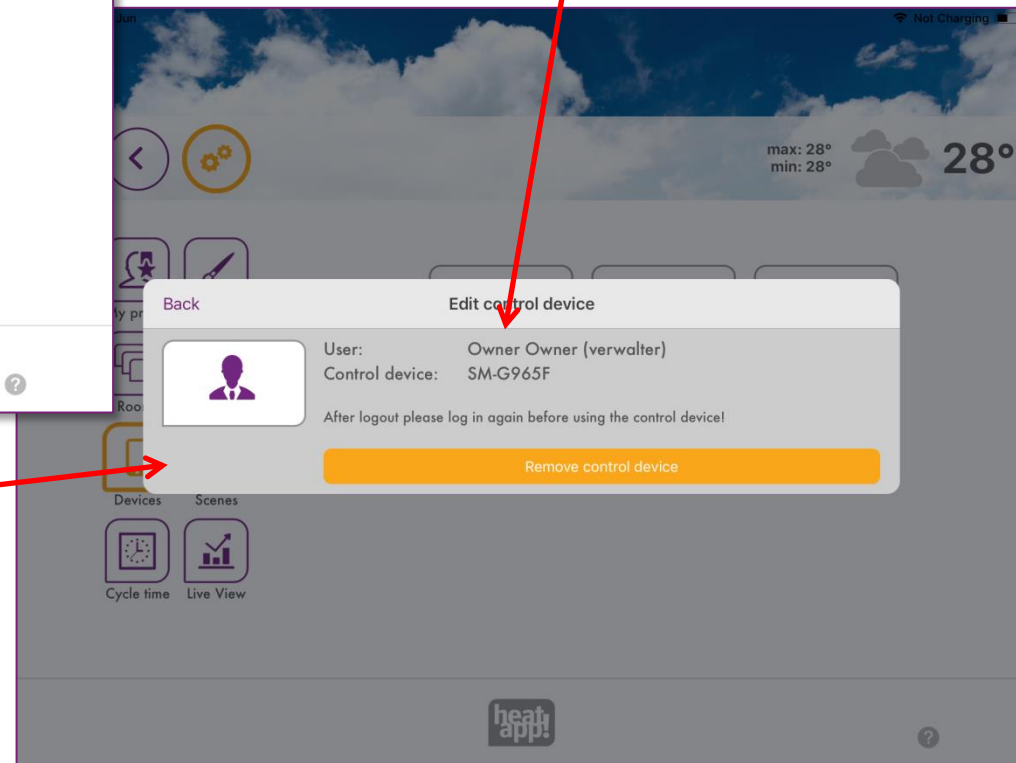


This button is used, for example, if a tablet or smartphone has been lost.




In the "Scenes" area, the rooms for which the scenes are to apply are assigned to the scenes.

- Tap on a scene to open the room assignment.
- Tap on the rooms that are to be assigned to the respective scene. By wiping horizontally, the room groups change. Selected rooms are highlighted by an orange border.
- Tap on "Save" to accept the settings for the room. Tap on "Back" to discard the changes.

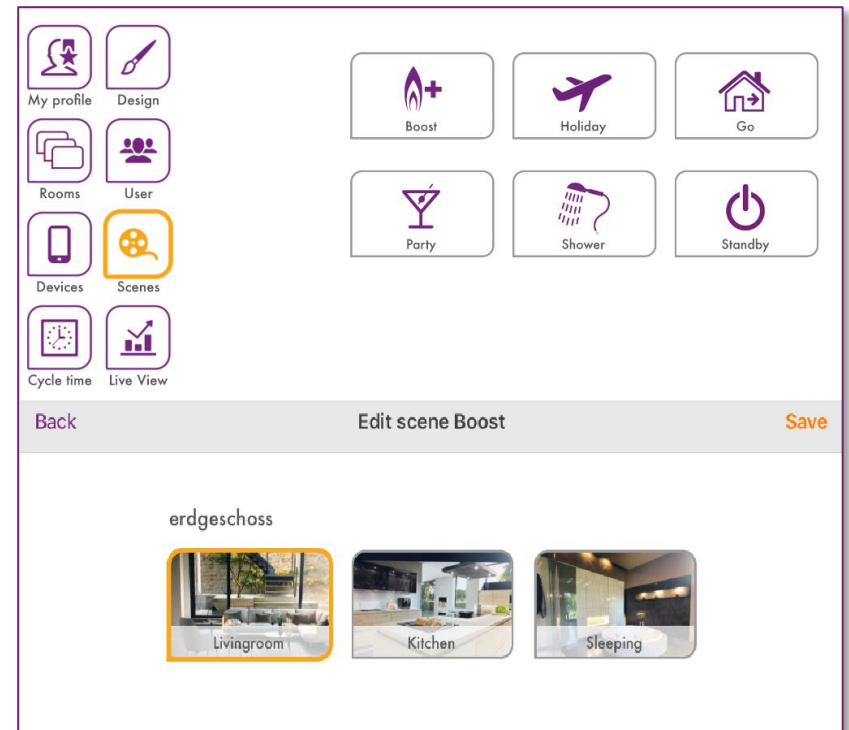



Cycle times

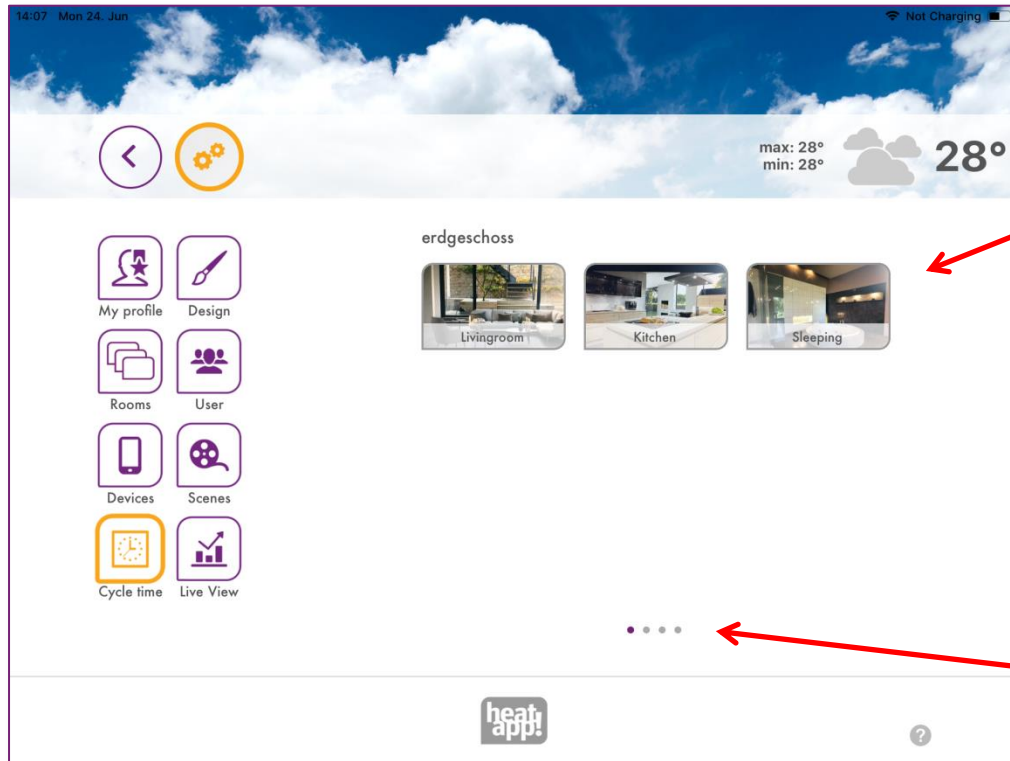

Display of the rooms in which the cycle times can be edited. Depending on the user, different rooms are displayed here. Tap on the room to edit the cycle times.

Wipe sideways to edit the switching times for other room groups and/or hot domestic water.



Edit cycle times



Copy cycle time by room

Comfort temperature


Economy temperature

Set-back temperature

Cycle time economy

Cycle time comfort

Copy cycle time by day

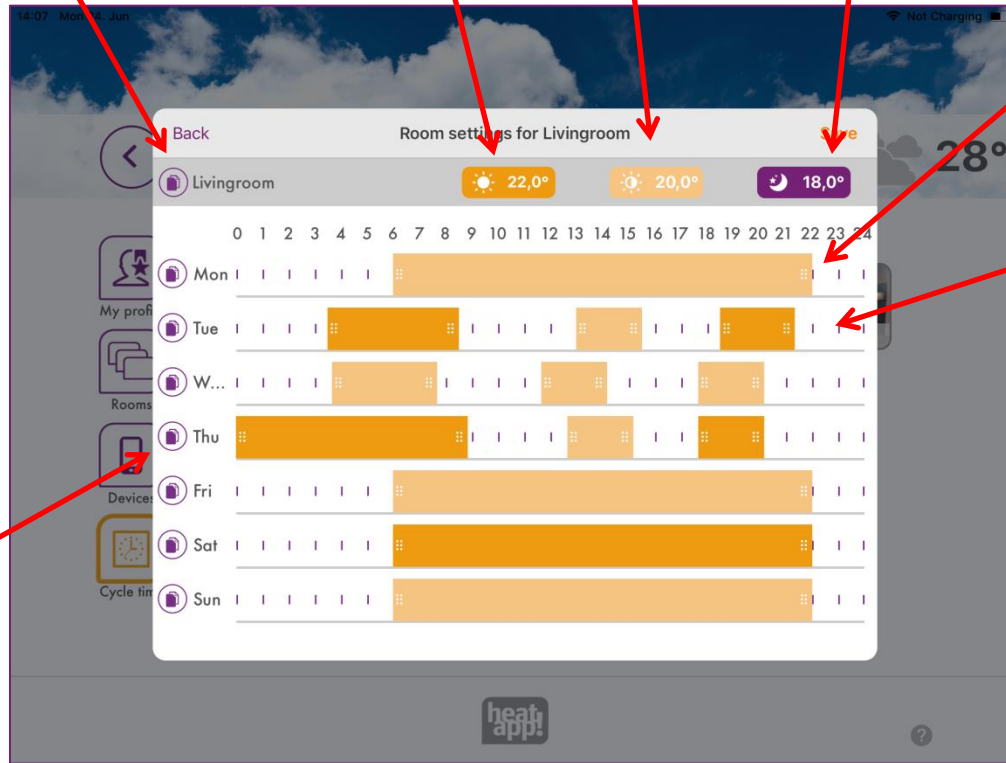

Factory settings

Cycle times:
 Every day: 06.00 – 22.00
 Anti-freeze temperature: 16 °C
 Set-back temperature: 18 °C
 Economy temperature: 20 °C
 Comfort temperature: 21 °C



Edit cycle times



The cycle times serve as a repetitive basic program. Up to 3 cycle times can be created per day.

- To insert a cycle time, tap into a free area of the time scale of the desired day and open a new cycle time.
- To move a cycle time, tap in the middle of the cycle time and drag the cycle time to the desired position.
- To change a cycle time, drag the ends of the cycle time to the desired time.
- To change between comfort and economy temperature, press a cycle time longer.
- To delete a cycle time, pull the ends of the cycle time together.
- To edit the comfort, economy and set-back temperature, tap the respective button and move the temperature to the desired value.

Note on the temperature setting ranges :

Anti-freeze temperature:	adjustable from 4.0°C to set-back temperature (only in Expert-menu heatapp! base)
Set-back temperature:	adjustable from anti-freeze temperature to economy temperature
Economy temperature:	adjustable from set-back temperature to comfort temperature
Comfort temperature:	adjustable from economy temperature to 28 ° C




Live View



12 hours Statistics of setpoint and actual temperature

Tap this icon to select the room.

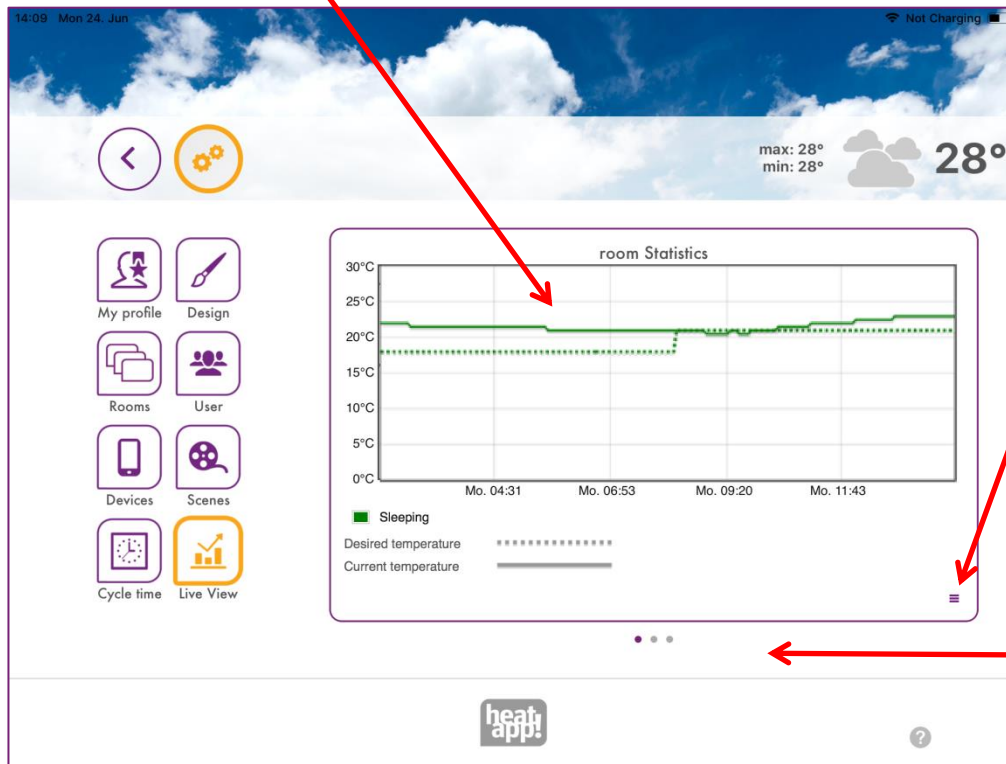

When connected to the boiler, the statistics for hot water and the boiler are displayed by side wiping.



Personal adjustments

- Customize heatapp! to your personal needs.
- In the Live View you learn about the heating-up and heating-down phases of your heating system.
- Use the cycle times and adapt heatapp! to your needs and your heating system.
- Make settings in the expert menu to achieve the best possible energy efficiency of your heating system.






System



Menu of the heatapp! base

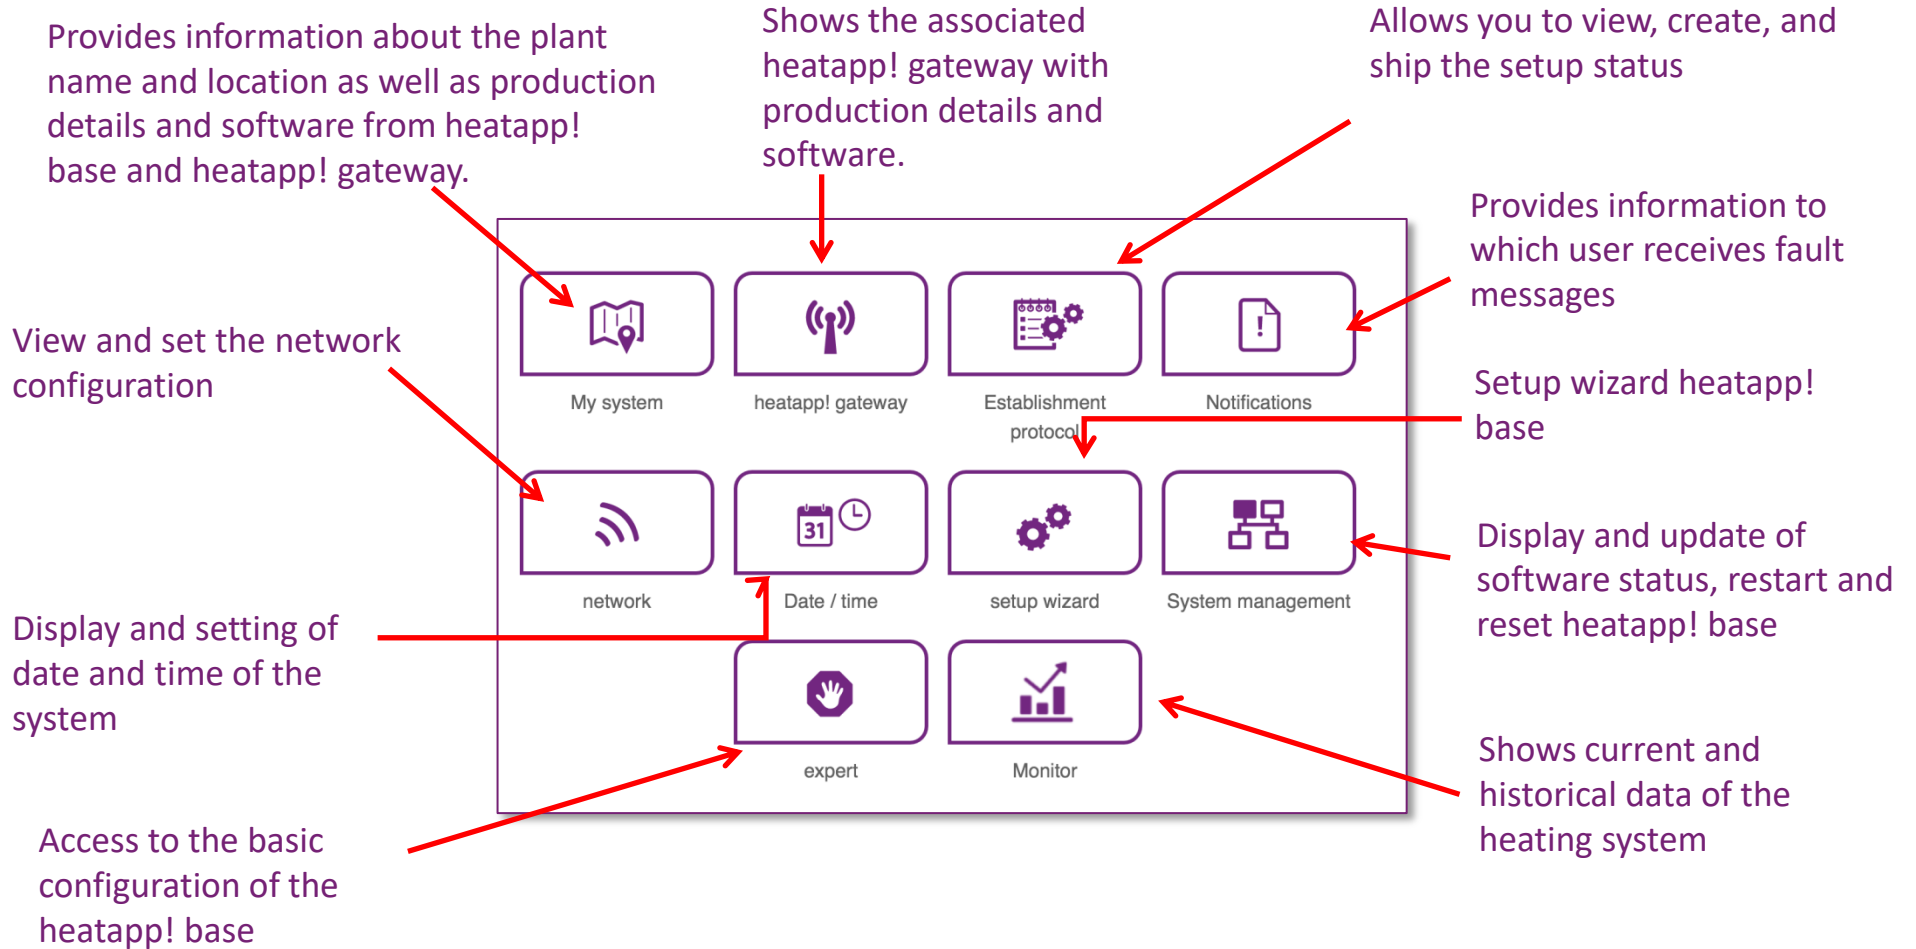



Gateway




Menu heatapp! gateway

Displays the connected heatapp! base with IP address as well as production details and software of the heatapp! gateway. Gateway password can be changed.

Opens the menu of radio components.

Display and setting of the network configuration

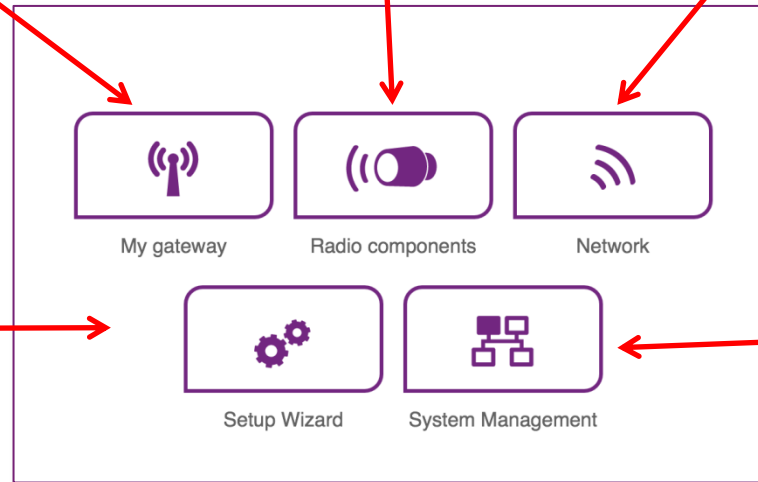

Setup wizard heatapp! gateway

Display and update of software status, restart and reset heatapp! gateway



Operating of your heating system