



Art.-No. 9600501000

Operating instructions

OTsmart SC1

**Heating circuit controller with boiler control
via OpenTherm interface**

Issue: 1425

Art. 0450000658

1 Contents

1	Contents	2
2	General	4
3	Security.....	5
3.1	Intended use	5
3.2	Danger symbols in these operating instructions	5
4	Symbol description.....	6
5	Commissioning.....	8
5.1	WEB browser.....	8
6	Displays and buttons of the basic display.....	13
7	Device setting	14
8	Information.....	15
9	Switching times.....	17
9.1	Standard switching times (factory value)	17
9.2	Changing the standard switching times.....	18
10	Heating circuit Room setpoint	20
11	Domestic hot water setpoint	21
12	ECO.....	22
13	Scenes – operating modes	23
13.1	Switching times programmes.....	23
13.2	Operating mode day	23
13.3	Reduce operating mode.....	24
13.4	Summer operating mode (DHW only)	24
13.5	Vacation operating mode.....	25
13.6	Absent operating mode	25
13.7	Party operating mode	25
13.8	Standby operating mode.....	26

14	Parameters	27
14.1	Hydraulics menu	27
14.2	System menu.....	27
14.3	Hot water menu	28
14.4	Heating circuit 1 menu.....	28
14.5	Heating circuit 2 menu.....	29
14.6	Boiler menu.....	30
14.7	Eco menu.....	30
14.8	Error stack menu	31
14.9	Adjust menu.....	31
15	Mounting.....	32
15.1	Connection diagram.....	33
16	Troubleshooting.....	34
16.1	Error overview.....	34
17	System extension	35
17.1	Connection room unit CETA RC -OT	35
17.1.1	Heating circuit assignment	35
17.1.2	Operation via CETA RC-OT	36
17.2	THETA RSC-OT room unit connection	37
18	Technical data	38
18.1	Resistance values of the sensors.....	38
19	Declaration of Conformity	39
20	Liability.....	39
21	Waste disposal	39

2 General

The SC1 offers the option of extending a boiler system with an OpenTherm interface to include a mixer-controlled heating circuit.

Operation is via WEB browser

Systems with mixed (MK) and unmixed heating circuits (DK) are controlled via the heating circuit control. Depending on the outside temperature, the required heating circuit temperature in the flow is determined and transferred to the boiler control system as request.

The boiler and hot water are controlled via the OpenTherm interface by transmitting the request value.

3 Security

All electrical connections, protective measures and fuses must be carried out by a qualified electrician in accordance with the applicable standards and VDE guidelines as well as local regulations.

The electrical connection must be provided as a fixed connection in accordance with VDE 0100.

3.1 Intended use

The appliance is built in accordance with the state of the art and recognised safety regulations. Nevertheless, use of the appliance may present risks to the operator or third parties or cause damage to the appliance and other property.

The device may only be used as a heating circuit controller.

3.2 Danger symbols in these operating instructions

**Warning!**

This signal word indicates a potentially imminent danger. If it is not avoided, death or serious injury may result.

**Caution - damage to components!**

This signal word indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.

4 Symbol description


Symbol	Description
	Press the Home icon to return to the basic display.
	When this ECO function is activated, the setpoint is reduced. This can be adjusted for the hot water setpoint temperature and the room setpoint temperature.
	The menu for the following operating modes can be found in the Scenes – Operating mode menu: <ul style="list-style-type: none"> • Switching time programmes • Daytime operation • Lowered mode • Hot water operation • Holiday • Away • Party • Standby
	The information displays all hydraulic information. <ul style="list-style-type: none"> • Outside temperature: • Outside minimum: • Outside maximum: • Setpoint: • Flame state: • Burner starts: • Burner runtime: • DHW state: • DHW setpoint: • DHW current temperature: • Heating circuit 1 state: • Room setpoint: • Flow setpoint: • Floor temperature: • Heating circuit 2 state: • Room setpoint: • Flow setpoint: • Floor temperature: • Software version:
	The DHW icon enables settings for DHW. <ul style="list-style-type: none"> • DHW daytime temperature • DHW night-time temperature • DHW party mode • DHW cycle times programme • DHW cycle times • DHW eco mode
	The heating circuit 1 symbol is displayed for all settings for heating circuit 1. <ul style="list-style-type: none"> • Comfort temperature • Setback temperature • Reduced temperature • Cycle times

Symbol	Description
	The heating circuit 2 symbol is displayed for all settings for heating circuit 2. <ul style="list-style-type: none"> • Comfort temperature • Setback temperature • Reduced temperature • Cycle times
	The cycle times symbol indicates settings for the cycle times. <ul style="list-style-type: none"> • Setting the DHW cycle times • Setting the cycle times for heating circuit 1 • Setting the cycle times for heating circuit 2 • Selecting the cycle times programme for the heating circuit • Selecting the cycle times programme for DHW
	The device settings are used to <ul style="list-style-type: none"> • set the time and network settings • import or export the device settings • display and install updates • reset all settings to the factory settings.
	Setting the parameters for <ul style="list-style-type: none"> • Hydraulic • System • Hot water • Heating circuit 1 • Heating circuit 2 • Boiler • Eco • Error stack • Adjust <p>See the parameter description for details of the settings.</p>
	Daytime operation or comfort temperature
	Eco temperature
	Setback mode
	Vacation
	Absent
	Party
	Standby

5 Commissioning

5.1 WEB browser


The procedure for commissioning the device via the WEB browser, can be found on the sticker on the front of the housing.

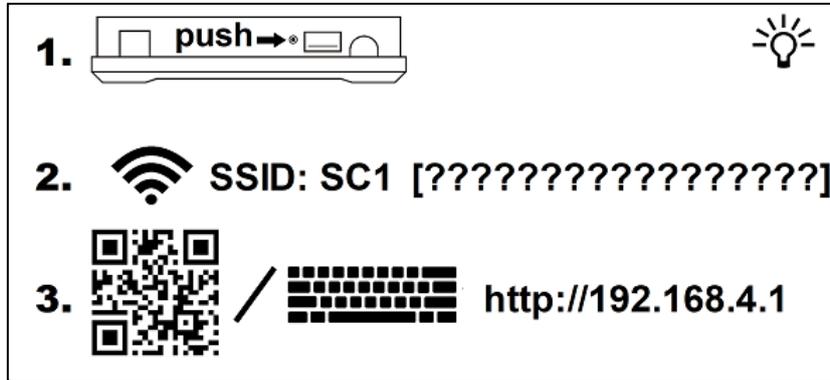

After you have finished connecting the SC1, switch on the mains voltage to activate the device. The LED in the SC1 front starts to flash **BLUE**.

1. Using a biro or paper clip, press the recessed button on the top of the control (step 1 of the quick guide).
2. This activates the hotspot of the controller and is available on your control panel (PC, notebook, tablet or smartphone) under the SSID printed on the controller in the available WLAN networks.


Select this WLAN network.

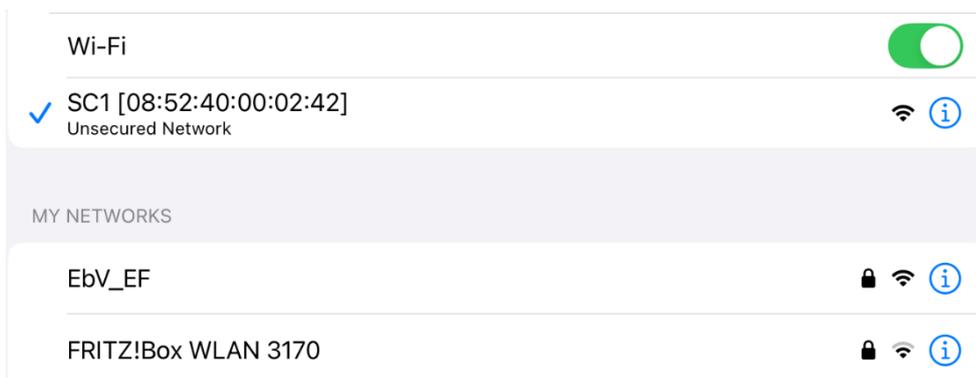

e.g.

3. Now scan the printed QR code with your QR code scanner on the operating device or enter the address <http://192.168.4.1> in the browser, whereupon you can select the WLAN network in which the SC1 is to be integrated.
4. If no connection to a network is available, it is also possible to configure and operate the device via the hotspot controller. Select the following button here, which will be displayed after you enter the browser address <http://192.168.4.1>

Als Hotspot ohne Verbindung in ein
Netz verwenden

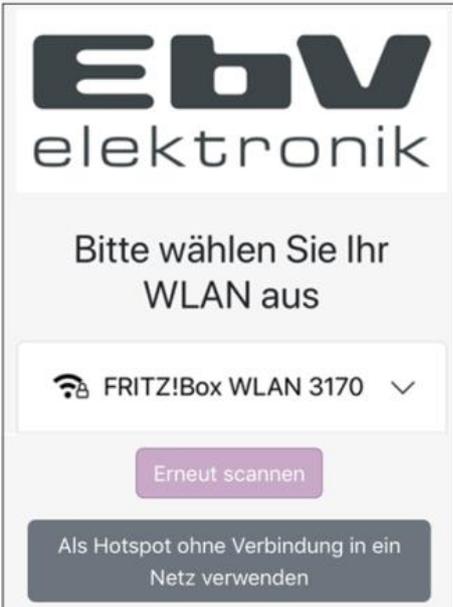

Use as hotspot without connecting to a
network

Please select your WiFi

Scan again

Use as hotspot without connecting to a
network




Please select your WiFi

WiFi connection was successful.

next

If the connection is successful, tap the "Weiter" button to continue. The LED on the front now flashes "**GREEN**"; if there is an error, the LED flashes "**RED**". However, this does not need to be taken into account for the rest of the WLAN configuration configuration.

To protect the device from unauthorised access during operation, assign a password.
Password length 1 to 6 characters.

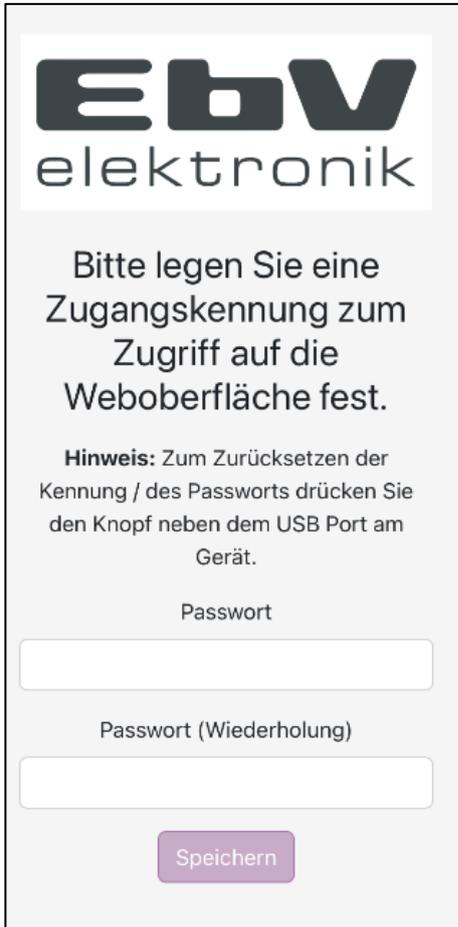

The screenshot shows a web interface for setting a password. At the top is the EbV elektronik logo. Below it, the text reads: "Bitte legen Sie eine Zugangskennung zum Zugriff auf die Weboberfläche fest." (Please set an access code to access the web interface). A note follows: "Hinweis: Zum Zurücksetzen der Kennung / des Passworts drücken Sie den Knopf neben dem USB Port am Gerät." (Note: To reset the access code / password, press the button next to the USB port on the device). There are two input fields: the first is labeled "Passwort" and the second is labeled "Passwort (Wiederholung)". A purple button labeled "Speichern" (Save) is at the bottom.

Please set an access code to access the web interface.

Note: To reset the access code /password, press the button next to the USB port on the device.

Password

Password (repeat)

Save


If you want to reset the password at a later date, this is possible. You can enter a new password using the "Forgot password" function. To do this, you must press the button next to the USB port of the device when you are prompted to do so via the web interface.

Now use your operating device to switch to the same WLAN network that you previously selected for the SC1 and call up the link that is now displayed.



Please change to your home WiFi and call up the following link:

Now enter the previously assigned password to legitimise access.

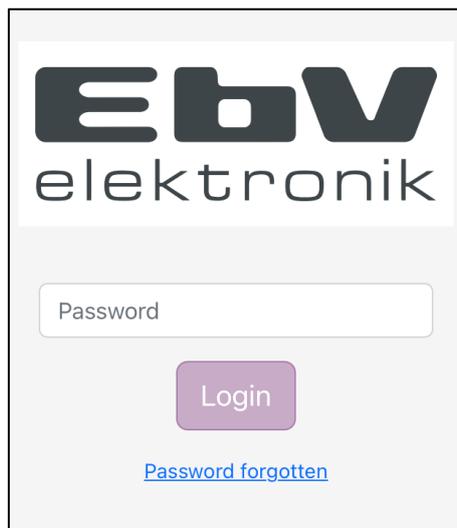


EbV
elektronik

Password


Login

[Password forgotten](#)


The setup wizard is finished and the basic display is shown.

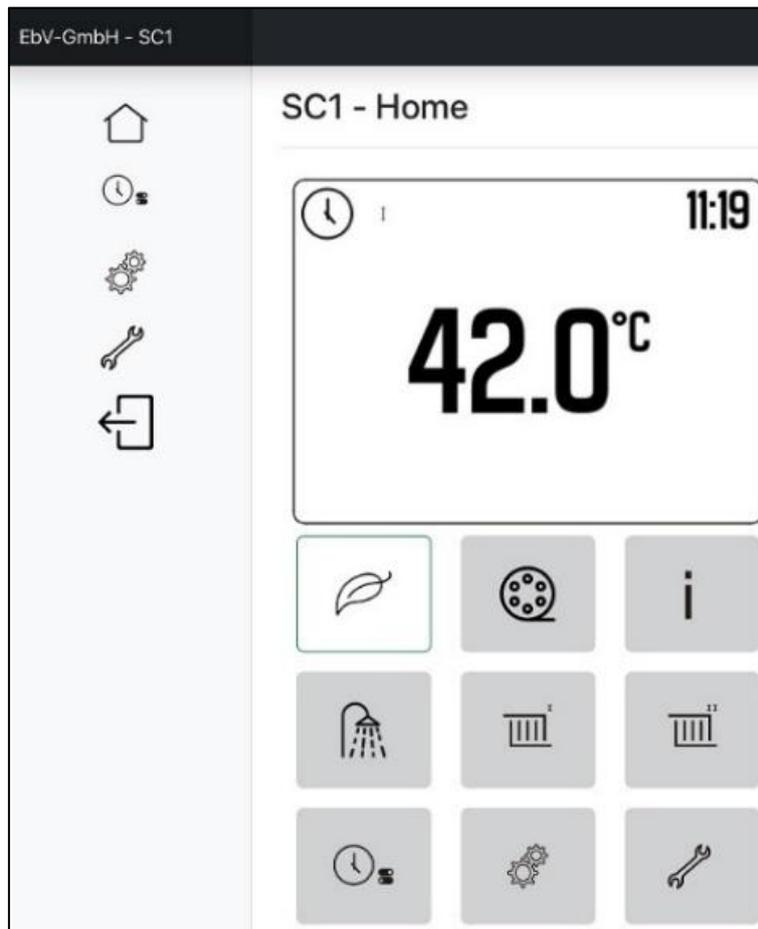

6 Displays and buttons of the basic display

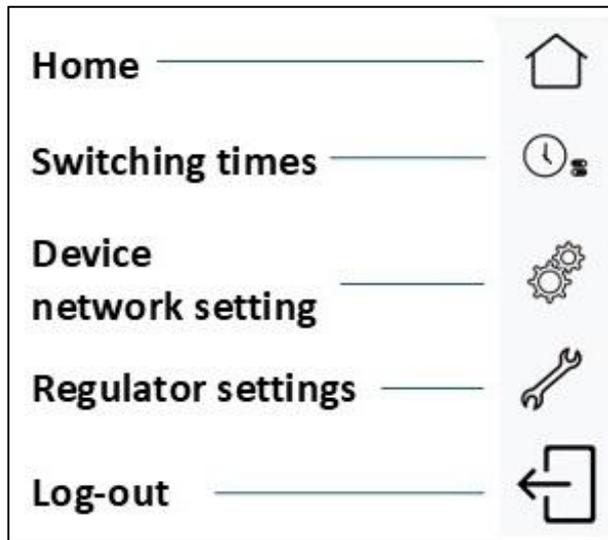

(Tablet and PC display)

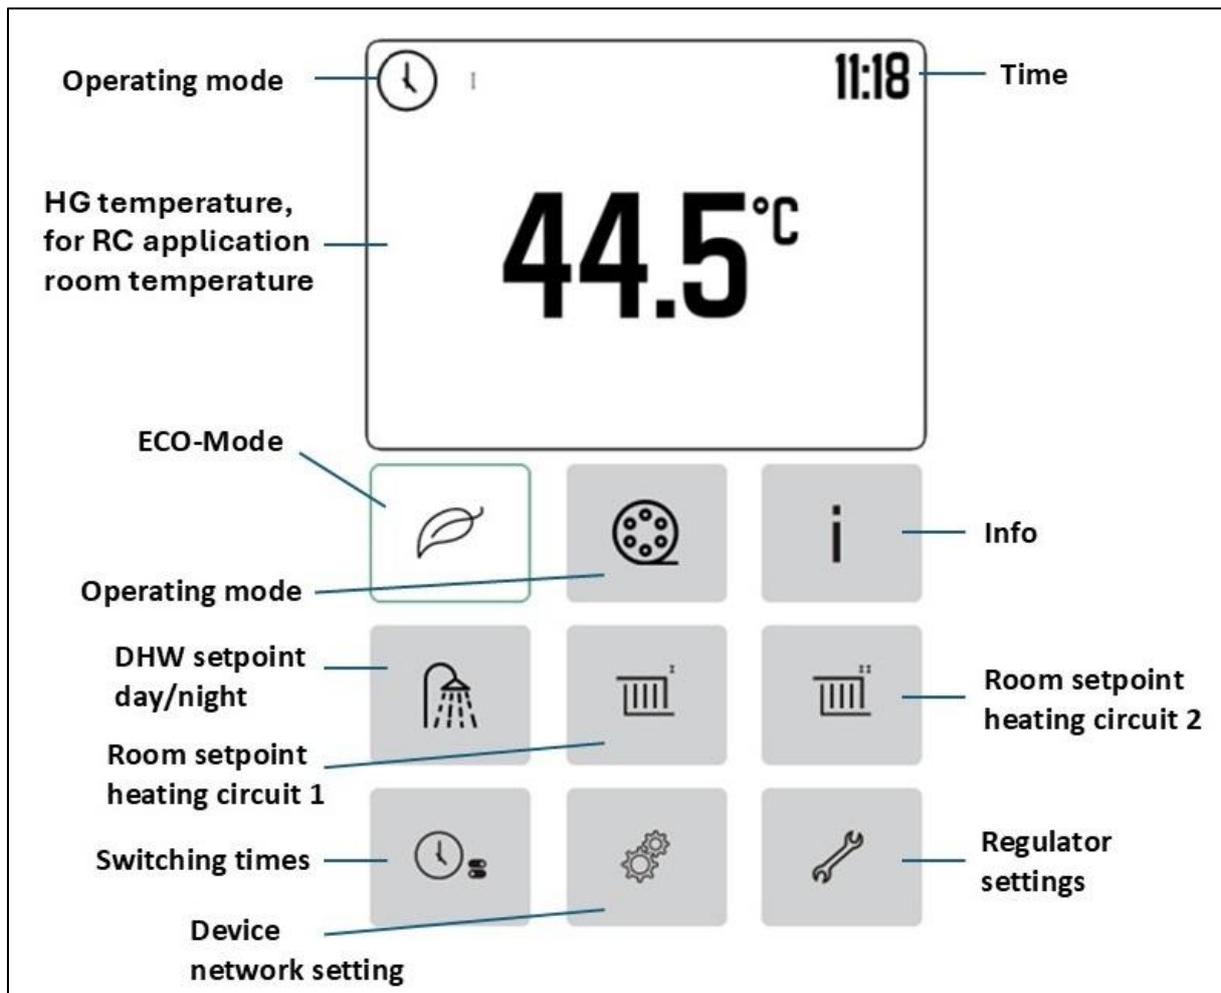

(Smartphone, tablet and PC display)

7 Device setting



The double gearwheel button takes you to the device and network settings. The following areas are available for selection.

- Device settings
- Network settings
- Import/export
- Update
- Reset

Device settings:

The time setting of the device can be customised here. On the one hand, an individual time/date can be entered or the time/date of the operating device can be adopted.

Network settings:

The network settings can also be changed here at a later date. To do this, enter the WLAN network with the access key.

Import/export:

In the "Import/Export" menu, the settings can be backed up as a file by downloading (exporting) them. The settings can be reloaded by uploading (importing) the created file.

Note: Note the set storage location for downloads on your operating device.

Update:

If the SC1 has a connection to the Internet via the network, an update can be requested and executed here. This option is not available in local operation.

Reset:

A complete reset of the SC1 can be called up and executed here.

ATTENTION!

The device is reset to the factory settings and the connection to the local network is lost at the same time. As with initial commissioning, this connection must be re-established using the setup wizard.

8 Information

Information on the status and the temperature setpoint/actual values can be called up via the "i" button in the WEB browser.



Designation	Description of the
Outside temperature	Current outside temperature (sensor on SC1)
Outside temperature min.	Minimum outside temperature value (0.00 to 24.00 h)
Outside temperature max.	Maximum outside temperature value (0.00 to 24.00 h)
Outside temperature	Current outside temperature (via BUS OT from FA)
Outside temperature min.	Minimum outside temperature value (0.00 to 24.00 h)
Outside temperature max.	Maximum outside temperature value (0.00 to 24.00 h)
Boiler set temperature	Setpoint temperature for the heat generator
Boiler flow temperature	Actual temperature at the heat generator (via BUS OT)
Boiler return temperature	Actual temperature of the heat generator return flow sensor (via BUS OT)
Boiler operation	Boiler status (OFF/ON)
Burner starts	Counter burner starts
Burner runtime	Burner runtime counter
DHW state	Hot water status (OFF/ON)
DHW setpoint	Setpoint temperature hot water
DHW current temperature	Actual hot water temperature
Heating circuit 1 state	Heating circuit 1 status (OFF/ON)
Room setpoint	Current room setpoint temperature heating circuit 1
Room temperature	Actual temperature of the room at HK1 (with assigned RC)
Flow setpoint	Setpoint temperature of heating circuit 1

Designation	Description of the
Flow temperature	Actual temperature of heating circuit 1 (= actual boiler flow temperature)
Heating circuit 2 state	Heating circuit 2 status (OFF/ON)
Room setpoint	Current room setpoint temperature heating circuit 2
Room temperature	Actual temperature of the room at HK2 (with assigned RC)
Flow setpoint	Setpoint temperature of heating circuit 2
Flow temperature	Actual temperature of heating circuit 2
Software version	Current software version of the SC1

9 Switching times

The switching times are called up in the WEB browser via the Switching times button.



SC-1 - Switching times





Showing Program:

Program 1

Time	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday
00							
02							
04	■	■	■	■	■	■	■
06	■	■	■	■	■	■	■
08	■	■	■	■	■	■	■
10	■	■	■	■	■	■	■
12	■	■	■	■	■	■	■
14	■	■	■	■	■	■	■
16	■	■	■	■	■	■	■
18	■	■	■	■	■	■	■
20	■	■	■	■	■	■	■
22							

9.1 Standard switching times (factory value)

HEATING CIRCUIT 1

1	P1	--	--	MO	TU	WE	TH	FR	SA	SU	06:00	22:00
2	--	P2	--	MO	TU	WE	TH	FR	--	--	06:00	08:00
3	--	P2	--	MO	TU	WE	TH	--	--	--	16:00	22:00
4	--	P2	--	--	--	--	--	FR	--	--	13:00	22:00
5	--	P2	--	--	--	--	--	--	SA	SU	07:00	23:00
6	--	--	P3	MO	TU	WE	TH	FR	--	--	07:00	18:00

HEATING CIRCUIT 2


1	P1	--	--	MO	TU	WE	TH	FR	SA	SU	06:00	22:00
2	--	P2	--	MO	TU	WE	TH	FR	--	--	06:00	08:00
3	--	P2	--	MO	TU	WE	TH	--	--	--	16:00	22:00
4	--	P2	--	--	--	--	--	FR	--	--	13:00	22:00
5	--	P2	--	--	--	--	--	--	SA	SU	07:00	23:00
6	--	--	P3	MO	TU	WE	TH	FR	--	--	07:00	18:00

HOT WATER

1	P1	--	--	MO	TU	WE	TH	FR	SA	SU	05:00	22:00
2	--	P2	--	MO	TU	WE	TH	FR	--	--	05:00	08:00
3	--	P2	--	MO	TU	WE	TH	--	--	--	15:30	22:00
4	--	P2	--	--	--	--	--	FR	--	--	12:30	22:00
5	--	P2	--	--	--	--	--	--	SA	SU	06:00	23:00
6	--	--	P3	MO	TU	WE	TH	FR	--	--	06:00	18:00

9.2 Changing the standard switching times

1. Select the control circuit:

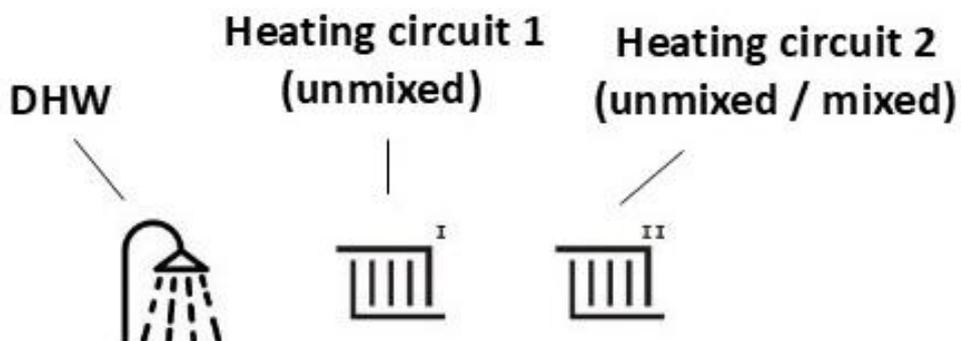

2. Select the switching programme. A maximum of 3 switching programmes are available
3. Select a switching time field to open the field for editing the switching time.

Schaltzeit bearbeiten ✕

Monday

Tuesday

Wednesday

Thursday

Friday

Saturday

Sunday

From

06:00

To

22:00

Active in the following programs:

Program 1

Delete Abort Save

Here you can set the days of the week, the switch-on and switch-off time and the switching programme. For heating circuits 1 and 2, you can also choose between comfort temperature (sun - highlighted in blue) and economy temperature (sun - highlighted in green). You can also delete individual switching times or entire cycles here.

The switching time day is divided into individual 2-hour grids. Only one switching cycle is permitted within a 2-hour grid. This can be between 1 min. and 120 min.

10 Heating circuit Room setpoint

In the WEB browser, it is possible to set the room setpoint temperature using the Heating circuit 1 and Heating circuit 2 buttons.



HC comfort temperature setpoint slider
(Economy temp. setpoint - 28°C)

HC economy temp. setpoint slider
(Night temp. setpoint - Comfort setpoint)

HC night temp. setpoint slider
(4°C - economy temp. setpoint)

21.0 °C

20.0 °C

16.0 °C

Rückmeldung Speichern

Gespeichert

Rücksprung zur Grundanzeige Dashboard

Speichern

20

11 Domestic hot water setpoint

In the WEB browser, you can use the DHW button to set the DHW setpoint temperature and activate a DHW recharge.



The screenshot shows the DHW control interface with the following elements and annotations:

- DHW day setpoint slider:** A slider with a sun icon and a value of 50.0 °C. An arrow points to it from the text "DHW day setpoint slider".
- DHW night setpoint - DHW max.*:** A slider with a moon icon and a value of 40.0 °C. An arrow points to it from the text "DHW night setpoint - DHW max.*".
- DHW night setpoint slider:** A slider with a moon icon and a value of 20.0 °C. An arrow points to it from the text "DHW night setpoint slider".
- DHW day setpoint:** A slider with a sun icon and a value of 40.0 °C. An arrow points to it from the text "20.0°C - DHW day setpoint".
- DHW reload:** A button with a martini glass icon. An arrow points to it from the text "DHW reload".
- DHW reload time:** A dialog box showing "DHW reload time" set to "17:30" with a "Save" button.
- Feedback for Save:** A green button labeled "Gespeichert" with an arrow pointing to it from the text "Feedback for Save".
- Return to basic display Dashboard:** A button with a refresh icon. An arrow points to it from the text "Return to basic display Dashboard".
- Save:** A button with a back arrow icon. An arrow points to it from the text "Save".

*Depending on machine

12 ECO

In the basic display (home screen), the ECO function can be activated and deactivated using the ECO button. This function can be used to activate preconfigured energy-saving features.



When this ECO function is activated, the setpoint is reduced, which can be set to the hot water setpoint temperature and the room setpoint temperature.

It is possible to select whether the reduction should only take place in heating mode or in heating and reduced mode.

Please refer to chapter 12.7 ECO menu, the parameter level.

13 Scenes – operating modes




The settings for the operating modes and their durations can be found in the scenes - operating modes.




13.1 Switching times programmes

If you select the switching times symbol, you can choose whether switching times program I, II or III should be activated.

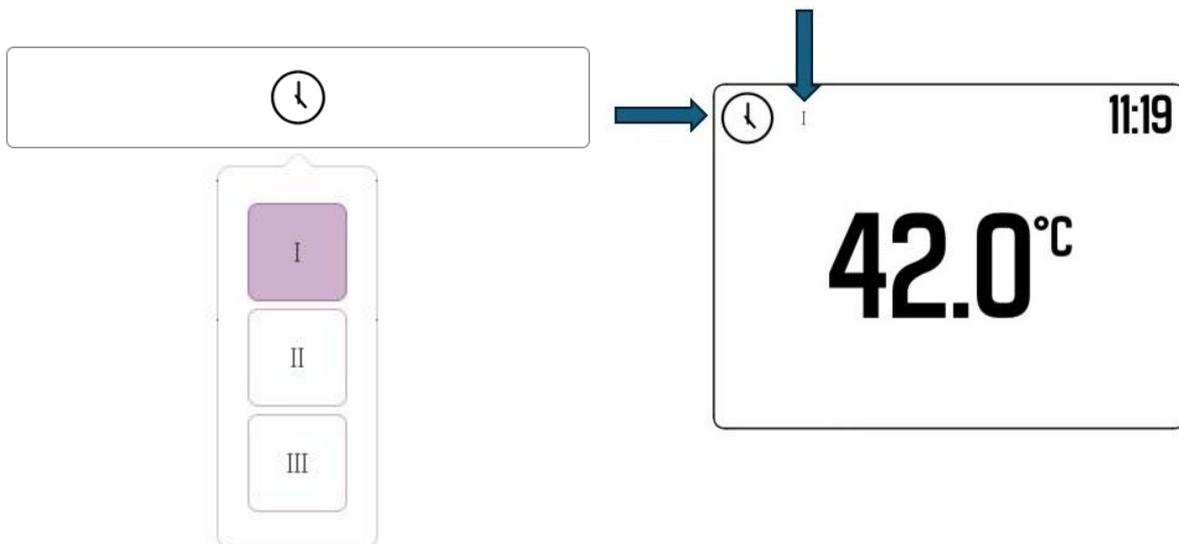


13.2 Operating mode day

If day mode is selected, the system is set to day mode regardless of the switching time. To end permanent day mode, another operating mode must be selected.

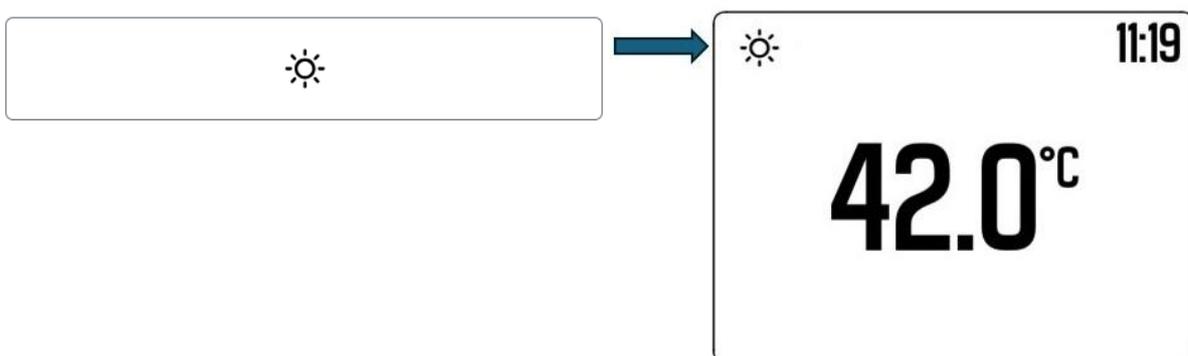


13.3 Reduce operating mode

The reduce selection sets the system to reduce mode regardless of the switching time. Another operating mode must be selected to end permanent lowering mode.

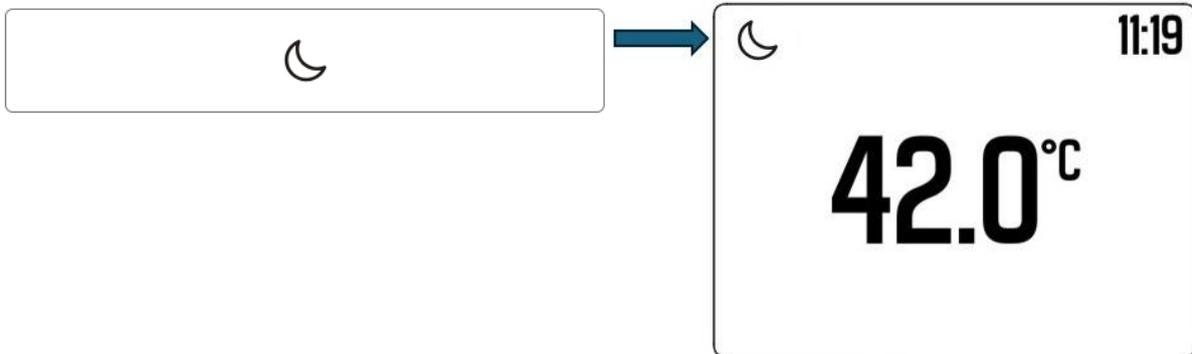


13.4 Summer operating mode (DHW only)

The DHW operating mode is used to switch to summer mode. Hot water operation is continued in automatic mode according to the set switching time program. The heating circuit is switched off with frost protection.

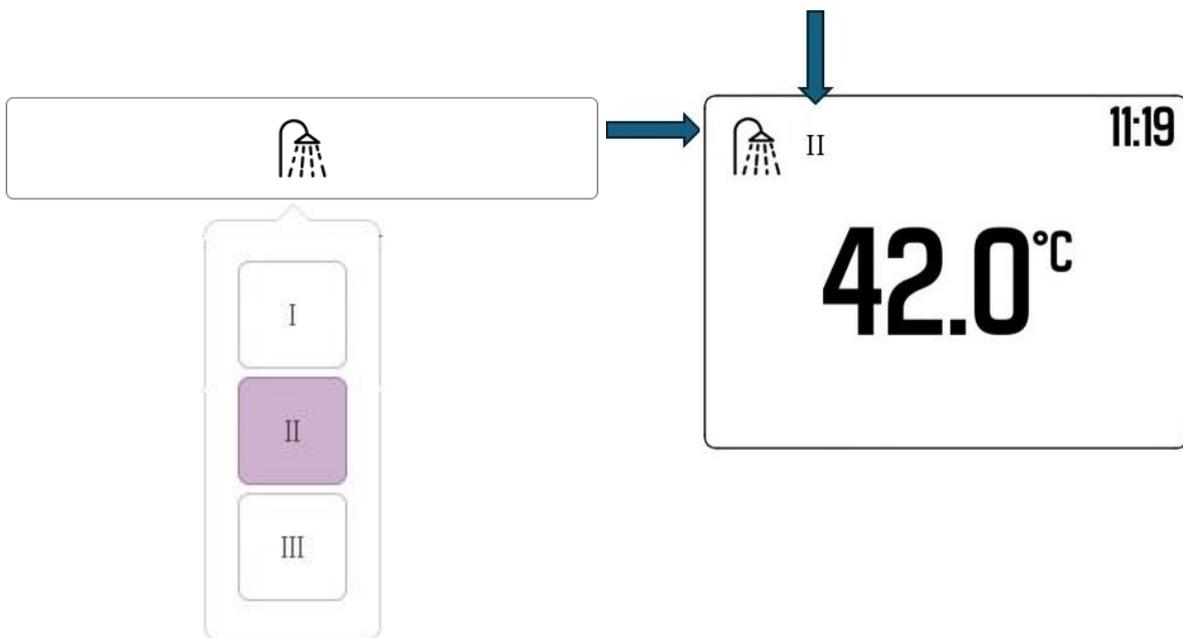


13.5 Vacation operating mode

By selecting the vacation operating mode, you can set until when the vacation scene should be active. The vacation function starts when the setting is activated and ends automatically when the set date expires. The vacation function switches off the heating mode and DHW with frost protection.

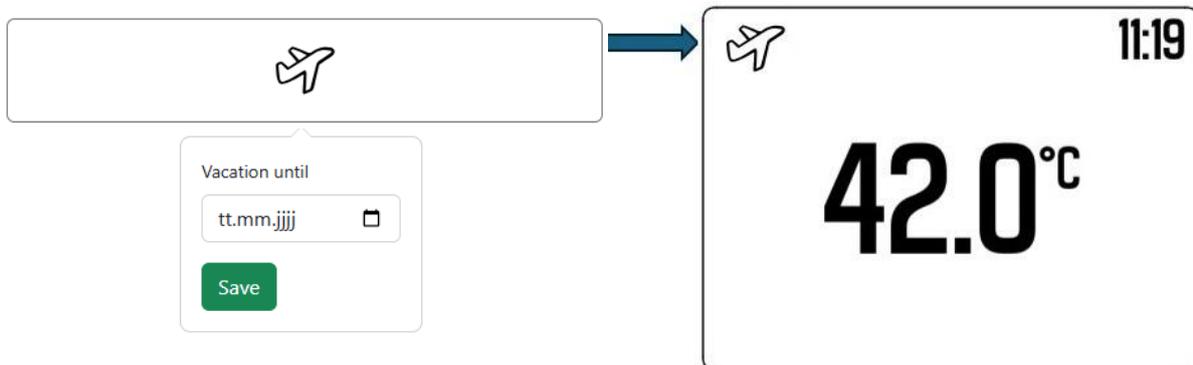


13.6 Absent operating mode

The duration of the absent setting can be set using the scene. The scene begins when it is activated and ends automatically when the set time has elapsed. The absent scene sets the heating to a reduced setting. Hot water operation is not affected.

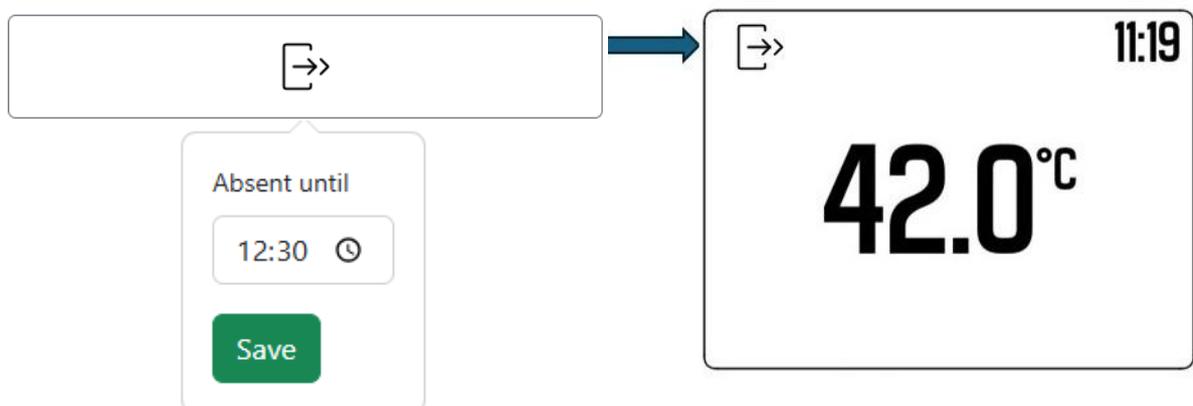


13.7 Party operating mode

Party operating mode can be used to temporarily extend or activate day operating mode. The scene begins with the activation and ends automatically after the set time has elapsed. While party operating mode is active, the temperature is regulated to the day temperature. This applies to the heating circuit and DHW operation.

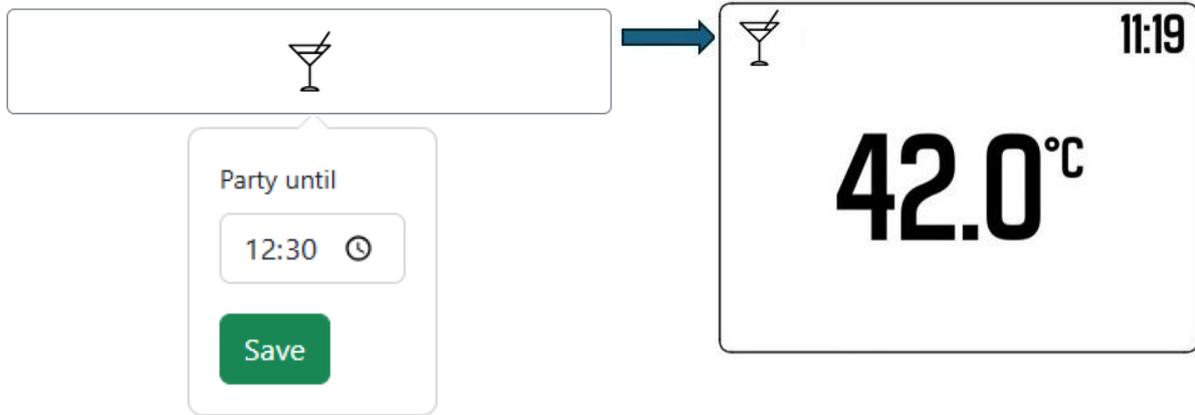

13.8 Standby operating mode

In standby operating mode, heating and hot water are switched off to protect against frost. The operating mode begins when it is activated. To end standby operating mode, another operating mode must be selected.

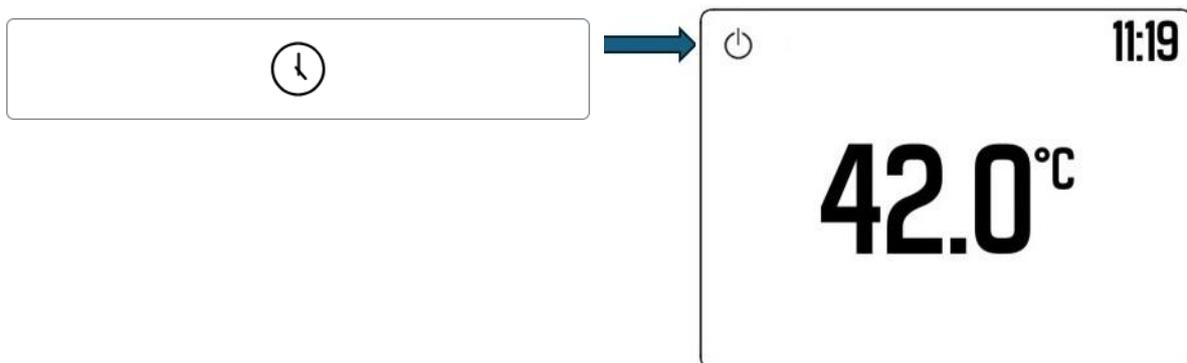

14 Parameters

In the WEB browser, it is possible to access the parameter level via the spanner button.



14.1 Hydraulics menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	HF	Boiler (OT-Master)	OFF, ON	ON
2	HF	DHW	OFF, ON	ON
3	HF	Heating circuit 1	OFF, ON	ON
4	HF	Heating circuit 2	OFF, pump, mixing valve	Mixing valve
5	HF	RelayTest	OFF, OPEN, CLOSE, pump, (VA)	OFF

14.2 System menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	BE	Number of switching times Programmes	1 ... 3	3
4	HF	Clima zone	-50 ... 0 °C	-12°C
5	HF	Building	OFF 1 = light construction 2 = medium-heavy construction 3 = heavy construction	OFF
6	HF	Room supply	Heating circuit 1, heating circuit 2	Heating Circuit 1
7	HF	Reset counter	OFF, ON	OFF

14.3 Hot water menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	HF	DHW operating mode	1 (Intern) 2 (Extern) 3 (intern + extern)	3
2	BE	DHW maximum limitation	20 ... 65 °C	60°C
3	HF	DHW priority	OFF, ON	ON
4	HF	Legionella protection day	AUS, Monday ... Sunday, daily	OFF
7	HF	Legionella protection time	OFF, ON	02:00
8	HF	Legionella protection Temperature	OFF, ON	60°C

14.4 Heating circuit 1 menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	HF	Request	1 (Outside control) 2 (room control) 3 (constant control)	1
2	BE	Outside temperature	1 (Intern) 2 (Extern) 3 (intern + extern)	1
3	HF	Antifreeze outside temperature	-20°C ... 30°C	3,0°C
4	HF	Summer operation	-20°C ... 30°C	18,0°C
5	HF	Reduced	Eco, Heating	Eco
6	HF	Heat system	1,00 ... 10,00	1,00
7	BE	Heat curve	0,05 ... 3,50	1,00
8	HF	Room sensor	OFF, ON	OFF
9	HF	Raum factor	OFF, 10 ... 500%	OFF
10	HF	Heat curve adaptation	OFF, ON	OFF
11	BE	Thermostat	OFF, 0.5K ... 5.0K	OFF
12	HF	RC gain	1,0 ... 100,0%/K	8,0%/K
13	BE	RC adjust time	5.0 ... 240.0 min.	15 min.
14	BE	RC scan time	1.0 ... 30.0 min.	20 min.
15	BE	Window blocking time	OFF, 2 ... 60 min.	OFF

No.	Access	Designation	Setting range resp. Setting values	Factory value
16	BE	Windows difference	0,5 ... 10,0K	2K
17	BE	Switch on optimation	OFF, 1 ... 12h	OFF
18	HF	Heat limit	OFF, 5.0 ... 95.0°C	OFF
19	HF	Vacation	Standby, Absent	Standby
20	HF	Minimum temperature	5.0°C ... 75°C	5,0°C
21	HF	Maximum temperature	5.0°C ... 95°C	75,0°C
22	HF	Increase of request	-20.0K ... +20.0K	OFF
23	HF	Screed programme	OFF Functional heating Laying heating Functional heating + Laying heating	OFF

14.5 Heating circuit 2 menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	HF	Request	1 (Outside control) 2 (room control) 3 (constant control)	1
2	BE	Outsidetemperature	1 (Intern) 2 (Extern) 3 (Intern + Extern)	1
3	HF	Antifreeze outside temperature	-20°C ... 30°C	3,0°C
4	HF	Summer operation	-20°C ... 30°C	18,0°C
5	HF	Reduced	Eco, Heating	Eco
6	HF	Heat system	1,00 ... 10,00	1,00
7	BE	Heat curve	0,05 ... 3,50	1,00
8	HF	Room sensor	OFF, ON	OFF
9	HF	Room factor	OFF, 10 ... 500%	OFF
10	HF	Heat curve adaptation	OFF, ON	OFF
11	BE	Thermostat	OFF, 0.5K ... 5.0K	OFF
12	HF	RC gain	1,0 ... 100,0%/K	8,0%/K
13	HF	RC adjust time	5.0 ... 240.0 min.	15 min.
14	HF	RC scan time	1.0 ... 30.0 min.	20 min.
15	BE	Window blocking time	OFF, 2 ... 60 min.	OFF
16	BE	Windows difference	0,5 ... 10,0K	2K
17	BE	Switch on optimation	OFF, 1 ... 12h	OFF
18	HF	Heat limit	OFF, 5.0 ... 95.0°C	OFF
19	HF	Vacation	Standby, Absent	Standby
20	HF	Minimum temperature	5.0°C ... 75°C	5,0°C
21	HF	Maximum temperature	5.0°C ... 95°C	75,0°C

No.	Access	Designation	Setting range resp. Setting values	Factory value
22	HF	Increase of request	-20.0K ... +20.0K	OFF
23	HF	Screed programme	OFF Functional heating Laying heating Functional heating + Laying heating	OFF
24	HF	Lead time	OFF, 0.5 ... 10.0 min	0.5 min.
25	HF	Overrun time	OFF, 0.5 ... 10.0 min	0.5 min.
26	HF	Pump anti-lock system	OFF, 1 ... 300 s	20 s
27	HF	Valve gain	1,0 ... 50,0%/K	2%/K
28	HF	Valve adjust	1 ... 600 s	270 s
29	HF	Valve scann time	1 ... 600 s	20 s
30	HF	Valve runtime	1 ... 600 s	120 s
31	HF	Valve limit stop	OFF, ON	ON
32	HF	Valve anti-lock system	OFF, 1 ... 300 s	20 s
33	HF	Boiler increase of request	OFF, -20.0K ... +20.0K	4,0K

14.6 Boiler menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	HF	Boiler minimum temperature	5.0°C ... 95°C (KTmax)	5,0°C
2	HF	Boiler maximum temperature	(KTmin) 5.0°C ... 95°C	80,0°C

14.7 Eco menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	BE	Eco mode	Heating Heating + absent	Heating
2	BE	Eco DHW (DHW setpoint)	-10.0K ... 0.0K	-5,0K
3	BE	Eco heating circuit 1 (Room setpoint)	-5.0K ... 0.0K	-1,0K
4	BE	Eco heating circuit 2 (Room setpoint)	-5.0K ... 0.0K	-1,0K

14.8 Error stack menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	BE	Error stack 1	---.--- --- .. ---.--- ---	---.--- ---
:	:	:	:	:
10	BE	Error stack 10	---.--- --- .. ---.--- ---	---.--- ---
11	HF	Fault memory 11	---.--- --- .. ---.--- ---	---.--- ---
:	:	:	:	:
20	HF	Error stack 20	---.--- --- .. ---.--- ---	---.--- ---
21	HF	Reset error stack	OFF, ON	OFF

14.9 Adjust menu

No.	Access	Designation	Setting range resp. Setting values	Factory value
1	HF	Input EF1	-5.0K ... +5.0K	0,0K
2	HF	Input EF2	-5.0K ... +5.0K	0,0K
3	HF	Input EF3	-5.0K ... +5.0K	0,0K

15 Mounting




Warning! - Voltaged parts

Components are electrically powered.

Touching voltage carrying parts can lead to electric shock, burns or death.

- Work may only be carried out by qualified electricians.
- Before opening the appliance, disconnect it from the power supply, secure it against being switched on again and check that it is de-energized.

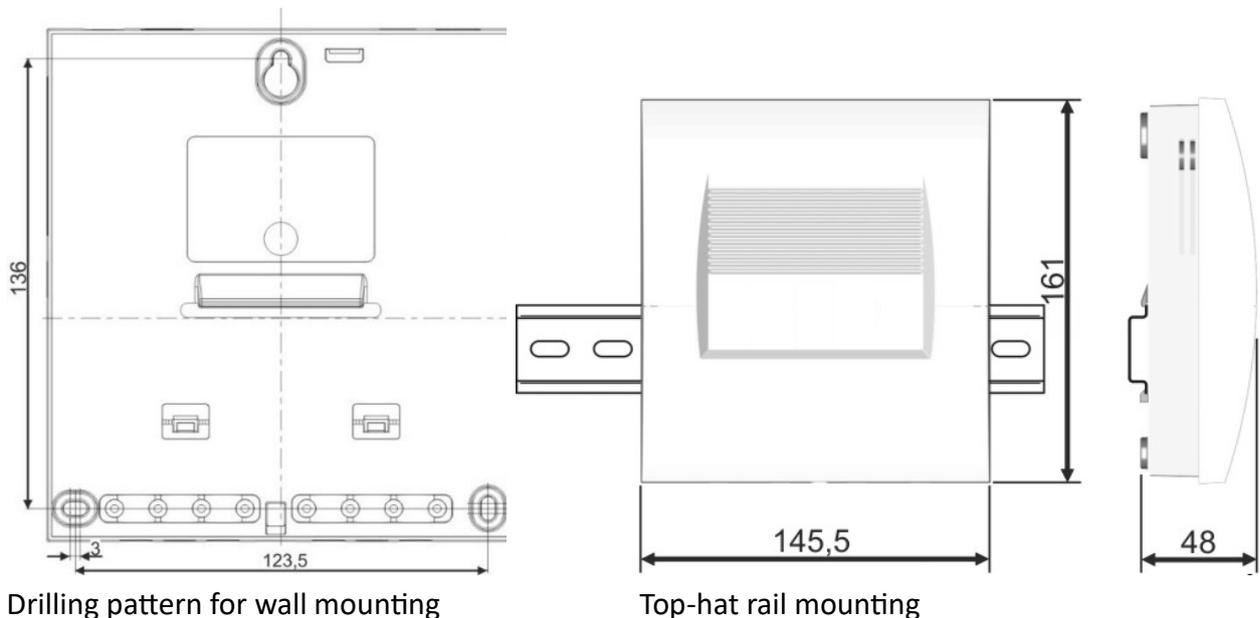

Tools required:

The following tools are required for mounting:

- Cross-recess screwdriver size 1 for opening the terminal compartment cover.
- Slotted screwdriver with a blade width of 2.5 mm for the connection terminals.

Wall mounting:

1. Remove the terminal compartment cover on the housing.
2. To install, first screw a screw into the wall.
3. Suspend the controller from the recess.


4. Use the regulator as a template for the other mounting holes.

Top-hat rail mounting:

Alternatively, the device can be mounted on a top-hat rail.

1. Insert the mounting feet into the recesses on the top-hat rail mounting.
2. Engage the hook by pressing it down.

15.1 Connection diagram

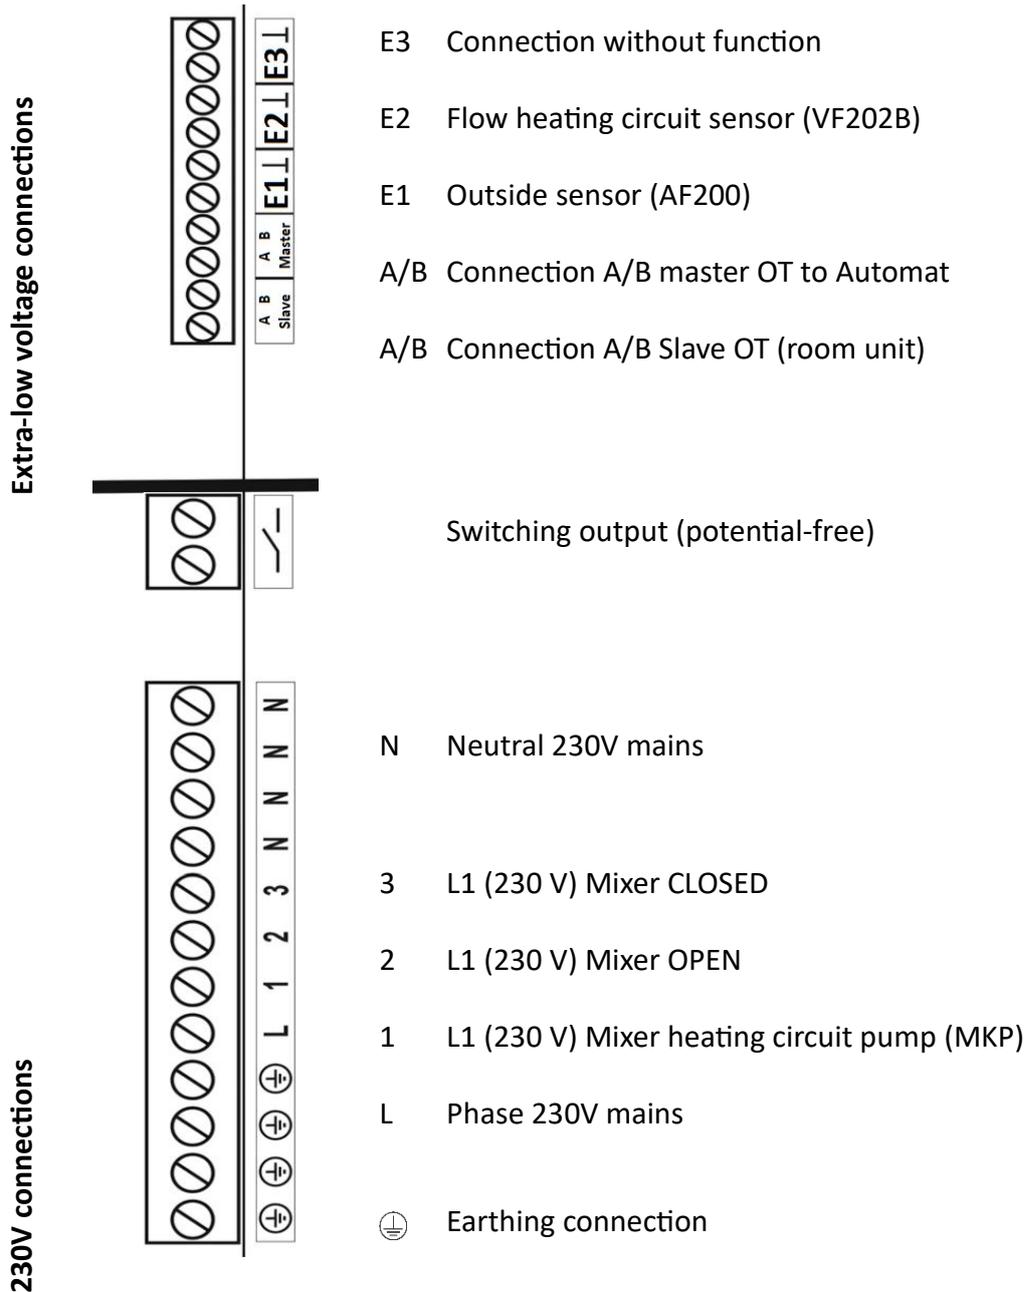

16 Troubleshooting

16.1 Error overview

Error code	Cause	Repair
01-0	Sensor E1 interruption (outside)	Check cable and plug connection, check sensor values in disconnected state, replace if necessary
01-1	Short-circuit sensor E1 (outside)	See 01-0
02-0	Interruption of sensor E2 (flow)	See 01-0
02-1	Short circuit sensor E2 (flow)	See 01-0
03-0	Sensor E3 interruption	See 01-0
03-1	Short circuit sensor E3	See 01-0
50-6	OT operating device (RC) no data connection (terminal slave OT)	Repair fault on the data bus to the operating device
70-6	Data bus OpenTherm no signal (terminal Master OT)	Eliminate the fault on the data bus to the heat generator
71-(0-255)	Automat Error Message Code	Follow the service instructions for the machine
72-1	Automat Error Service	Follow the service instructions for the machine
72-2	Automat error reset	Follow the service instructions for the machine
72-3	Automat error Water pressure too low	Follow the service instructions for the machine
72-4	Automat error flame	Follow the service instructions for the machine
72-5	Automat air pressure error	Follow the service instructions for the machine
72-6	Automat error Overtemperature	Follow the service instructions for the vending machine
73-(0-255)	Automat blower error Message Code	Follow the service instructions for the vending machine
74-1	Automat blower error Service	Follow the service instructions for the machine
74-2	Automat blower error Exhaust gas	Follow the service instructions for the machine
74-3	Automat air inlet fan error	Follow the service instructions for the machine
74-4	Automat blower error Frost protection	Follow the service instructions for the machine

In the event of a fault, the LED in the SC1 front flashes **RED**.

17 System extension


17.1 Connection room unit CETA RC -OT

The SC1 can be extended for the heating circuit with a CETA RC-OT room unit.

The room unit is connected to SC1 at the Slave A/B connection.

Connecting a CETA RC-OT makes it possible to record the room temperature and incorporate it into the control result. It is also possible to set the operating mode, the switching programme and the room setpoint temperature (comfort, economy and night temperature).

A connected CETA RC-OT offers the following display options:

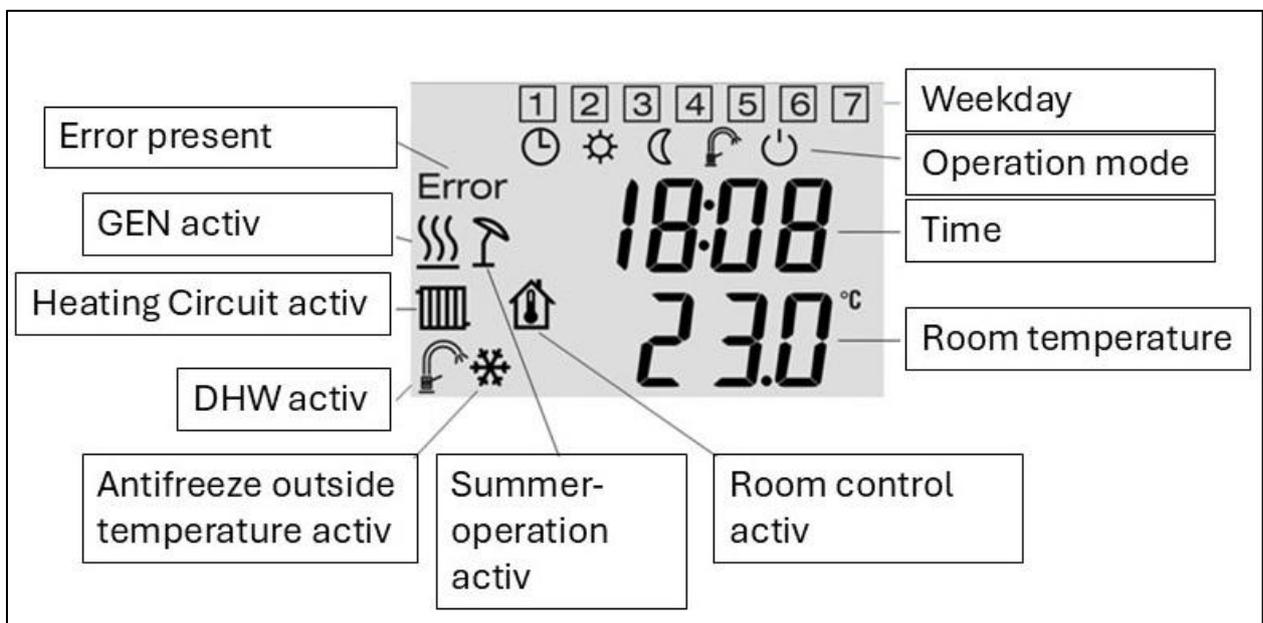

An active "Absent" operating mode is indicated by a flashing "Moon" symbol. An active "Party" operating mode is indicated by a flashing "S".

17.1.1 Heating circuit assignment

Only one room unit can be connected to an SC1, which means that it is necessary to make an assignment if two heating circuits are possible.

This assignment is made in the System menu:

Designation	Setting range resp. Setting values	Factory value
Room supply	Heating circuit 1, heating circuit 2	Heating circle 1

17.1.2 Operation via CETA RC-OT

Setpointtemperature setting:

Operating mode Setting:

The diagram illustrates the step-by-step process for setting the setpoint temperature and operating mode on a thermostat. It is divided into two main sections: Setpointtemperature setting and Operating mode Setting.

Setpointtemperature setting:

- Initial Display:** Shows the time 18:08 and the current setpoint temperature 23.0°C. The display also shows icons for heating (wavy lines), a radiator, and a house with an upward arrow.
- Step 1:** Pressing the **Prog** button leads to a menu: "Selection (+/-)" with options 01 (HK1), 02 (HK2), and 03 (WW).
- Step 2:** Pressing the **Prog** button leads to a menu: "Selection (+/-)" with options: 01 /02:01 Comfort temp., 01/02:02 Economy temp., and 01/02:03 Set back temp.
- Step 3:** Pressing the **Prog** button leads to a menu: "Set value(+/-)" with the instruction "Save with Prog".

Operating mode Setting:

- Initial Display:** Shows the time 18:08 and the current setpoint temperature 23.0°C. The display also shows icons for heating (wavy lines), a radiator, and a house with an upward arrow.
- Step 1:** Pressing the **+/-** button leads to a menu: "Select Operation mode (+/-)" with options: Time P-1, Time P-2, Time P-3, Heat, AbS, DHW P-1, DHW P-2, DHW- P-3, STBY. The instruction "Save with Prog" is shown below.

Legend:

- Time P-1 ... 3 = Automatic mode HC / DHW
- Heat = Permanent heating mode HC / DHW
- AbS = Permanent set back mode HC / DHW
- DHW P-1 ... 3 = HC STBY, Automatic DHW

17.2 THETA RSC-OT room unit connection

The THETA RSC-OT room unit is connected to the Slave A/B connection.

A connected THETA RSC-OT is assigned to heating circuit 1. Assignment to heating circuit 2 is not possible.

The room temperature recorded by the THETA RSC-OT is not displayed in the WEB browser. In this case, the temperature of the heat recovery centre is displayed here.

It is not possible to set the setpoint temperature HK1 and WW via the WEB browser; the setting options remain on the RSC-OT.

The setpoint (HK/WW) generated by the THETA RSC-OT is forwarded to the heat exchanger via the SC1 and controlled accordingly.

18 Technical data

Mains connection voltage:	230V +6%/ -10%
Nominal frequency:	50...60Hz
Power consumption:	max. 2.1VA
Fuse:	6,3A
Contact load of the output relays:	2 (2)A
Ambient temperature:	-10...+50°C
Storage temperature:	-25...+80°C
Protection class:	IP 30
Protection class according to EN60730:	II
Housing dimensions:	145.5 x 161 x 48 mm (W x H x D)
Housing material:	ABS V0
Weight:	420g
Mains connection technology:	Screw terminals 1.5 mm ²
Low voltage connection technology:	Screw terminals 1.0 mm ²

18.1 Resistance values of the sensors

Depending on the temperature:

VF 202(4), AF200			
T (°C)	R (kOhm)	T (°C)	R (kOhm)
0	1,630	45	2,330
5	1,700	50	2,418
7	1,729	55	2,507
10	1,772	60	2,598
12	1,802	65	2,691
14	1,831	70	2,786
16	1,861	75	2,883
18	1,892	80	2,982
20	1,922	85	3,082
25	2,000	90	3,185
30	2,080	95	3,290
35	2,161	100	3,396
40	2,245		

19 Declaration of Conformity

EbV Elektronikbau- und Vertriebs-GmbH assures that the product is produced according to the applicable EU directives. A complete version of the declaration of conformity can be found in the download area at <https://ebv-gmbh.eu/en/downloads/ot-smart/>.

20 Liability

Our general terms and conditions of delivery and business apply. We exclude all liability claims if these are due to non-compliance with the operating instructions and the safety instructions contained therein. We reserve the right to make technical changes.

21 Waste disposal

Dispose of all replaced components and finally the controller itself in an environmentally friendly manner and in accordance with the current legal regulations of the respective country.

© Elektronikbau- und Vertriebs GmbH
Heisterner Weg 8 - 12
D-57299 Burbach

This document may not be reproduced or disclosed to third parties, in particular competitors, in the original or as a copy, without our prior express authorisation. We reserve ownership and copyright of the document.

Abusive use violates the Copyright Act of 9 September 1965, the Unfair Competition Act and the German Civil Code.