heat app!
heatapp! App

heatapp! App

Initial setup & instruction

- App download and install
- App start and registration with login data „owner“ (made them available to the customer)
- Change the target temperature by using the rotary knob
- Create room groups and name the rooms
- Program the switching times and the target temperatures
- Create and invite users
- Show the access to „system“ and „Gateway“

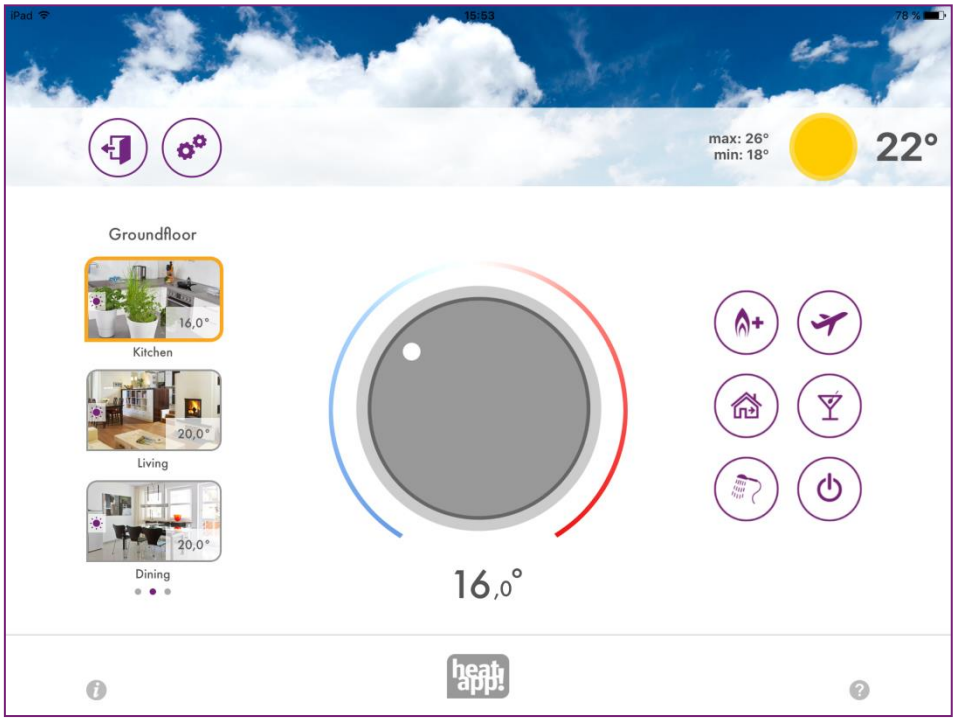

heatapp! system

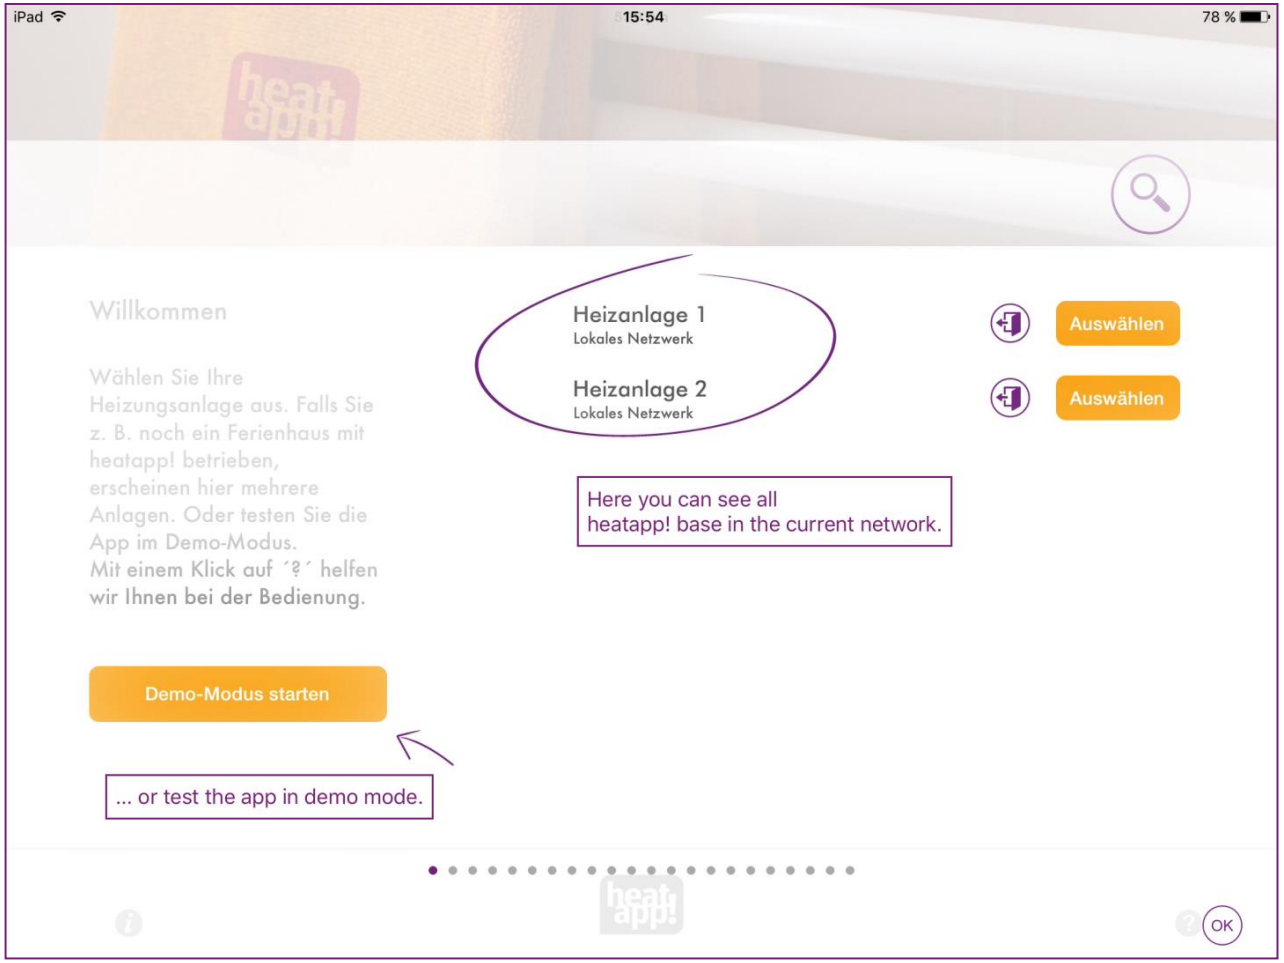

heatapp! rooms

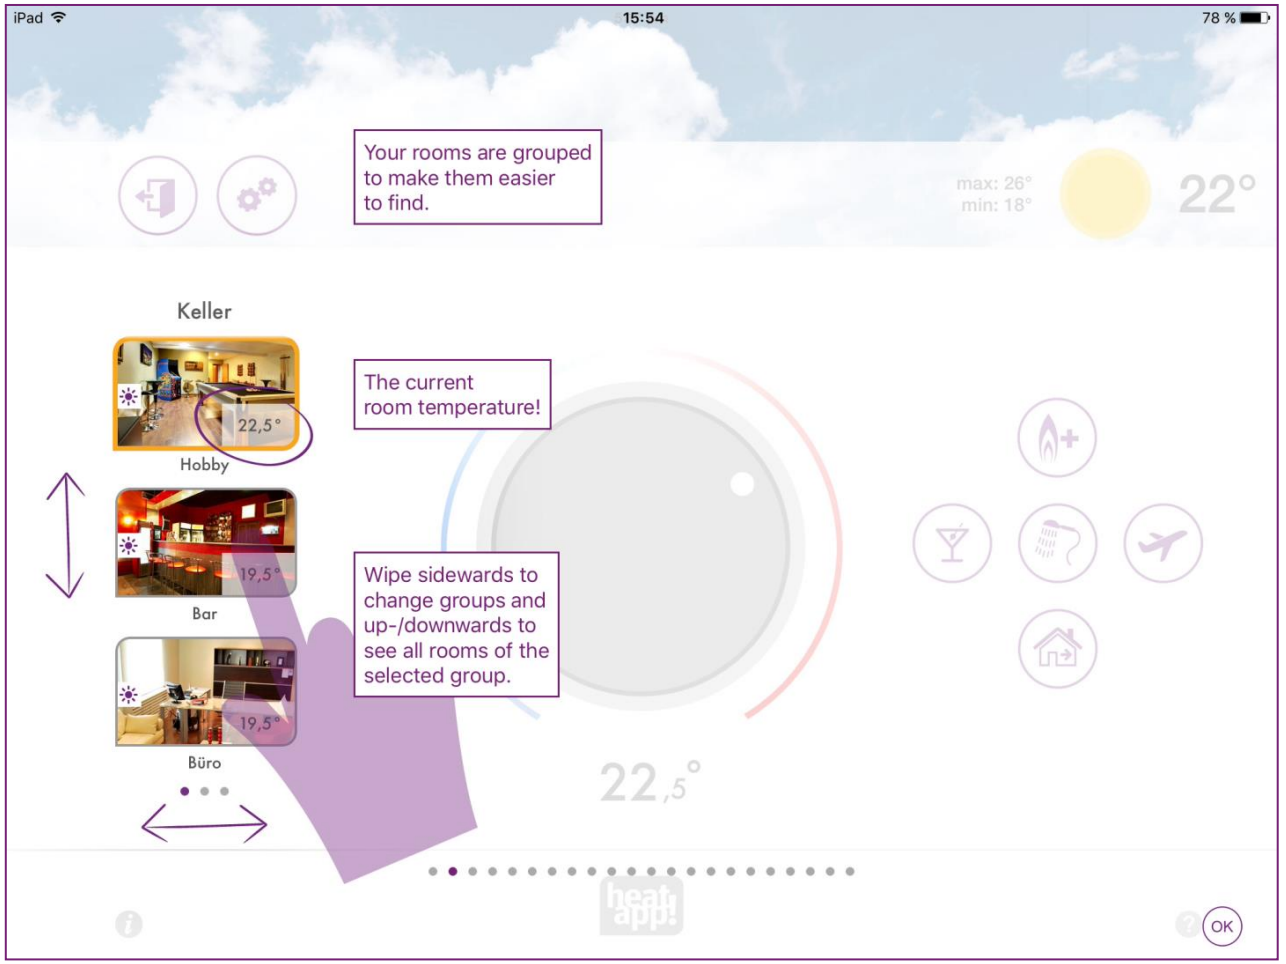

heatapp! homescreen

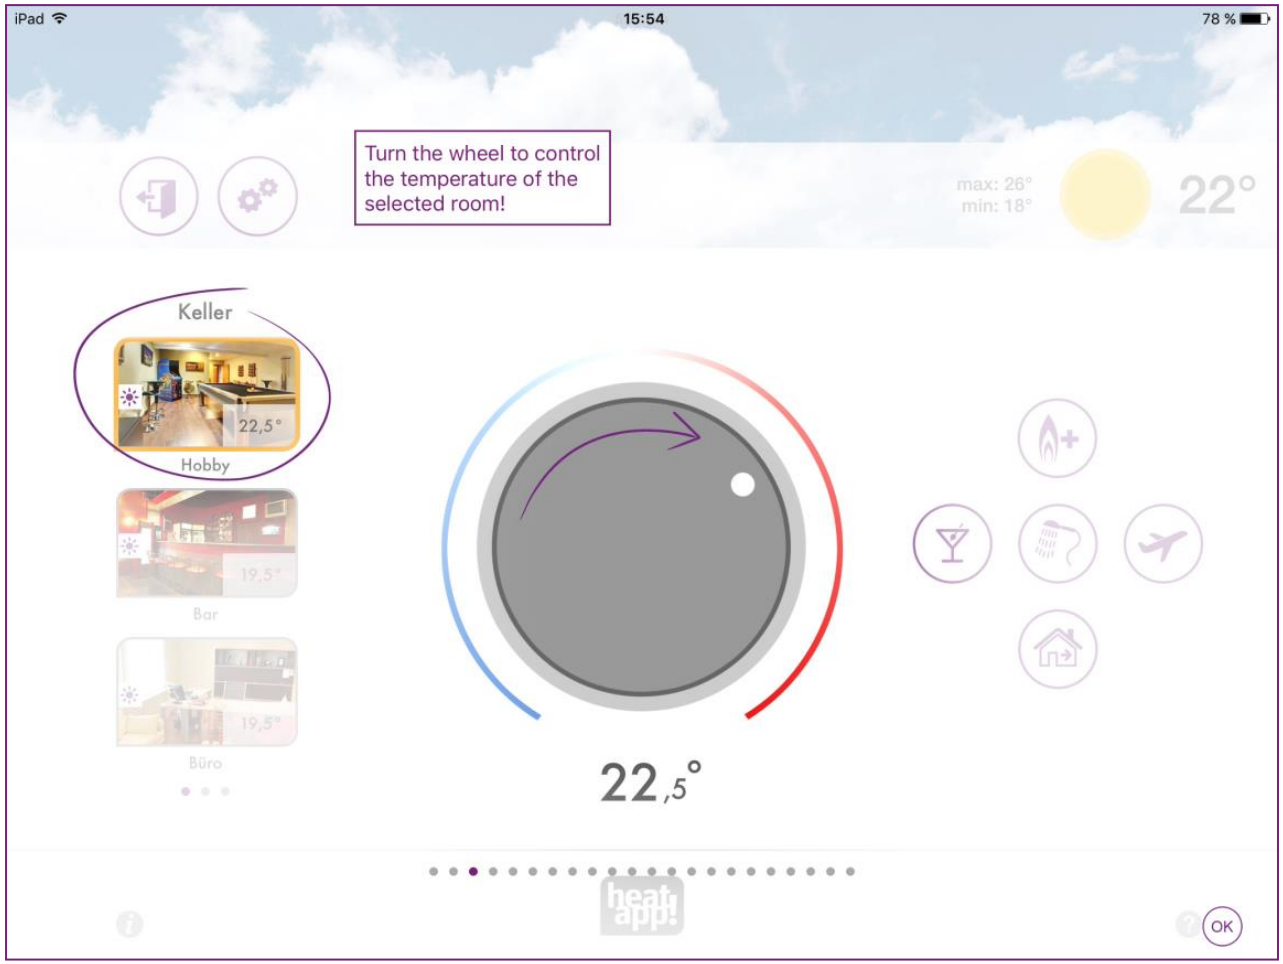

heatapp! settings

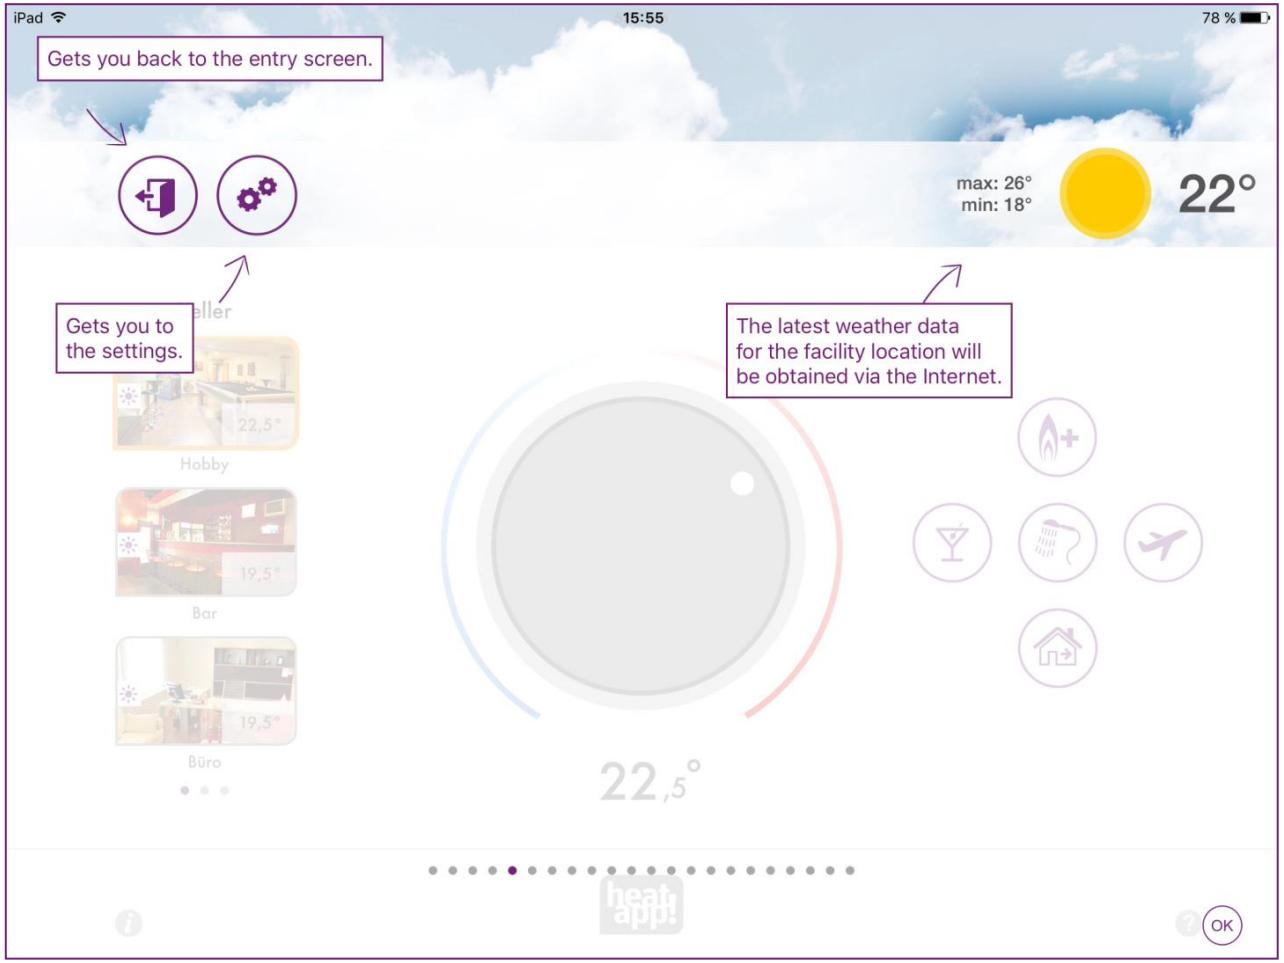

heatapp! profil and design

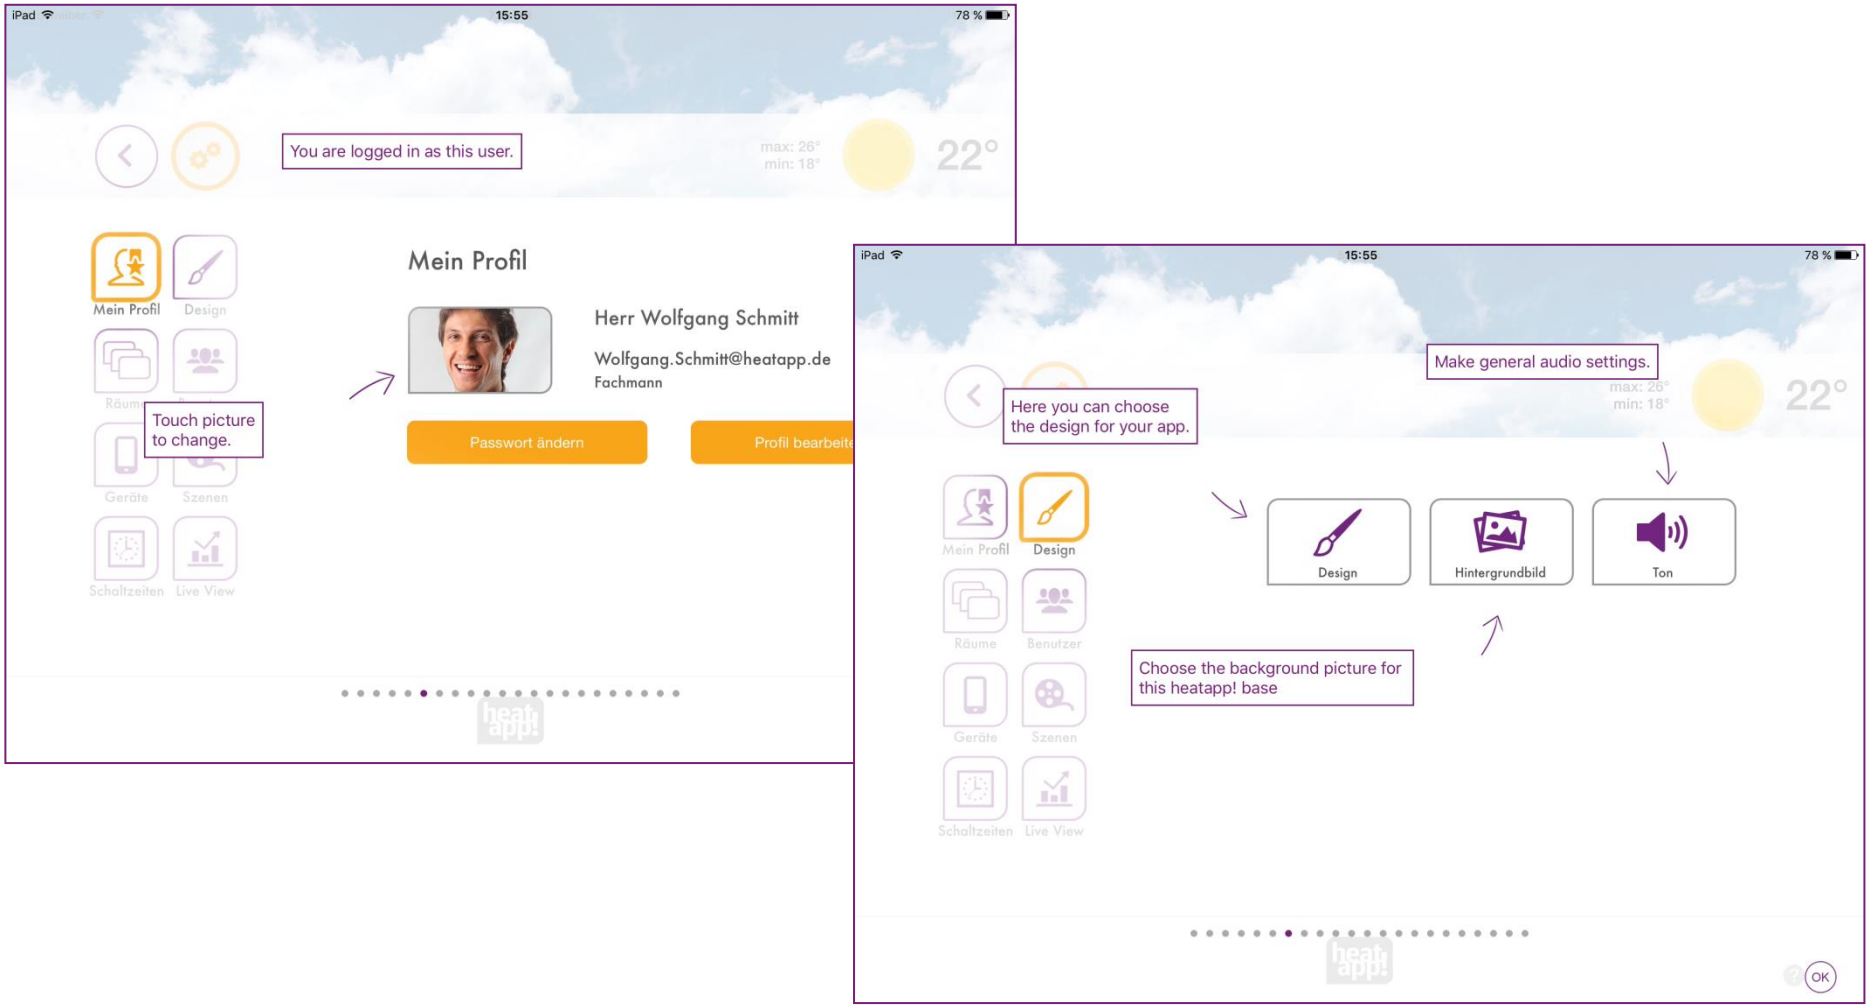

heatapp! room settings

heatapp! room settings

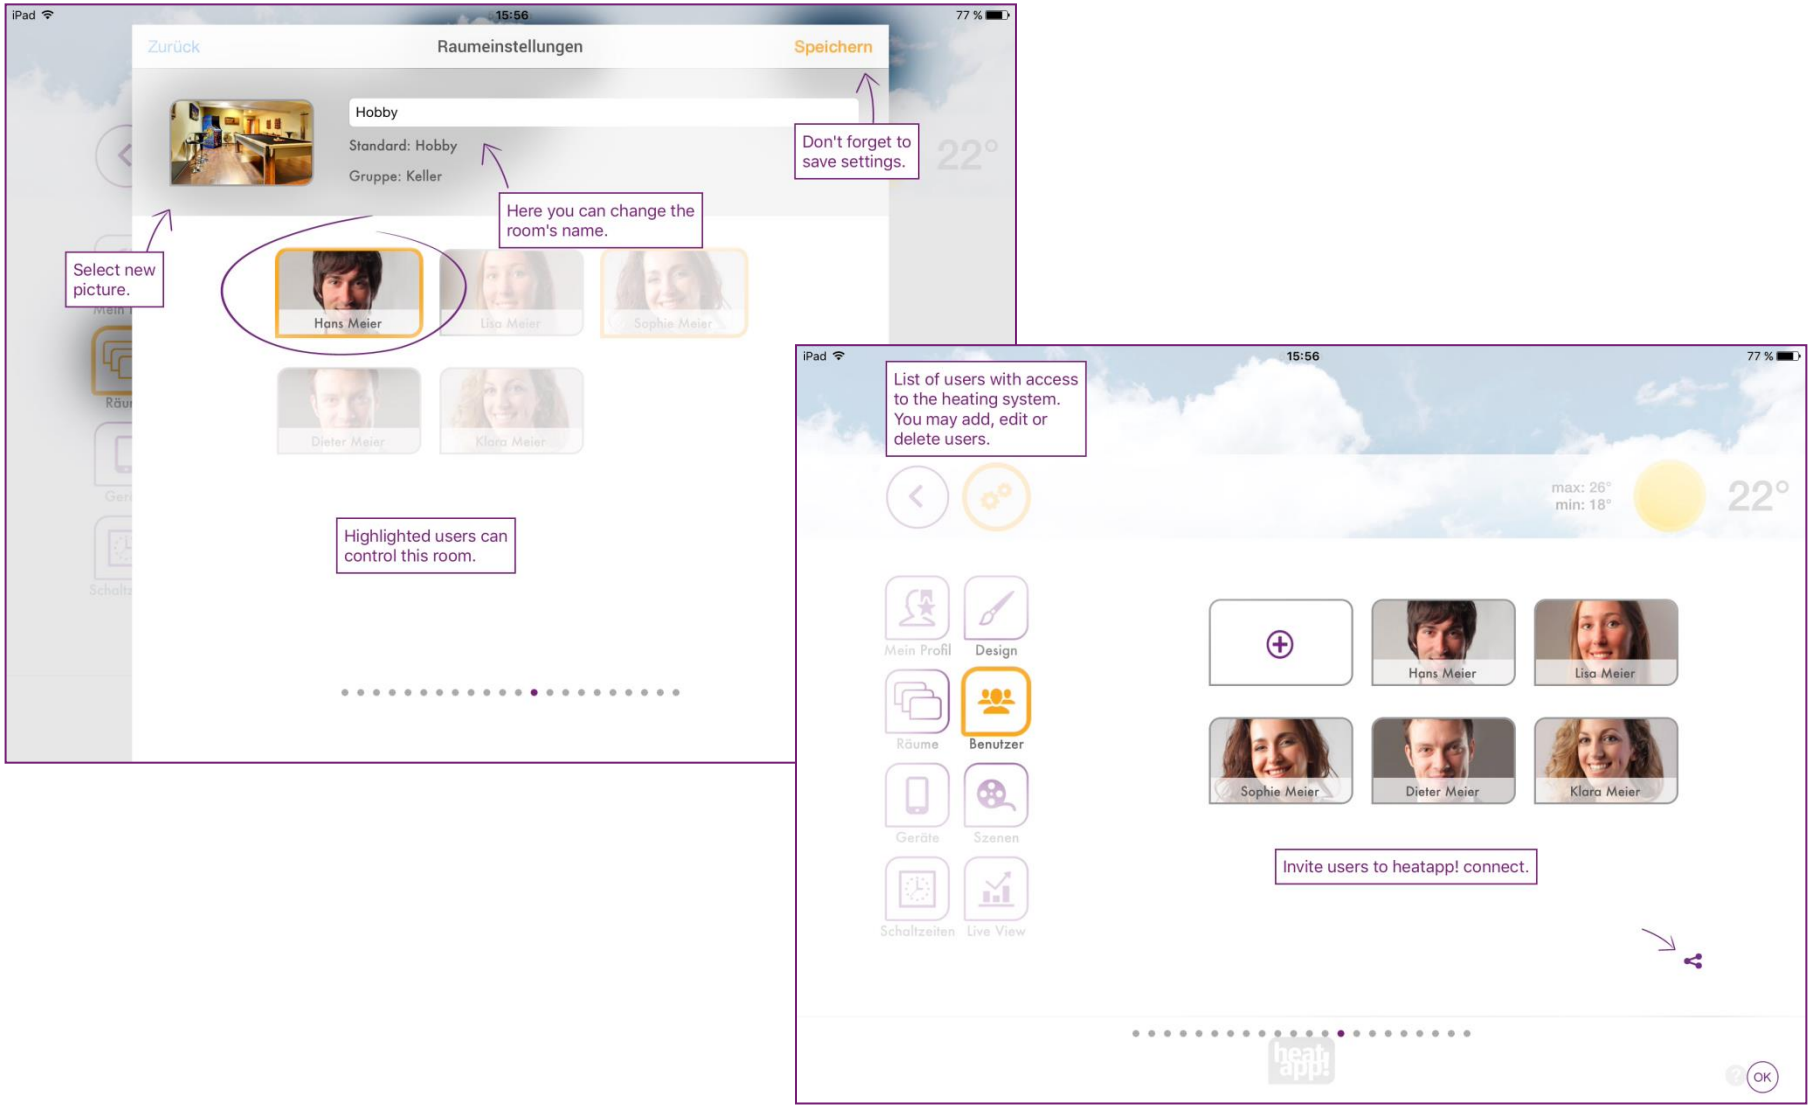

heatapp! user and devices

heatapp! scenes

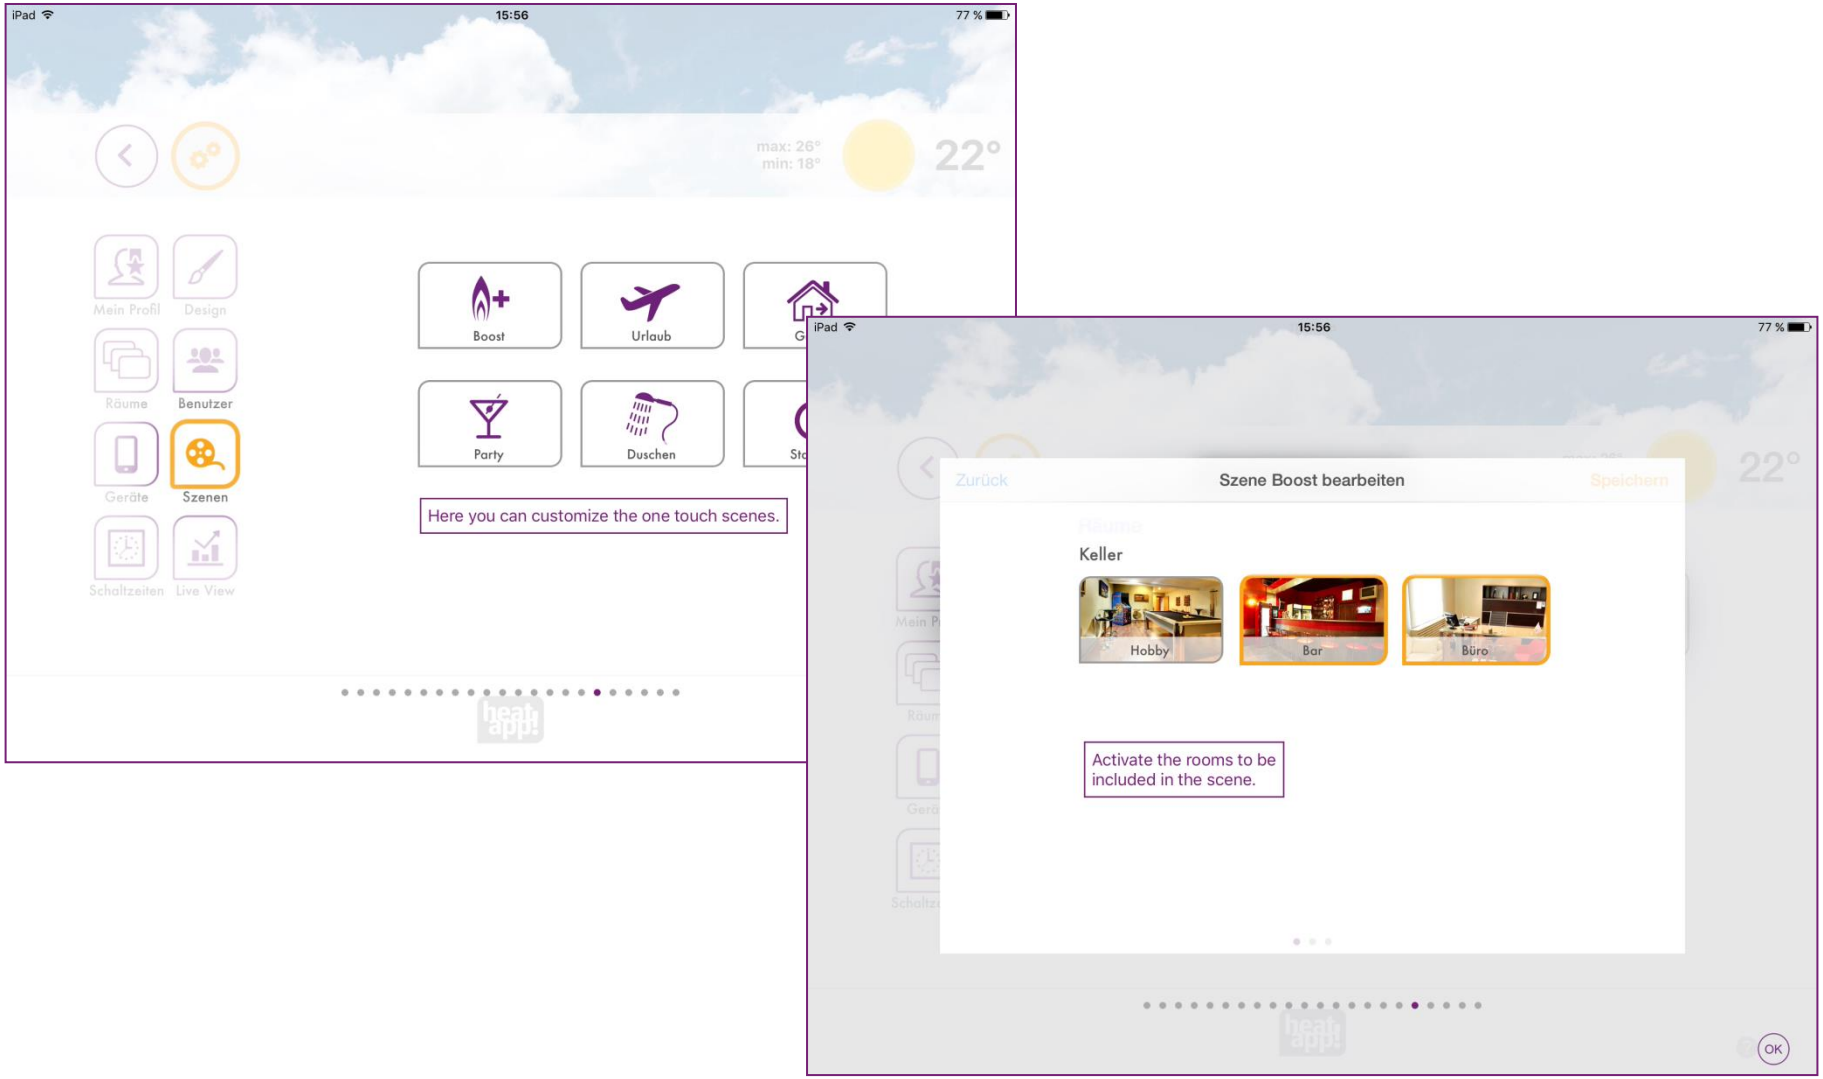

heatapp! switching times

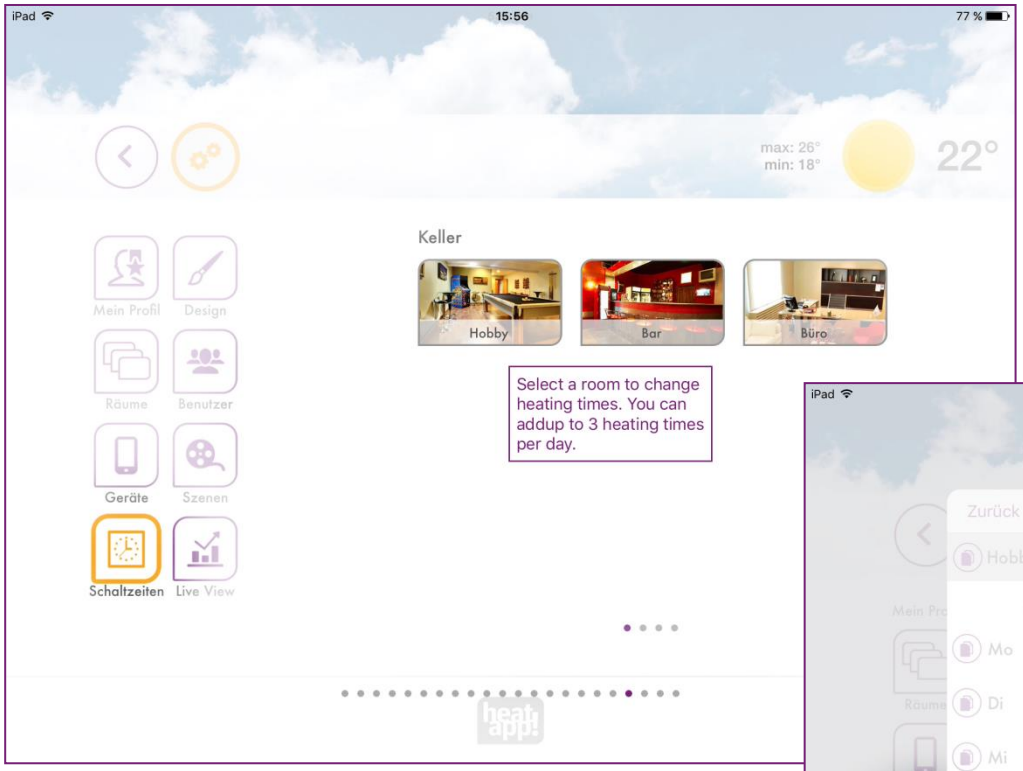

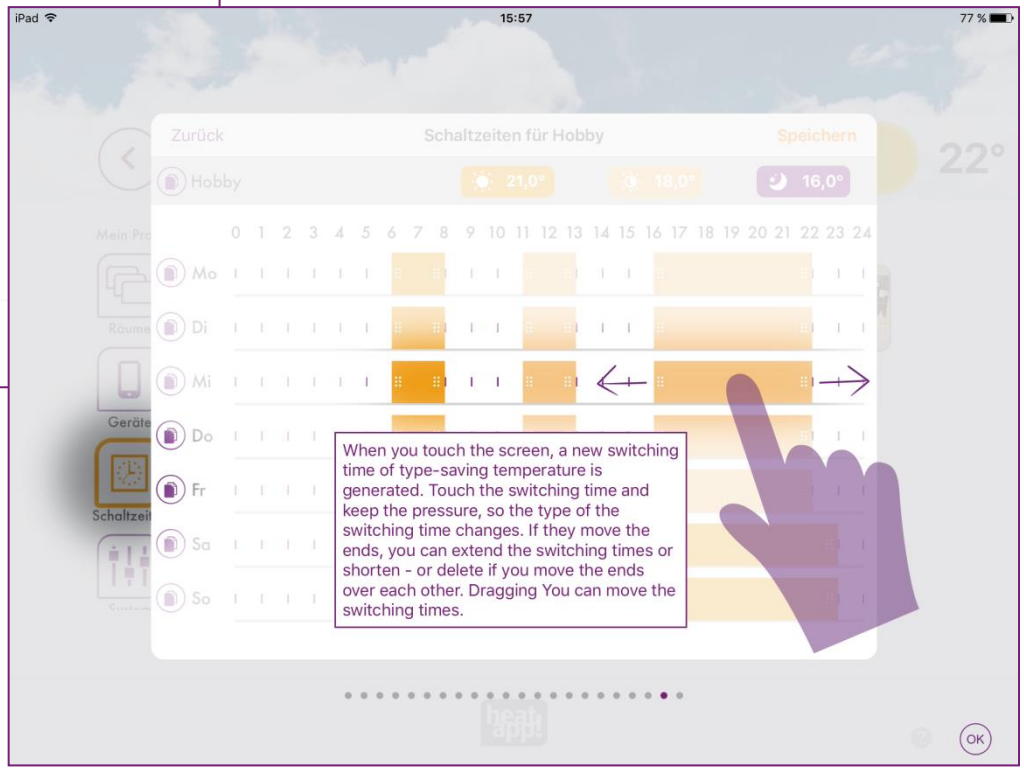

heatapp! Live View

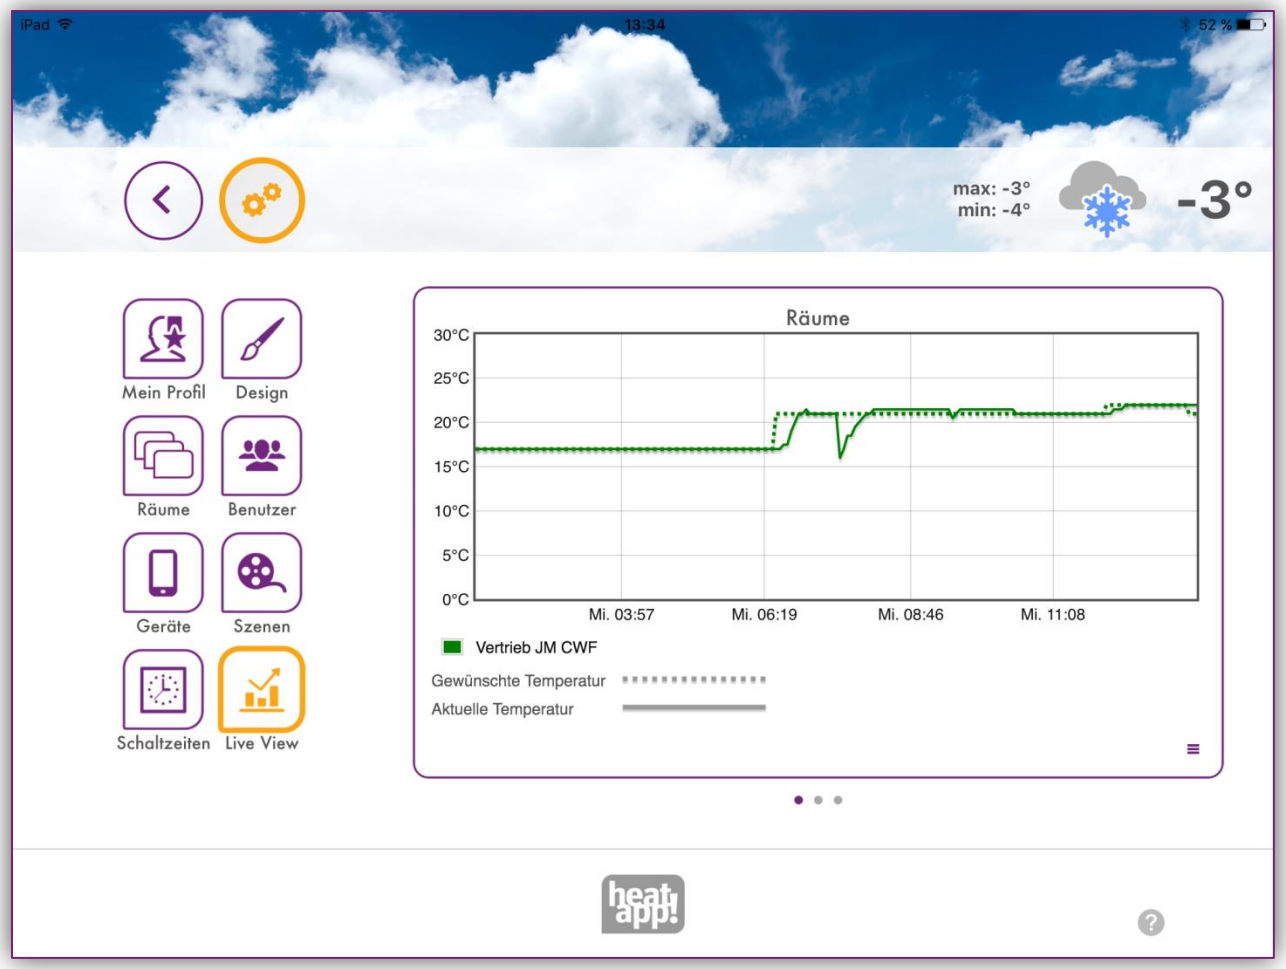

„Live View" represents the time sequences of your desired and the current temperature in the selected rooms.

maximal five rooms for simultaneously showing

heatapp! App

App Features

- change the **comfort temperature** of rooms
- name the rooms and add photos
- configure **switching times** for every room
- functions like „holiday“, „party“ „boost“ and „leave“ immediately available
- regulation of **hot water** (by connection to the heat source)
- **Manage users** and define rights
- current weather data
- **Live View** with current system information

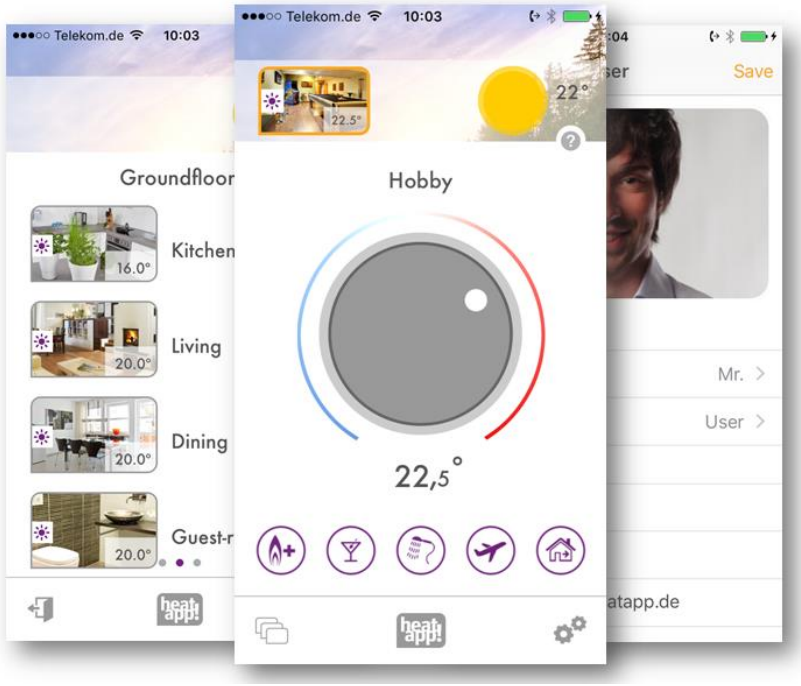

Menu „System“

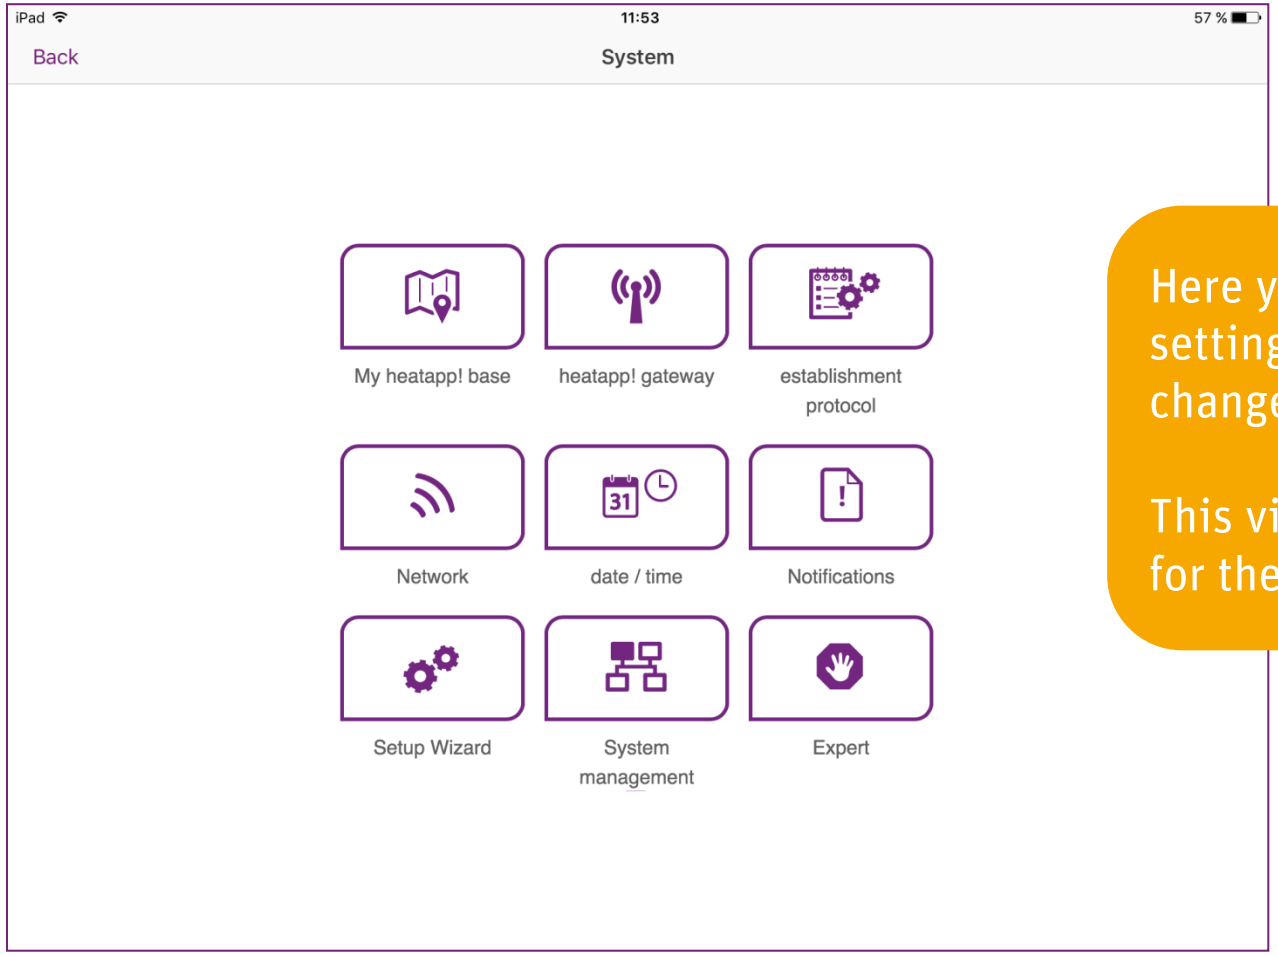

Here you can check all settings of heatapp! base or change some parameters.

This view is available only for the expert and the owner.

Menu „Gateway“

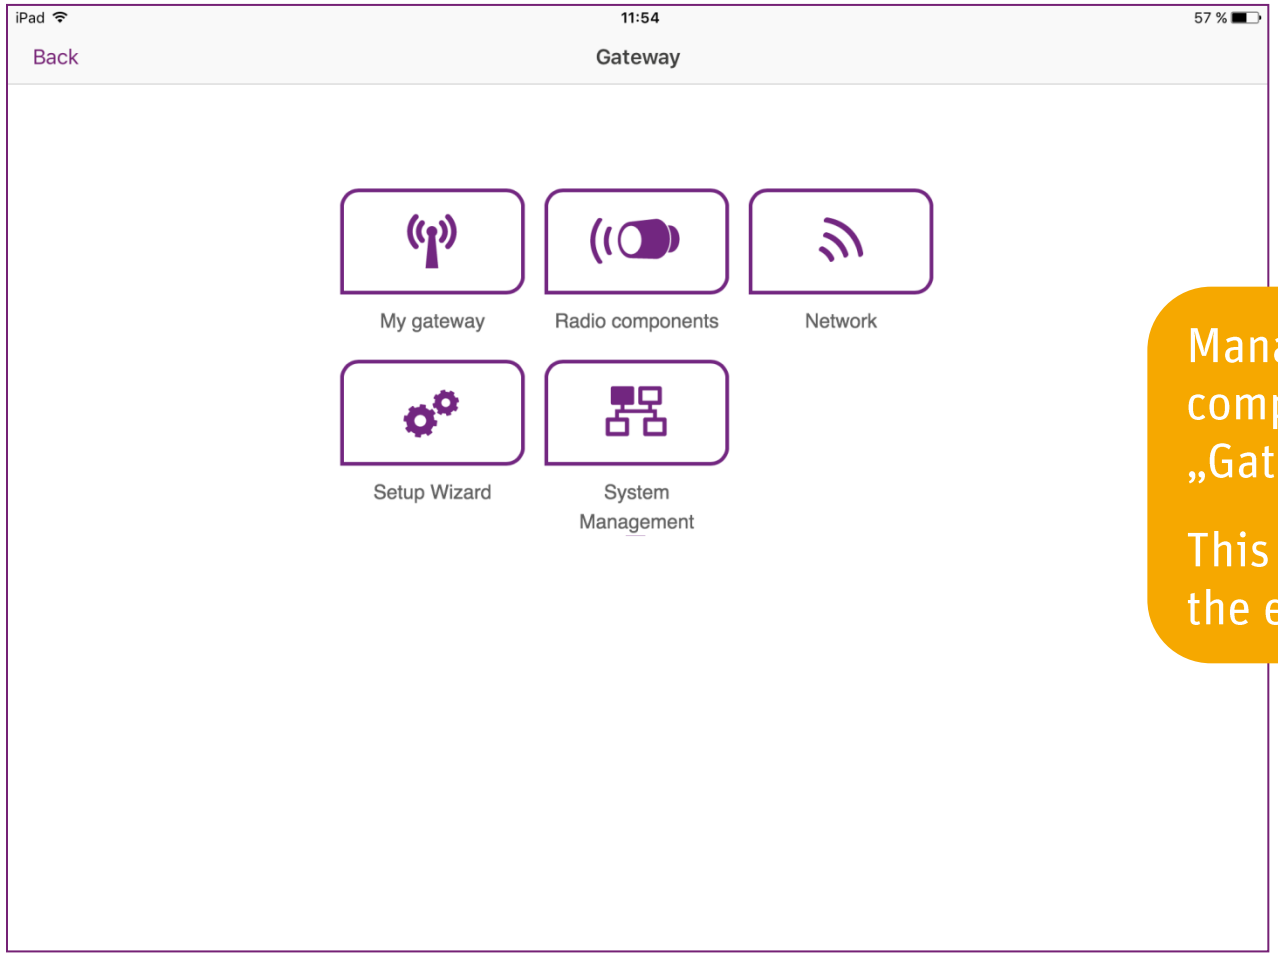

Manage and check the radio components in this menu „Gateway“.

This view is available only for the expert and the owner.

© EbV Elektronikbau- und Vertriebs-GmbH